



On all cathode output tubes, disconnect grounded cathodes. With power-section pointed away from you, add an 22 ohm, 5 watt resistor to the right three tubes. To the left three tubes, add an 68 ohm, 5 watt resistor (wirewound). There are two variable resistors on the tone terminal board. One is connected to the sensitivity switch on the back. The other should be adjusted to full gain; that is, with the pre-amp section towards you, move the pot nearest you clockwise fully.

SOUND CITY AMPLIFIER TYPE LB120 MARK IV

This also can be done with the L200