


**TO SERVICE :**

1. REMOVE KNOBS, JACK NUTS AND FACEPLATE
2. REPLACE INPUT AND LINE-OUT JACK NUTS TO RESTORE GROUND BEFORE TESTING
3. CROSSOVER BIAS, COLD, SHOULD BE SET FOR JUST VISIBLE AT 95-100 VAC (USE VARIAC)
4. ALL DIODES IN 1001 ETC., EXCEPT IN4148 BMS DIODES

NOTE : MAIN FILTER CAPS ALSO CARRY SPEAKER SIGNAL. DO NOT GROUND CIRCUIT. THIS ALLOWS OUTPUT TRANSISTORS TO OPERATE GROUNDED-COLLECTOR. DO NOT INSULATE FROM CHASSIS.

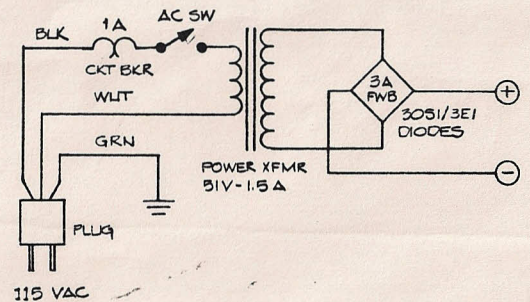

SCALE: NONE	APPROVED BY:	DRAWN BY: M. BOTCH
DATE: 11-3-79		REVISED: 11-3-79
<b>SCHEMATIC, MODEL 30/60</b>		
PIGNOSE INDUSTRIES		DRAWING NUMBER