



FOOTSWITCH OPERATION:

- TP31 (REF. PIN, CHANNEL SELECT):
 - +1.35V NORMAL MODE ("YELLOW").
 - +1.08V DRIVE MODE ("YELLOW").
 - +1.08V MORE DRIVE MODE ("RED").
- TP32 (INPUT PIN, CHANNEL SELECT):
 - +5.23V WITH CHANNEL SELECT OFF.
 - +2.54V WITH CHANNEL SELECT ON.
- WITH FRONT PANEL SWITCHES--
 - +5.36V WITH CH. SEL. OUT.
 - +9.69V WITH CH. SEL. IN.
- TP33 (OUTPUT PIN, CHANNEL SELECT):
 - +16V NORMAL MODE ("YELLOW").
 - 13.0V DRIVE MODE ("RED").
 - 13.5V MORE DRIVE MODE ("RED").
- TP34 (REF. PIN, DRIVE/MORE DRIVE):
 - 12.5V NORMAL MODE ("YELLOW").
 - 4.90V DRIVE MODE ("YELLOW").
 - 4.14V MORE DRIVE MODE ("RED").
- TP35 (INPUT PIN, DRIVE/MORE DRIVE):
 - WITH FOOTSWITCH--
 - 3.34V WITH DRIVE SELECTED ("YELLOW").
 - 6.52V WITH MORE DRIVE SELECTED ("RED").
 - WITH FRONT PANEL SWITCHES--
 - 5.2V WITH MORE DRIVE OUT.
 - 9.92V WITH MORE DRIVE IN.
- TP36 (OUTPUT PIN, DRIVE/MORE DRIVE):
 - 15.5 NORMAL MODE ("YELLOW").
 - 15.4 DRIVE MODE ("YELLOW").
 - +16V MORE DRIVE MODE ("RED").

NOTE:
THE FOOTSWITCH OVERRIDES THE FRONT PANEL SWITCHES.

EXPORT TRANSFORMER WIRING DIAGRAM.

100V	230V	240V
50/50Hz	50/50Hz	50/60Hz
CP3	CP3	CP3
CP5	CP5	CP5
CP7	CP7	CP7
CP6	CP8	CP8
CP4	CP9	CP9
CP9	CP4	CP10
CP8	CP10	CP4

