


# FENDER PRINCETON REVERB AMPLIFIER

## PARTS LIST

013341	7025/12AX7A Tube	021527	Fuseholder
023531	12AT7 Tube	043760	Fuseholder Rubber Washer
023564	6V6GT Tube	016469	Fuseholder Lock Washer
030031	5U4GB Tube	031666	Fuseholder Nut
		021667	1 Amp Fuse
022772	Power Transformer	020881	Rectifier (Diode) 1 Amp
022913	Output Transformer	021576	AC Socket
022921	Reverb Driver Transformer	010766	Power Cord
023010	10" Speaker	025718	Pilot Light Jewel
		021741	Pilot Light Holder
068270	Phone Jack (Closed)	021642	Pilot Light Bulb
021824	Phono JACK (Rev/Ft Switch)	010823	Pilot Light Dress Washer
024000	Phono Plug (Rev/Ft Switch)	032219	Pilot Light Collar
014031	Volume Control 999K PP	031625	Pilot Light Collar Nut
021857	Bass/Treble Control (250K)	022665	Footswitch Cover
021865	Speed Control (3 Meg)	024638	Footswitch Cover Cup
021873	Reverb Control (100K)	014630	Front Control Plate
021956	Phone Jack (Open)	023473	Back Control Plate
024042	Push Button Ft Switch	024604	Knob
010023	Ground Switch	025866	Tube Retainer Ring
033043	Intensity Control (250K)	023580	8 Pin Tube Socket
037960	On-Off-Standby Switch (SP-ST)	023606	9 Pin Tube Socket
		023598	Tube Shield
021170	100 Ohm 1/2 Watt	016352	Hex Nut, Controls/Jacks
021162	47 Ohm 1/2 Watt	016436	Lock Washer, Controls/Jacks
021204	1K Ohm 1/2 Watt	022012	Hex Nut, Switches
021212	1.5K Ohm 1/2 Watt	021725	Fuse Cap
021238	2.7K Ohm 1/2 Watt	064063	Reverb Pan
021246	3.3K Ohm 1/2 Watt	071415	Reverb Output Transducer
021253	6.8K Ohm 1/2 Watt	071423	Reverb Input Transducer
021295	22K Ohm 1/2 Watt	031930	Reverb Cord Assembly (27")
021188	470K Ohm 1/2 Watt	033282	Reverb Cord Assy (36")
021329	56K Ohm 1/2 Watt	027730	Front Grill, w/Cloth
021337	68K Ohm 1/2 Watt	024026	Reverb Suspension Spring (Short)
021345	100K Ohm 1/2 Watt	024034	Reverb Suspension Spring (Long)
021352	470K Ohm 1/2 Watt		
021360	1 Meg Ohm 1/2 Watt	053280	Cabinet, w/Hardware
011252	1.5 Meg Ohm 1/2 Watt	027730	Front Grill Panel, w/Cloth
021493	220K Ohm 1/2 Watt	037762	Lower Rear Panel
021410	4.7K Ohm 1 Watt	037747	Upper Rear Panel
021519	1K Ohm 1 Watt	011231	Rear Panel Screw
008167	100K Ohm 1 Watt	025163	Black-Vinyl Covering (Req. 1 Yd)
		025403	Amp Handle
012754	.047 Mfd x 600V	025395	Handle Cap
004059	.01 Mfd x 1KV	022244	Handle Screw
020842	.0005 Mfd x 1KV	021972	Handle Tee Nut
020875	.003 Mfd x 1KV	007565	Power Cord Clamp
010542	.0047 MF x 600V	022137	Power Cord Clamp Screw
020917	.00025 Mfd x 1KV	022418	Glide Assembly
008159	.1 Mfd x 600V	024745	Chassis Strap
004513	.022 Mfd x 600V	022236	Chassis Strap Screw
009512	25 Mfd x 25V	022004	Chassis Strap Nut
001972	.047 Mfd x 600V	008142	Grill Cloth - Silver/Blue
012754	.047 Mfd x 600V		
004026	22 PF x 1000V		
021097	4/20 Mfd x 450V	014077	Power Transformer

Export Model Only

\*Resistor 10% unless otherwise specified

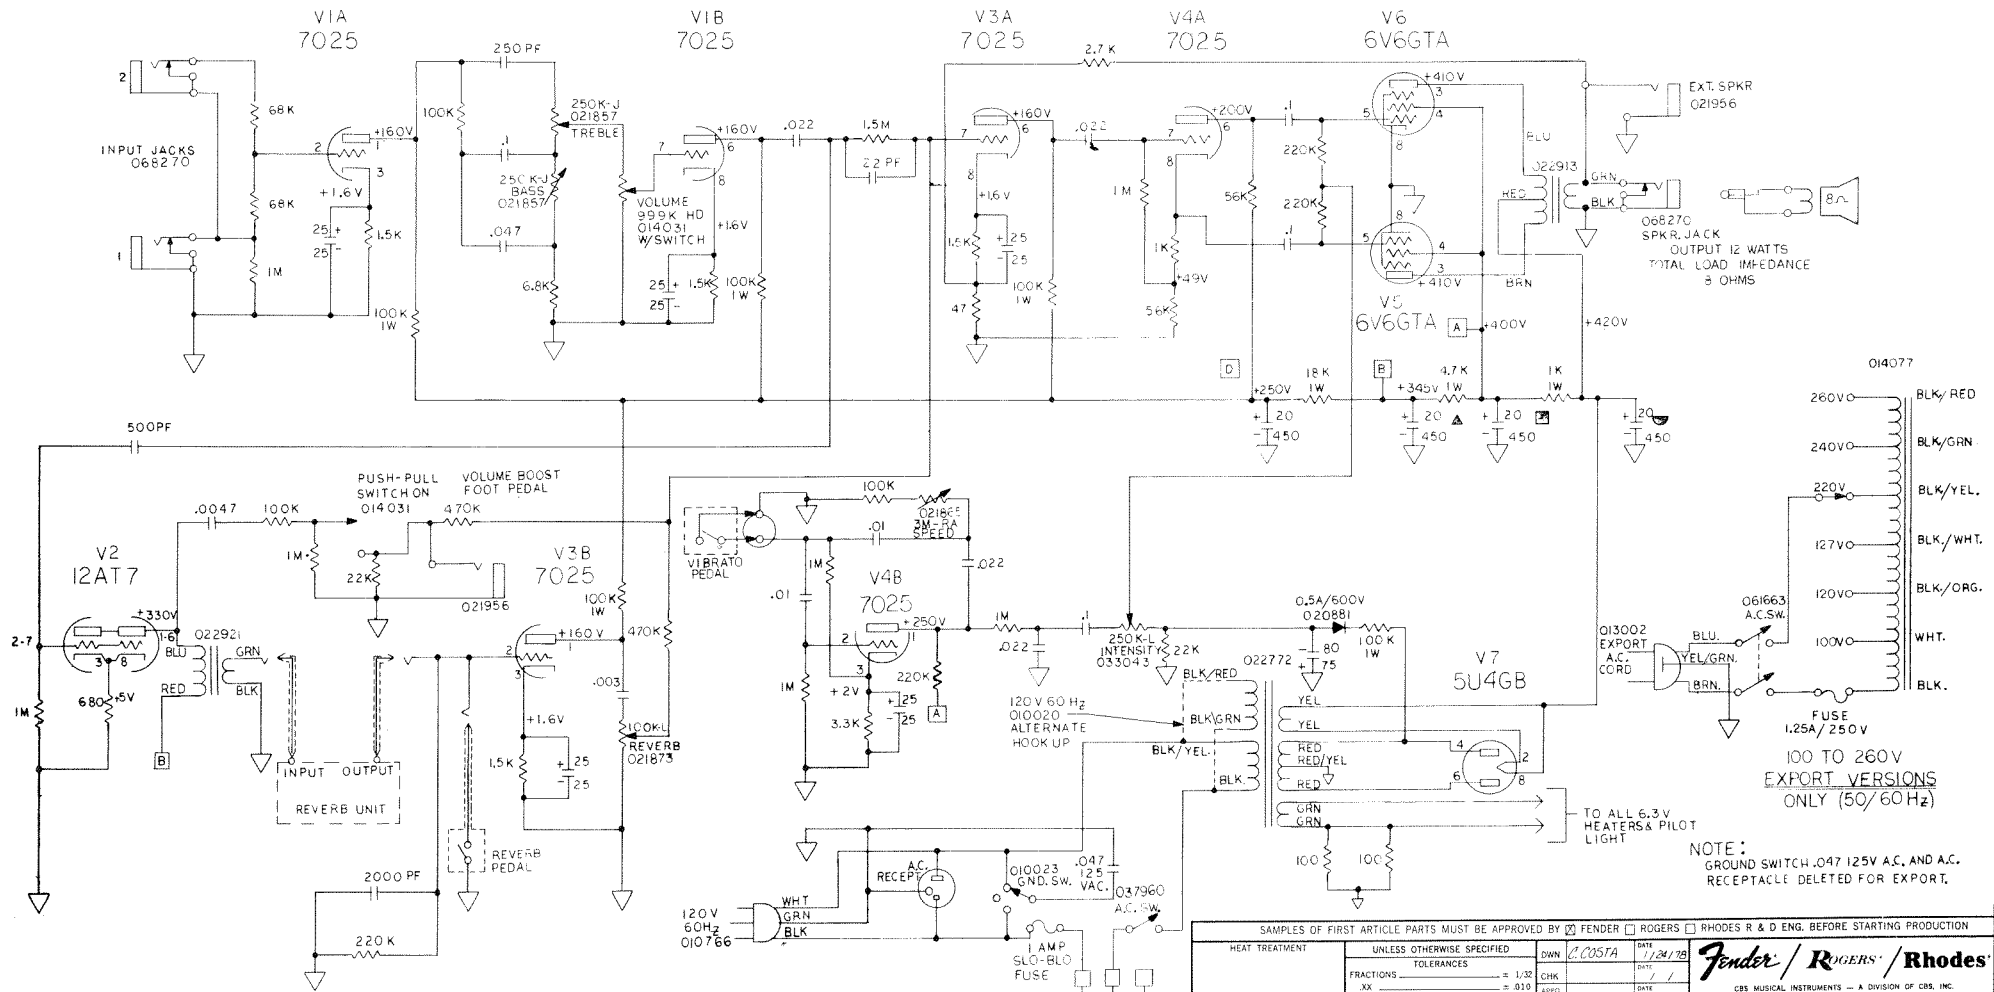

3 USED IN SOME VERSIONS.  
 2. ALL CAPACITORS 600V MIN.  
 1. ALL RESISTORS 1/2 WATT ± 10%.

NOTES: UNLESS OTHERWISE SPECIFIED

NOTE:  
 GROUND SWITCH .047 125V A.C. AND A.C.  
 RECEPTACLE DELETED FOR EXPORT.

SAMPLES OF FIRST ARTICLE PARTS MUST BE APPROVED BY <input checked="" type="checkbox"/> FENDER <input type="checkbox"/> ROGERS <input type="checkbox"/> RHODES R & D ENG. BEFORE STARTING PRODUCTION			
HEAT TREATMENT	UNLESS OTHERWISE SPECIFIED	DWN	C. COSTA
ROCKWELL	FRACTIONS = 1/32	CHK	DATE 7/24/78
	TOLERANCES = .010	APP'D	DATE 7/24/78
	ANGLES = 1/2°	M.E.	
	FRACTIONS - WOOD = 1/16	APPROVED	
	HOLES - CORED = .005 - .000		
	BEND ANGLES = 1°		
	HOLES - DRILLED & PIERCED... = .003 - .001		
	DRAFT - ANGLES = MAX.		
	STRAIGHTNESS =		
	UNMARKED ANGLES ARE 90°		
	ALL DIMENSIONS ARE IN INCHES		
	DO NOT SCALE DRAWING		
NEXT ASSY NO.	USED ON	FINISH - TO CBS SPEC.	
		<b>Fender / Rogers / Rhodes</b> CBS MUSICAL INSTRUMENTS - A DIVISION OF CBS, INC. FULLERTON, CALIFORNIA 92831	
		PART NAME <b>SCHEMATIC, DOMESTIC AND EXPORT          PRINCETON REVERB AMP          W/BOOST PEDAL</b>	
RELEASE E.C.O. 7537	SCALE NONE	SHEET D	PART NO. 014875
			REV -