
Shorted Winding Tester

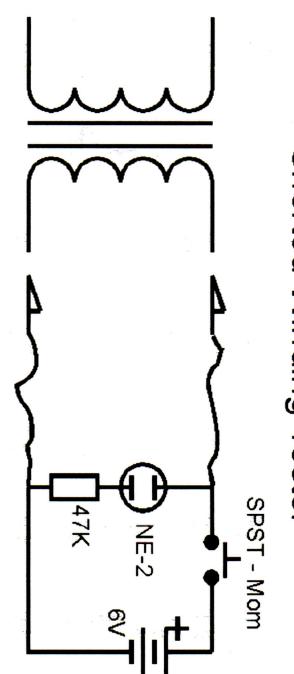

Works ONLY if all windings are open circuit - no external load. Connect Clips to winding, then press button. If there is no short, known good one to calibrate your eye. See the flash a couple of times then short the winding you're not connected to and try it. You should see flashes on no short, no flashes with theshort neon bulb will either not light or light very dimly. Try it on a the neon bulb will flash brightly. If there is a shorted turn, the Contributed by Wayne Horner from an article in Pop 'Tronics

l von l