

AD60VT/AD120VT

How to start and operate the test mode

1) AD60VT:

REV CH1:	FULL TEST
REV CH1 DWN:	FULL TEST (LEVEL, TUNER, FC I/F SKIP)
REV CH1 UP:	EXTERNAL TEST ONLY

2) AD120VT:

REV CH2:	FULL TEST
REV CH1 DWN:	FULL TEST (LEVEL, TUNER, FC I/F SKIP)
REV CH2 UP:	EXTERNAL TEST ONLY
BYP CH4:	AUDIO TEST (A/D, D/A, THRU)

Operations during the test mode:

*Internal test

CH1+CH3:	RE-CHECKING OF THE STEPS IN ERROR
CH1+CH4:	ERROR SKIP
CH1+DWN:	RE-CHECKING THE N.G. ITEMS
CH1+UP:	SKIP THE N.G. ITEMS AND PROCEED TO THE NEXT ITEM.

*External test:

CH4:	STEP UP
CH3:	RE-CHECKING THE STEPS IN ERROR
UP:	ITEM UP

*Conditions when starting the test mode: