Fender



(This is the model name for warranty claims)

p/n 2262000000 (COMBO 120V) p/n 2263000000 (HEAD 120V)

SERVICE MANUAL



ATTENTION:

WARRANTY SERVICE PROCEDURES

The Bassbreaker 007 Amplifier is considered to be field serviceable to the component level. As such stuffed PCB Assemblies are not readily available for this unit. Any Fender Authorized Service Center in need of a warranty replacement PCB Assembly for this unit should contact FMIC Tech Support and you will be instructed on how to proceed.

Fender

(This is the model name for warranty claims)

IMPORTANT NOTICE

 Copyright © 2015 FMIC. All rights reserved. All information contained herein is CONFIDENTIAL and PROPRIETARY and is the property of Fender Musical Instruments Corporation. It is not to be sold or assigned to another party and is disclosed solely for use by Fender® Authorized Service Centers for purposes of product service and maintenance. All information is not to be disclosed to others without the expressed permission of Fender Musical Instruments Corporation. All specifications are subject to change without notice. This information and any copies produced electronically or otherwise must be surrendered upon demand of Fender Musical Instruments Corporation.

 Parts marked with the "A" symbol indicate the required use of that specific part. This is necessary for RELIABILITY and SAFETY requirements.
 <u>DO NOT USE A SUBSTITUTE!</u>

PARTS LIST CODES

The description codes used in the itemized Parts Lists are defined below:

CAPACITOR CODES

CAP AE	=	Aluminum Electrolytic	
CAP CA	=	Ceramic Axial	
CAP CD	=	Ceramic Disk	
CAP CR	=	Ceramic Radial	
CAP MPF	=	Metalized Polyester Film	
CAP MY	=	Mylar	
CAP PFF	=	Polyester Film/Foil	
RESISTOR CODES			
RES CC	=	Carbon Comp	
RES CF	=	Carbon Film	

RES FP = Flame Proof RES MF = Metal Film RES MOX = Metal Oxide

RES WW = Wire Wound

HARDWARE CODES

BLX	=	Black Oxide
CR	=	Chrome Plated
HWH	=	Hex Washer Head
М	=	Machine Screw
NI	=	Nickel Plated
OHP	=	Oval Head Phillips
PB	=	Particle Board
PHP	=	Pan Head Phillips
PHPS	=	Pan Head Phillips Sems
SMA	=	Sheet Metal "A" Point
SMB	=	Sheet Metal "B" Point
SS	=	Stainless Steel
TF	=	Thread Forming
ZI	=	Zinc Plated

Fender

(This is the model name for warranty claims)

SPECIFICATIONS

Model Name:		BASSBREAKER 007 Combo BASSBREAKER 007 Head
Release Number:		PR 3032
(Not a model number)		
Part Numbers	(120V, 60Hz) US:	2262000000
COMBOS:	(110V, 60Hz) TW:	2262001000
	(240V, 50Hz) AUS:	2262003000
	(230V, 50Hz) UK:	2262004000
	(230V, 50Hz) ARG:	2262005000
	(230V, 50Hz) EUR:	2160506000
	(100V, 50Hz) JPN:	2262007000
	(220V, 60Hz) ROK:	2262009000
Part Numbers	(120V, 60Hz) US:	226300000
HEADS:	(110V, 60Hz) TW:	2263001000
	(240V, 50Hz) AUS:	2263003000
	(230V, 50Hz) UK:	2263004000
	(230V, 50Hz) ARG:	2263005000
	(230V, 50Hz) EUR:	2163506000
	(100V, 50Hz) JPN:	2263007000
	(220V, 60Hz) ROK:	2263009000
Power Requirement:		55W
Power Output:		7W RMS into 8 ohms @ 25 %THD
Impedances	Input :	1 Meg Ohms
	Line Out:	100 ohms
Dimensions (Combo)	Height:	15.81 in (40.02 cm)
	Width:	14.75 in (37.5 cm)
	Depth:	8.5 in (21.6 cm)
	Weight:	25.5 lbs (11.5 kg)



(This is the model name for warranty claims)

Dimensions (Head)

 Height:
 15.81 in (40.02 cm)

 Width:
 8.94 in (37.5 cm)

 Depth:
 8 in (20.3 cm)

Weight: 16.6 lbs (8 kg)

Product specifications are subject to change without notice

Fender

BASSBREAKER[™] 007

(This is the model name for warranty claims)

SERVICE NOTES

As modern day amplifiers are more compact and sophisticated proper wire dress becomes a critical issue, both for the sake of Safety and FCC Certification. It is highly recommended that before disassembly you take digital photos to use as a reference during reassembly, for wire and component dress. Factory set locations for wire dress, wire ties, ferrites, and anchors should be maintained at all times. Use the following procedures to disassemble the Bassbreaker 007 for service access.

CHASSIS REMOVAL is accomplished by first removing the five (5) screws from the rear upper screen. Next remove the five (5) screws which secure the rear lower panel to the cabinet. Unplug the speaker cable from the speaker output jack. Remove the two (2) side chassis screws (4 total) on the left and right side of the cabinet. Now supporting the chassis remove the two (2) top chassis screws and remove the chassis from the cabinet. Access to the inside of the chassis can then be accomplished by removing the six (6) screws which secure the rear chassis cover and folding it back out of the way.

REAR PANEL I/O PCB ASSEMBLY REMOVAL is accomplished by first unplugging the three (3) Fast on spaded lug connectors at designation #P32-P34 from the I/O PCB Assembly. Next unplug the three (3) multi-wire connectors at designation #P1-P3 on the I/O PCB Assembly. Remove the three Jack Nuts and Washers from the rear panel and separate the PCB from the Rear Panel.

TOP PANEL CONTROL PCB ASSEMBLY RE-MOVAL begins by unplugging the multi-pin connectors P26-P31 located across the back of the PCB. Note: All of the 2-pin connectors on this PCB are the same type so if removal of all the cables at the same time is required you should mark them to identify their location during reassembly. Clip the four (4) wire ties holding these wires to the anchor holes in the PCB. Remove the five (5) top panel control nuts and washers and the input jack nut and washer to separate the PCB from the Top Panel. It may not be necessary to completely remove the PCB for simple repairs such as replacing the Input Jack or the Potentiometers. By removing the five (5) top panel control nuts and washers and the one (1) input jack nut and washer the PCB can be separated from the chassis. It can now be tilted in such a way to give sufficient access for component replacement.

TUBE PCB ASSEMBLY REMOVAL starts by removing the tubes and the eleven (11) screws which hold the PCB to the bottom side of the chassis. At this point by pulling up on the PCB and tilting it forward you should have enough access to replace most of the components located on the board. If it becomes necessary to remove the PCB it is best done by also removing the Power Supply PCB Assembly at the same time. This is due to the fact that the boards are hardwired together. The procedure for removing the Power Supply PCB Assembly follows below. Again it is a very good idea to take a few digital photos before disassembly to make sure original factory wire dress is maintained.

POWER SUPPLY PCB ASSEMBLY REMOVAL as stated above must be accomplished by first removing the Top Panel Control PCB Assembly. You will now need to free the Tube PCB Assembly from the chassis following the directions above. Unplug all the transformer lead fast on spaded lugs from the Tube PCB and the Power Supply PCB noting their position for reassembly. Remove the eight (8) screws which secure the Power Supply PCB to the chassis front. You can now remove both PCB Assemblies together to gain service access.

Fender

BASSBREAKER[™] 007

(This is the model name for warranty claims)

PCB EXCHANGE POLICY

Parts marked with a single asterisk (*) in the Part Lists are not field replaceable. If a failure due to one of these components is detected, please contact the FMIC Customer Service Department to order the complete PCB Assembly.

CIRCUIT DESCRIPTION

This section provides concise information about new or unusual circuit designs incorporated into this amplifier model. The purpose is to aid the service technician by providing insight into the design areas most likely to become obstacles in troubleshooting. Information is focused for its effective use while maintaining the security of Fender® proprietary information wherever possible.

PRE-AMPLIFIER

The guitar input signal is injected into INPUT jack J5 on the CONTROL PCB. Via a coax, this signal is fed to the TUBE PCB to a tube gain stage (V1-A). Note that plate & cathode resistors are non-typical values for Fender tube amps. Its cathode bypass cap C27 is switched in and out of the cathode circuit by JFET switch Q3. This switching provides part of the control for the TREBLE BOOST function that offers increased gain and an emphasis on the guitar's treble frequency range.

AC coupling cap C19 feeds the GAIN control via a coax. GAIN control R56 is on the CONTROL PCB. Its wiper feeds a coax to send the signal back to the TUBE PCB to the second tube gain stage (V1-B). Its cathode circuit (C22 & Q2) is apart of the TRE-BLE BOOST's gain switching function.

The signal flow continues on the TUBE PCB to the third tube gain stage (V2-A). AC coupling cap C18 feeds a coax to send the signal to the TRE-BLE/BASS/MID tone control circuit (R59, R57, R58 respectively) found on the CONTROL PCB.

The wiper of the VOLUME control (R60) is coupled through coax to the fourth gain stage (V2-B) on the

TUBE PCB. Its cathode circuitry is the POWER AMPLIFIER's feedback control loop network.

POWER AMPLIFIER

The Power Amplifier is a single-ended Class-A design using one EL84 (V3-A). Its cathode bias is set at approximately 40mA using the 5W power resistor R29. Screen grid bias is set through R16.

The plate drives a custom designed single-ended output transformer (T1 – FMIC # 7706163000) to provide an impedance match with the specified 8 Ohm speaker load. T1's primary is connected to the TUBE PCB and its secondary is connected to the REAR PANEL PCB.

For the COMBO version, the internal speaker is connected to T1's secondary thru terminals P35 & P36. The internal speaker is disconnected when the SPEAKER OUT jack (J3) is connected to an 8 Ohm speaker load.

For the HEAD version, the amplifier can only drive an 8 Ohm rated speaker through the SPEAKER OUT jack (J3).

Voltage divider R6 & R5 creates the signal reduction for the LINE OUT feature offered on the Bassbreaker 007 for interconnection to other guitar amps or sound reinforcement equipment. Use of the LINE OUT does not mute any speaker output capability. (NOTE: this feature does not work without a speaker installed on the head.)

tender

POWER SUPPLY

The Power Supply circuitry is found on the POWER SUPPLY PCB. Its circuitry is typical of a Fender tube amplifier. The secondary side of the Power Transformer consists of 3 windings: high-voltage winding, low-voltage winding and heater winding.

The high voltage secondary winding is used to generate the high voltage DC power supplies in the amplifier. The high voltage DC power supply is energized through a full-wave bridge rectifier configuration to filter cap C15. The "voltage-drop" resistors R11 thru R13, along with their associated filter capacitors C11-13, provide the DC plate or screen-grid voltages that are used to bias the tube stages in the design. These supplies are routed to the TUBE PCB circuitry through 18 AWG wiring.

The low voltage secondary winding feeds a fullwave bridge & filter configuration to create input DC voltages for regulators U1 & U2. These heat-sinked ICs generate the low voltage +/-16V DC power supply. A primary function of this circuitry is to provide DC filament drive to the V1 & V2 heaters. The DC bipolar filament voltages couple to the heaters through R9 & 10 on the POWER SUPPLY PCB. A cable connects this supply to the filament on the TUBE PCB. A cable also connects the low voltage supplies to the REAR PANEL PCB to power the control circuitry described later.

BASSBREAKER™ 007

(This is the model name for warranty claims)

The heater secondary winding produces a 6.8VAC power supply that energizes the EL-84 (V3) heater's filament only. This secondary is connected to terminals on the TUBE PCB.

The POWER INDICATOR LED is energized by the positive low voltage regulated supply on the POW-ER SUPPLY PCB. The LED is routed for insertion into the rear of the front panel jewel with power connections through its red & white wires.

FOOTSWITCH CONTROL

The FOOTSWITCH circuitry is found on the REAR PANEL PCB. This circuitry allows footswitch or front panel control of the TREBLE BOOST feature.

Note that with a footswitch inserted in J1, it defeats any control capability from the control panel's TRE-BLE BOOST switch. Transistor Q1 acts as the electronic switch for the TREBLE BOOST whether it is controlled by the control panel switch (S1) or the optional footswitch (7706424000) according to the logic described above.

One cable connects the REAR PANEL PCB to the CONTROL PANEL PCB to connect the control panel's TREBLE BOOST switch to the base of Q1. Another cable connects the REAR PANEL PCB to the TUBE PCB to provide the TREBLE BOOST control signal to the gates of the Q2 & Q3 switching circuits described in the PRE-AMPLIFIER section.



(This is the model name for warranty claims)

PARTS LIST: <u>PCB ASSEMBLY</u>			
QTY.	PART #	DESCRIPTION	REFERENCE DESIGNATION
2	0019993000	CAP AE AX 2200uF 35V 20%	C14 C16
3	0051720000	CAP AE AX 22uF 450V 20%	C11, C12, C13
2	0038693001	CAP AE AX 47uF 16V 20%	C22,C30
1	0051719000	CAP AE AX 47uF 450V 20%	C15
1	7708488000	▲CAP AE AX 47uF 50V 20% + 105C	C26
2	0028463003	CAP AE RDL 10uF 50V 20%	C8,C9
1	0028467003	CAP AE RDL 22uF 50V 20%	C31
1	0038703001	CAP CA .1uF 50V	C3
2	0051406003	CAP CD 220pF 500V 10%	C1, C2
1	0020867002	CAP CD 330pF 1000V 10%	C32
4	0025995000	CAP CD 8200pF 1000V 20%	C4,C5,C6,C10
1	0027262003	CAP MPF .0068uF 100V 10%	C34
1	0027264003	CAP MPF .01uF 100V 10%	C33
1	0027280003	CAP MPF .15uF 63V 10%	C27
1	0027279003	CAP MPF .1uF 100V 10%	C17
1	0053860000	▲CAP MPF .1uF 250VAC 20%	C7
2	0033477003	CAP MPF .68uF 63V 10%	C25.C28
1	0024823000	CAP MPF RDL .01uF 400V 10%	C24
1	0024845000	CAP MPF RDL .047uF 400V 10%	C35
1	0024833000	CAP MPF RDL .022Uf 400V 10%	C36
1	0024862000	CAP MPF RDL .22uF 400V 10%	C18
2	0026202002	CAP PFF .0022uF 400V 10%	C19,C21
1	0030926003		C29
1	7706518000		R58
1	0096458000		R57
2	0096459000	CTRL SNAPIN 250K 15A TAPER 180D SHAFT	R56, R60
1	0096460000	CTRL SNAPIN 250K 30A TAPER 180D SHAFT	R59
10	0026730001	▲DIODE 1N4006 800V 1A	D1-10
1	0057928000	▲DIODE ZEN 1N5363B 30V 5W 5%	D11
2	7708801000	▲FUSE 213 TYPE 22.5 X 5.8 TIME LAG 1A AXL	FUSE F2, F4
1	7708802000	▲FUSE 213 TYPE 22.5 X 5.8 TIME LAG 2A AXL	FUSE F3
10	0072493000	HDR 2.5mm CTR 2 CKT SQ PIN	P16-17, P20-21, P25, P27-31
6	0072495000	HDR 2.5mm CTR 3 CKT SQ PIN	P1-4, P24, P26
2	0091148000	HDR 2.5mm CTR 6 CKT SQ PIN	P11, P15
1	0013562000	▲IC REGULATOR +15V MC7815CT	U1
1	0013564000	▲IC REGULATOR -15V MC7915CT	U2
4	0063213000	JACK PCB STEREO CLOSED CKT	J1-3, J5
7	REF	WIRE JUMPER	JMP1-4, (JMP-5-HEAD ONLY)
2	0026368001	RES CF 1/2W 5% 100ohm LL	R33, R40
3	0024967001	RES CF 1/4W 5% 1.2k LL	R25, R36, R43
5	0024997001	RES CF 1/4W 5% 100k LL	R26, R28, R44, R49, R55
1	0024952001	RES CF 1/4W 5% 100ohm LL	R5
2	0025084001	RES CF 1/4W 5% 10M LL	R27, R38
2	0024981001	RES CF 1/4W 5% 10k LL	R23, R39
2	0024985001	RES CF 1/4W 5% 15k LL	R2, R34
4	0025069001	RES CF 1/4W 5% 1M LL	R1, R17, R37, R50

* Non-serviceable part. Replace complete parent assembly. See PCB EXCHANGE POLICY section above.

shaded Unique Fender® part. Order directly from the FMIC Parts Department.

shaded + * Access to this part or assembly is controlled. Please contact the FMIC Customer Service Department.

A Safety Critical Part. Replacement must match Safety Agency – Value, if specified – Type, if specified – Approval Mark(s), if on part.

shaded + \triangle Both a unique Fender® part and a Safety Critical Part as defined above.



(This is the model name for warranty claims)

PAR	TS LIST:	PCB ASSEMBLY	
QTY.	PART #	DESCRIPTION	REFERENCE DESIGNATION
1	0024965001	RES CF 1/4W 5% 1k LL	R51
1	0025075001	RES CF 1/4W 5% 2.2M LL	R22
1	0024971001	RES CF 1/4W 5% 2.2k LL	R4
3	0025059001	RES CF 1/4W 5% 220k LL	R18, R41, R53
1	0025060001	RES CF 1/4W 5% 270k LL	R54
1	0024973001	RES CF 1/4W 5% 3.3k LL	R45
1	0024977001	RES CF 1/4W 5% 4.7k LL	R6
1	0025065001	RES CF 1/4W 5% 470k LL	R35
2	0024993001	RES CF 1/4W 5% 47k LL	R3, R48
4	0024947001	RES CF 1/4W 5% 47ohm LL	R42, R46-47, R52
1	0024995001	RES CF 1/4W 5% 68k LL	R24
1	0024980001	RES CF 1/4W 5% 8.2k LL	R19
3	0027353001	RES FILM 1W 5% 100k LL	R14, R30, R32
1	7707015000	RES FILM 1W 5% 330k LL	R15
2	0036469001	⚠RES MOX FP 1W 5% 4.7k LL	R11-12
1	0037664001	▲RES MOX FP 1W 5% 1k LL	R13
2	0051417001	ARES MOX 2W 5% 22ohm LL	R9-10
1	0034705001	▲RES MOX 2W 5% 270ohm LL	R16
1	0028898000	▲RES WW BT 5W 5% 240ohm	R29
1	0028091000	SWITCH PUSH SLFLK SHORT STROKE	S4
2	0041465003	XSTR N-CH JFET J113 TO-92	Q2-3
1	0016742003	XSTR PNP 2N4403 TO-92	Q1
1	0027872001	RES CF 1/2W 5% 1.2k LL	R100
2	0050849000	▲HEATSINK PCB LEVEL 576012	AT U1 & U2
3	0029167000	TUBE SOCKET 9 PIN PCB MOUNT	AT V1, V2, V3
1	7706449000	LED TULIP PANEL MOUNT WHITE	
1	0028104000	BUTTON PUSH SWITCH BLACK	AT S4

PART	IS LIST:	CHASSIS ASSEMBLY	
QTY.	PART #	DESCRIPTION	REFERENCE DESIGNATION
2	-	▲TUBE 7025/12AX7A ECC83S GT-GOLD	
1	-	I ATUBE EL84-S SLOVAKIA	
1	0048827000	▲FUSE QA 1-1/4X1/4 250V 2A	F1 - DOMESTIC
1	0020789000	▲FUSE QA 20mm X 5mm 250V 1A	F1 220VAC-240VAC
1	7706160000	⚠XFMR PWR 7W EL84 SE 120V DOM	T2 DOMESTIC PWR XFMR
1	7706161000	⚠XFMR PWR 7W EL84 SE 230V/240V	T2 220VAC-240VAC ONLY PWR XFMR
1	7706162000	⚠XFMR PWR 7W EL84 SE 100V	T2 100VAC JPN ONLY PWR XFMR
1	7706163000	⚠XFMR OUTPUT 7W SE 8 OHMS	T1 OUTPUT XFMR
1	7706164000	*PCB ASSY BASSBREAKER 007	COMPLETE PCB ASSY 007 COMBO
1	7708154000	*PCB ASSY BASSBREAKER 007 HEAD	COMPLETE PCB ASSY 007 HEAD
5	7706965000	KNOB BASSBREAKER FLAT 780 DEG	
1	7706167000	*PANEL CHS REAR BASSBREAKER 007	
1	7707016000	*PANEL CHS REAR BASSBREAKER 007 EXPORT	
1	7706159000	RETAINER TUBE EL84 BASSBREAKER	
2	0064512000	COLLAR TUBE SHIELD 9PIN	

* Non-serviceable part. Replace complete parent assembly. See PCB EXCHANGE POLICY section above.

shaded Unique Fender® part. Order directly from the FMIC Parts Department.

shaded + * Access to this part or assembly is controlled. Please contact the FMIC Customer Service Department.

A Safety Critical Part. Replacement must match Safety Agency – Value, if specified – Type, if specified – Approval Mark(s), if on part.

shaded + \triangle Both a unique Fender® part and a Safety Critical Part as defined above.



(This is the model name for warranty claims)

PART	IS LIST:	CHASSIS ASSEMBLY	
QTY.	PART #	DESCRIPTION	REFERENCE DESIGNATION
2	0023598000	TUBE SHIELD (099-0723-000)	
2	0039371000	SPRING RETAINER TUBE 1.81Lx.15	
1	0079630000	▲GROMMET RUBBER .38 ID x .500 MTG	
1	0091860000	JEWEL PILOT LITE CLEAR	
4	0022004000	NUT KEPS #8-32 ZINC	PWR XFMR ATTACHMENT
4	0016473000	NUT KEPS #8-32 ZINC	PWR XFMR ATTACHMEMT
4	0038900000	SCRW TF 6-32X1/4 PHP ZI	AT TUBE SOCKET COLLAR
8	0064836000	SCRW M 6-32x1/4 PHP ZI SEMS	PWR PCB
7	0069393000	NUT 6-32 HEX EXT LOCK	OUTPUT XFMR ATTACHMENT
11	0031188000	SCRW M 4-40x1/4 PHP ZI ITWS	TUBE PCB ATTACHMENT
2	0028914000	BUSHING SNAP7/16X9-1/16 BLK	
2	0018022000	BUSHING SNAP 5/16x17/32 BLK	
3	0014206000	SCREW #6-32 x ¼ UFHP BLX	REAR PANEL BOTTOM
1	0021691000	BUSHING SR .500x.100x7/16 BLK	
1	0036702000	▲FUSE HOLDER 3AG FINGER GRIP	DOMESTIC
1	0036703000	▲FUSE HOLDER 5mm FINGER GRIP	220VAC-240VAC UNITS
1	0054642000	▲CONNECTOR IEC SNAP IN	
1	0022293000	WSHR FLAT .473x.750 NI	AT PWR SWITCH
1	0036570000	▲SWITCH TOGGLE DPST W/NUTS	
1	0032219000	COLLAR-PILOT LIGHT	
5	0091149000	CABLE ASSY XH 2-CKT COAX 5"	
2	7707599000	CABLE ASSY XH 3-CKT 7"	
1	0091889000	CABLE ASSY XH 6-CKT 8"	
1	0031625000	NUT HOLDER PILOT LIGHT 11/16-27	
1	0016436000	STAR WASHER FOR PWR SWITCH	
2	0031153000	FLAT WASHER PWR SWITCH & INPUT JACK	
3	0014999000	SCRW M 6-32X1/4 PHP BLX	AT REAR PANEL TOP
4	0022186000	SCRW M 6-32X3/8 PHP NI	OUTPUT XFMR ATTACHMENT
1	7707861000	CABLE ASSY XH 3-CKT 12"	

PART	PARTS LIST: CABINET ASSEMBLY - COMBO		
QTY.	PART #	DESCRIPTION	REFERENCE DESIGNATION
1	7706153000	*PANEL REAR PERF BB007	
1	7706154000	*CABINET ASSY BASSBREAKER 007 COMBO	COMPLETE CABINET
1	7706157000	*LOGO FENDER BASSBREAKER SERIES	
1	7706170000	HANDLE BASSBREAKER SERIES	
4	0048976000	FOOT RUBBER 1-1/2" BXR15	
1	7706171000	*NAMEPLATE BASSBREAKER 007	
2Yd	0026317002	▲CLOTH GRILLE BASSBREAKER SERIES	
2Yd	7706172000	COVERING BASSBREAKER SERIES	
4	0037247000	SCREW M 8-32X1 OHP NI	HANDLE SCREWS
4	0064162000	NUT T 8-32X1/2 STR 3 SPNG BLX	# 8 T-NUT FOR HANDLE
4	0033350000	SCRW SMAB 8X1 RHP BLX	FEET SCREWS
4	0021972000	NUT T 10-32X3/4 STR 3 PRNG BLX	#10 T-NUT FOR BAFFLE/SPEAKERS
14	0011678000	SCREW SMA #8 1-1/2 OHP BLX	BAFFLE SCREWS
14	0075721000	SCREW SMA #6X5/8 FHP BLX	EXTRUSION SCREWS

* Non-serviceable part. Replace complete parent assembly. See PCB EXCHANGE POLICY section above. shaded Unique Fender® part. Order directly from the FMIC Parts Department.

shaded + * Access to this part or assembly is controlled. Please contact the FMIC Customer Service Department.

▲ Safety Critical Part. Replacement must match Safety Agency – Value, if specified – Type, if specified – Approval Mark(s), if on part.

shaded + ▲ Both a unique Fender® part and a Safety Critical Part as defined above.



(This is the model name for warranty claims)

PAR	PARTS LIST: CABINET ASSEMBLY - HEAD		
QTY.	PART #	DESCRIPTION	REFERENCE DESIGNATION
1	7706179000	*CABINET ASSY BASSBREAKER 007 HEAD	COMPLETE CABINET
2 YD	7706172000	COVERING TWEED BLACK	
2 YD	0026317002	▲CLOTH GRILLE BLACK PVC	GRILLE CLOTH
1	7706170000	HANDLE BASSBREAKER SERIES	
1	7706171000	*NAMEPLATE BASSBREAKER 007	LOGO
1	7706153000	*PANEL REAR PERF BB 007	
4	7704305000	SCREW M 8-32X1/2 OHP NI	HANDLE SCREWS
4	0064162000	NUT T 8-32X1/2 STR 3 SPNG BLX	#10 T-NUT FOR BAFFLE/SPEAKERS
4	0033380000	SCRW SMAB 8X1 RHP BLX	FEET SCREWS
4	9280530414	SCREW SMA 8 1-1/4 OHP BLX	
4	0029527000	SCREW SMA #6X5/8 FLNGD BLX WX	
3	0075721000	SCREW SMA #6X5/8 FHP BLX	EXTRUSION SCREWS

PARTS LIST: END ITEM ASSEMBLY - COMBO			- COMBO
QTY.	PART #	DESCRIPTION	REFERENCE DESIGNATION
1	7700223000	CELESTION TEN 30 8 OHM	SPEAKER
4	0047821000	SCREW M 10-32 ¾ THP STL BLX	SPEAKER MTG
1	7706154000	*CABINET ASSY BASSBREAKER 007 COMBO	COMPLETE CABINET
1	7706157000	*LOGO FENDER BASSBREAKER SERIES	
6	0016014000	SCRW M 10-32X1 THP NI	CHASSIS MTG
5	0037215000	WSHR C/SUNK NICKEL #6	CABINET REAR PANEL MTG
5	0016188000	SCRW WOOD 6x1 OHP NI	REAR PERF PANEL MTG
2	0037210000	SCREW SMA 2X3/8 OHP NI	LOGO MTG
1	0047248000	▲CORD PWR W/ IEC DOM 120V	IEC POWER CABLE
1	0047251000	▲CORD PWR W/IEC CONN 230V	IEC POWER CABLE
1	0047249000	▲CORD PWR W/IEC CONN 230V UK	IEC POWER CABLE
1	0047250000	▲CORD PWR W/IEC CONN 250V	IEC POWER CABLE
1	0053997000	▲CORD PWR W/IEC CONN 100V JPN	IEC POWER CABLE
1	0057674000	▲CORD PWR W/IEC 230V ARG	IEC POWER CABLE
1	0029821000	▲EYELET RFLNGD .215 ODX.315 L	GROUNDING EYELET
6	0016014000	SCRW M 10-32X1 THP NI	
5	0037215000	WSHR C/SUNK NICKEL #6	
5	0016188000	SCRW WOOD 6X1 OHP NI	
4	0047821000	SCRW M 10-32 ¾ THP STL BLX	
5	0067014000	SCRW SMA 6X5/8 THP BLX	
2	0037210000	SCREW SMA 2X3/8 OHP NI	

PARTS LIST: END ITEM ASSEMBLY		END ITEM ASSEMBLY	– HEAD
QTY.	PART #	DESCRIPTION	REFERENCE DESIGNATION
1	7706179000	*CABINET ASSY BASSBREAKER 007 HEAD	
1	7706157000	*LOGO FENDER BASSBREAKER SERIES	
6	0016014000	SCRW M 10-32X1 THP NI	

* Non-serviceable part. Replace complete parent assembly. See PCB EXCHANGE POLICY section above. shaded Unique Fender® part. Order directly from the FMIC Parts Department.

shaded + * Access to this part or assembly is controlled. Please contact the FMIC Customer Service Department.

▲ Safety Critical Part. Replacement must match Safety Agency – Value, if specified – Type, if specified – Approval Mark(s), if on part.

shaded + ▲ Both a unique Fender® part and a Safety Critical Part as defined above.



(This is the model name for warranty claims)

PARTS LIST: END ITEM ASSEMBLY – HEAD			– HEAD
QTY.	PART #	DESCRIPTION	REFERENCE DESIGNATION
5	0067014000	SCRW SMA 6X5/8 THP BLX	
2	0037210000	SCREW SMA 2X3/8 OHP NI	
1	0047248000	▲CORD PWR W/ IEC DOM 120V	IEC POWER CABLE
1	0047251000	▲CORD PWR W/IEC CONN 230V	IEC POWER CABLE
1	0047249000	ACORD PWR W/IEC CONN 230V UK	IEC POWER CABLE
1	0047250000	▲CORD PWR W/IEC CONN 250V	IEC POWER CABLE
1	0053997000	▲CORD PWR W/IEC CONN 100V JPN	IEC POWER CABLE
1	0057674000	▲CORD PWR W/IEC 230V ARG	IEC POWER CABLE
1	0029821000	▲EYELET RFLNGD .215 ODX.315 L	GROUNDING EYELET

* Non-serviceable part. Replace complete parent assembly. See PCB EXCHANGE POLICY section above. shaded Unique Fender® part. Order directly from the FMIC Parts Department.

shaded + * Access to this part or assembly is controlled. Please contact the FMIC Customer Service Department.

▲ Safety Critical Part. Replacement must match Safety Agency – Value, if specified – Type, if specified – Approval Mark(s), if on part.

shaded + \triangle Both a unique Fender® part and a Safety Critical Part as defined above.

Fender



(This is the model name for warranty claims)

Service Diagram List

Service Diagram (Schematic)	Bassbreaker 007 Main PCB
Service Diagram (Schematic)	Bassbreaker 007 Main PCB
Service Diagram (PCB Assembly)	Bassman 007 Main PCB



PRIMARY WIRING - 220V-240V



	TABLE 1:		
BB	B007 - PRIMARY WIRING & MAINS FUSES F	OR INTERNATIONAL	SERVICE

LINE VOLTAGE	POWER TRANSFORMER	COLOR - P12	COLOR - P5	COLOR - P37	MAIN FUSE - FMIC #
100	7706162000	VIOLET	WHITE	х	F2A - 0048827000
110	7706160000	BLACK	WHITE	х	F2A - 0048827000
120	7706160000	BLACK	WHITE	х	F2A - 0048827000
220	7706161000	VIOLET	WHT/BLK	BLK	F1A - 0020789000
230	7706161000	VIOLET	WHT/BLK	BLK	F1A - 0020789000
240	7706161000	VIOLET	BLK	WHT/BLK	F1A - 0020789000

TREBLE BOOST - FRONT PANEL SWITCH & REAR PANEL FOOTSWITCH INTERFACES



 $\begin{array}{c} \text{GNDA}_1 & \begin{array}{c} & \text{R52} \\ & & \text{GNDA}_2 & \begin{array}{c} & \text{R46} \\ & & \text{GNDA}_4 \end{array} \end{array} \\ & & \begin{array}{c} & \text{GNDA}_3 \end{array} \\ & & \begin{array}{c} & \text{GNDA}_2 & \begin{array}{c} & \text{R46} \\ & & \text{GNDA}_4 \end{array} \\ & & \begin{array}{c} & \text{GNDA}_4 \end{array} \end{array} \\ & & \begin{array}{c} & \text{GNDA}_4 \end{array} \\ \end{array}$ \\ \end{array}

 THIS DOCUMENT CONTAINS INFORMATION OF

 A PROPRIETARY NATURE TO FENDER MUSICAL

 INSTRUMENTS AND IS SUBMITTED TO YOU IN

 CONFIDENCE AND SHALL NOT BE DISCLOSED OR

 TRANSMITTED TO OTHERS WITHOUT AUTHORIZ

 ATION FROM FENDER MUSICAL INSTRUMENTS.

 CHECKED BY:

 DATE:

 DATE:

 DRAWN: GIT'LO

 ENGR: GIT'LO

 DATABASE FILE:

NOTES: SEE SHEET 1

REVISIONS							
REV		DESCRIPTION		DA	TE	APPRO	VED
Α	P	R3032/3033	3	02-JU	IL-15	S M	М
		A SERVE					
6	Y TO		MU	SICAL	. INST	RUMEN	ITS
	$\int \int$		(Coron	a, CA	U.S.A.	
_ T	TITLE: SERVICE DIAGRAM, COMBINED (schematic)						
_		BAS	SBR		007		
- s	SIZE	DRAWING NUM	4BER				REV.
-	B	770)62	211	000)	A
+		LEASE DATE: 02-	-JUL-1!	5	SHEET:	2 OF 3	



1

REVISIONS						
REV.	DESCRIPTION	DATE	APPROVED			
A	PR3032/3033	25-JUN-15	SMM			

D

С

В

THIS DOCUMENT CONT A PROPRIETARY NATUR INSTRUMENTS AND IS CONFIDENCE AND SHALL TRANSMITTED TO OTHE ATION FROM FENDER	AINS INFORMATION OF RE TO FENDER MUSICAL SUBWITTED TO YOU IN . NOT BE DISCLOSED OR RS WITHOUT AUTHORIZ MUSICAL INSTRUMENTS.		and the second	MUSICAI Coron	_ INSTF a, CA	RUMI U.S	ENT S.A.	S
CHECKED BY:		TITLE: SERVICE DIAGRAM, COMBINED (PCB assy)						
DATE:		BASSBREAKER 007						
APPROVED BY:		T MAIN PCB						
DATE		SIZE	DRAWING NUME	ER				REV.
DRAWN: GIT'LO	ENGR: GIT'LO	D	77	06211	000			Α
DATABASE FILE:	Z3032P.PCB	RELEA	SE DATE: 30-	-JUN15	SHEET	3	OF	3
2				1				