



60W

-) DENOTES CHANNEL SELECTED. CH-2 VOLUME, IN TO SELECT CH-1, OUT TO SELECT CH-2. (WITH FOOTSWITCH NOT CONNECTED.)
-) USE P/N 014700 ONLY FOR REPLACEMENT EXCEPT THOSE VERSIONS WHICH USE P/N 018764, .01/125 V.A.C. (NO SUBSTITUTION).
-) DENOTES DC VOLTAGES, WITH NO OUTPUT, WITH 20,000 OHMS PER VOLT MULTIMETER. ALL CAPACITORS 600 V. MIN. ALL RESISTORS 1/2 WATT ± 10%.
-) DENOTES TYPICAL 1KHz SIGNAL REQUIRED FOR 10 WATT R.M.S. OUTPUT WITH ALL CONTROLS MAX. GAIN MIN. AND BOOST OFF.

CAUTION: 500 VOLTS AVAILABLE - DISCONNECT POWER SUPPLY AND ALLOW AT LEAST 30 SEC. FOR VOLTAGES TO BLEED OFF BEFORE SERVICING AMPLIFIER.

100 TO 260 VOLTS
EXPORT VERSIONS ONLY 50/60Hz
GROUND SWITCH .047 125 V.A.C. & A.C. RECEPTACLE DELETED FOR EXPORT.

Fender / Roers / Rhoder
OUR MUSICAL INSTRUMENTS ARE A DIVISION OF CBS, INC. PALLETON, CALIFORNIA 92562

PART NAME
SCHEMATIC - CONCERT
DOMESTIC, EXPORT, JAPAN & CSA

RELEASE	SIZE	PART NO.	REV.
10-20-81	D	019926	6
SCALE NONE	MODEL NO.	CONCERT	

Part #022104

