

Footswitch

Accessories		Fender		Function	PCB ref only
Number		Number			
			005-1894-000	4 Btn DSP	
			005-3586-000	SFX SATELLITE	028781
			005-3895-000	3 BTN SUNN BASS	057745 053897
			005-5592-000	3 BTN PRCR DSP	055593
			005-5771-000	3 BTN SUNN	055593
			005-5852-000	1 BTN EQ	028781
			005-7025-000	4 BTN PROTUBE	057035
			005-7172-000	1 BTN VINT UNSHLD	022657
			005-7219-000	4 BTN DSP	057211
			005-7473-000	3 BTN DLX 90 DSP	057771
			005-7601-000	4 BTN STAGE DSP	057603
			005-7664-000	2 BTN CH/FX	028448
			005-7745-000	3 BTN BASSMAN	053897
			005-9871-000	3 Btn	
			006-2206-000	2 BTN	
			006-4465-000	3 Btn Dlx 900	
			006-4544-000	3 Btn	
	099-4050-000	NS	0055125000	1 BTN RCA	
	099-4051-000	NS	0055126000	2 BTN RCA	
	099-4052-000	NS	0028890000	1 BTN CHNL	028781
	099-4053-000	NS	0037659000	1 BTN CHRS	028781
	099-4054-000	NS	0041228000	1 BTN VINT	022657
	099-4055-000	NS	0048458000	1 BTN VNT SHLD	022657
	099-4056-000	NS	0028122000	2 BTN CH/RV	028448
	099-4057-000	NS	0029972000	2 BTN CH/CHRS	028448
	099-4058-000	NS	0037211000	2 BTN VIB/REV	022665
	099-4059-000	NS	0041273000	2 BTN VB/FAT	022665
NS	099-4060-000	NS	0048868000	2 BTN VB/CHA	022665
NS	099-4061-000	NS	0050022000	2 BTN CH/REV	022665
	099-4062-000	NS	0050419000	2 BTN CH/DRV	050417
	099-4063-000	NS	0028146000	3 BTN CH/RV/BST	028149
	099-4064-000	NS	0040409000	3 BTN CH/GA/RV	040514
NS	099-4065-000	NS	0047800000	3 BTN GA/CH/RV	047803