

RESETS. TXT

FACTORY RESET PROCEDURES / RESET SEQUENCES

01/26/03

MAKE

MODEL

=====

ALESIS QUADRAVERB
HOLD BYPASS AND PROGRAM THEN POWER ON.

ALESIS SR-16
HOLD PLAY AND ERASE THEN POWER ON.

ART BCC
HOLD STORE, PARAMETER, AND VALUE BUTTONS + POWER
ON.

ART ECC
HOLD STORE, PARAMETER, AND VALUE BUTTONS + POWER
ON.

ART PRO GATE
PRESS BYPASS, 8, AND SELECT SIMULTANEOUSLY.

ART PROVERB
no reset. remove battery for more than 5 hours.

ART PROVERB 200
no reset. remove battery for more than 5 hours.

ART SGE
HOLD PRESET DOWN, ADD EFFECT, AND MIDI/UTILITY W
HILE POWERING ON.

DIGITECH DHP 33
PRESS UTILITY BUTTON, SCROLL TO THE FACTORY REST
ORE MENU, TURN EITHER DATA KNOB COUNTER-CLOCK
WISE, THEN PRESS STORE.

DIGITECH DHP 55
PRESS UTILITY BUTTON, SCROLL TO THE FACTORY REST
ORE MENU, PRESS PARAMETER EDIT, THEN LOAD.

DIGITECH DSP 128
HOLD PARAMETER EFFECT AND SELECT, THEN POWER ON.

DIGITECH DSP 128+
HOLD PARAMETER DOWN AND LEFT, THEN POWER ON.

DIGITECH DSP 256
HOLD UTILITY, POWER ON, THEN PRESS PARAMETER UP.

DIGITECH DSP 256XL
HOLD UTILITY, POWER ON, THEN PRESS PARAMETER UP.

DIGITECH FX 7
PRESS/HOLD STORE, POWER ON, WAIT UNTIL "RS" APPE
ARS IN THE DISPLAY THEN RELEASE STORE.

DIGITECH G7
PRESS AND HOLD PROGRAM, POWER ON THEN PRESS THE
STORE BUTTON.

RESETS. TXT

DIGITECH GFX 1
HOLD UTILITY BUTTON, POWER ON, THEN PRESS PARAMETER UP.

DIGITECH GSP 21
HOLD TITLE BUTTON, POWER ON.

DIGITECH GSP 21 LEGEND
HOLD UTILITY BUTTON, POWER ON, THEN PRESS PARAMETER UP.

DIGITECH GSP 21 PRO
HOLD UTILITY BUTTON, POWER ON, THEN PRESS PARAMETER UP.

DIGITECH GSP 2112
HOLD THE PREAMP BUTTON, POWER ON. WHEN THE ASTERISK APPEARS IN THE TOP OF THE DISPLAY, PRESS THE MOD BUTTON.

DIGITECH GSP 5
HOLD PARAMETER DOWN THEN POWER ON.

DIGITECH GSP 7
HOLD UTILITY BUTTON, POWER ON, THEN PRESS PARAMETER UP.

DIGITECH GSP2101
HOLD ACCESS 1 BUTTON, POWER ON. AFTER * APPEARS IN THE UPPER LEFT OF THE LCD PRESS PROGRAM UP

DIGITECH IPS 33
HOLD BOTH FUNCTION SELECT BUTTONS THEN POWER ON.

DIGITECH IPS 33B
PRESS UTILITY BUTTON, SCROLL TO THE FACTORY RESTORE MENU, PRESS PARAMETER DOWN, THEN STORE.

DIGITECH LEGEND II
HOLD STORE, POWER ON. AFTER * APPEARS IN THE UPPER LEFT CORNER OF THE LCD PRESS PARAMETER UP.

DIGITECH MEQ 14
HOLD PROGRAM BUTTON THEN POWER ON.

DIGITECH MEQ 28
HOLD PROGRAM BUTTON THEN POWER ON.

DIGITECH MEQ 7
HOLD PROGRAM BUTTON THEN POWER ON.

DIGITECH MSP 4
HOLD THE DOWN AND LEFT BUTTONS THEN POWER ON.

DIGITECH PMC 10
PRESS AND HOLD FOOTSWITCH "ONE", POWER ON, THEN PRESS THE "SELECT" FOOTSWITCH.

DIGITECH RP 1
HOLD UTILITY BUTTON, POWER ON, THEN PRESS PARAMETER UP.

DIGITECH RP 10

RESETS.TXT

HOLD NAME, POWER ON. AFTER * APPEARS IN THE UPPER LEFT CORNER OF LCD PRESS PROGRAM UP.

DIGITECH RP 12
HOLD NAME, POWER ON. AFTER * APPEARS IN THE UPPER LEFT CORNER OF LCD PRESS PROGRAM UP.

DIGITECH RP 5
HOLD PARAMETER SELECT UP BUTTON THEN POWER ON.

DIGITECH RP 6
HOLD PARAMETER SELECT UP BUTTON THEN POWER ON.

DIGITECH S-5000
PRESS UTILITY BUTTON, SCROLL TO THE FACTORY RESTORE MENU, PRESS PARAMETER EDIT, THEN LOAD.

DIGITECH STUDIO 400
PRESS AND HOLD THE "1" BUTTON, POWER ON. WHEN THE ASTERISK APPEARS IN THE TOP OF THE DISPLAY, PRESS PROGRAM.

DIGITECH STUDIO QUAD
PRESS AND HOLD THE "1" BUTTON, POWER ON. WHEN THE ASTERISK APPEARS IN THE TOP OF THE DISPLAY, PRESS PROGRAM.

DIGITECH SV 5
PRESS UTILITY BUTTON, SELECT THE INIT MENU, PRESS THE STORE BUTTON TWICE (AS PROMPTED).

DIGITECH TEC 8
PRESS AND HOLD BOTH LOW EQ AND MID EQ, POWER ON.

DIGITECH TSR 12
HOLD NAME + POWER ON. AFTER * APPEARS IN THE UPPER LEFT CORNER OF LCD PRESS PROGRAM UP.

DIGITECH TSR 24
HOLD ACCESS 1 BUTTON, POWER ON. AFTER * APPEARS IN THE UPPER LEFT OF THE LCD PRESS PROGRAM UP

DIGITECH TSR 6
PRESS AND HOLD EQ BUTTON, POWER ON. WAIT FOR "FA" TO APPEAR IN THE DISPLAY THEN PRESS STORE.
NOTE: "FH" WILL APPEAR BRIEFLY TO ACKNOWLEDGE.

DIGITECH VALVE FX
HOLD STORE, POWER ON. AFTER * APPEARS IN THE UPPER LEFT CORNER OF LCD PRESS PARAMETER UP.

DIGITECH VHM 5
PRESS UTILITY BUTTON, SCROLL TO THE FACTORY RESTORE MENU, PRESS PARAMETER DOWN, THEN STORE.

DIGITECH VOCALIST II
PRESS UTILITY BUTTON, SCROLL TO THE FACTORY RESTORE MENU, PRESS PARAMETER DOWN, THEN STORE.

DIGITECH XP PEDALS
PRESS/HOLD THE BYPASS/(HOLD)TUNER FOOTSWITCH AND POWER ON.

RESETS.TXT

ENSONIQ DP-PRO
HOLD SYSTEM BUTTON AND PRESS CANCEL. RELEASE BOTH
H BUTTONS, PRESS ENTER.

ENSONIQ DP/2
HOLD SYSTEM/MIDI AND PRESS THE "B" BUTTON, THEN
RELEASE BOTH. PRESS RIGHT ARROW ONCE. PRESS W
RITE BUTTON AT PROMPT.

ENSONIQ DP/4
HOLD SYSTEM/MIDI AND PRESS THE "B" BUTTON, THEN
RELEASE BOTH. PRESS RIGHT ARROW ONCE. PRESS W
RITE BUTTON AT PROMPT.

ENSONIQ DP/4+
HOLD SYSTEM/MIDI AND PRESS THE "B" BUTTON, THEN
RELEASE BOTH. PRESS RIGHT ARROW ONCE. PRESS W
RITE BUTTON AT PROMPT.

ENSONIQ ESQ-M
PRESS PARAM, PRESS STORAGE. HOLD SCROLL, PRESS M
ASTER. RELEASE BOTH, SCROLL TO SELECT MEMORY
PRESET PAGE. HOLD SCROLL, PRESS STORAGE. RELEASE BOTH, PRESS ([).

ENSONIQ FIZMO
HOLD THE SAVE BUTTON AND PRESS COMPARE. PRESS TH
E YES BUTTON AT THE PROMPT.

ENSONIQ FIZMO RACK
HOLD THE SAVE BUTTON AND PRESS COMPARE. PRESS TH
E YES BUTTON AT THE PROMPT.

ENSONIQ KS-32
PRESS EDIT/SEQUENCES (PRESETS). PRESS AND HOLD B
ANK 9 (SYSTEM) AND THEN PRESS SCREEN 9. RELEA
SE BOTH AND PRESS YES AT THE PROMPT.

ENSONIQ KT-76
PRESS EDIT/SEQUENCES (PRESETS). PRESS AND HOLD T
HE UPPER 9 BUTTON AND THEN PRESS THE LOWER 9.
RELEASE BOTH AND PRESS YES AT THE PROMPT.

ENSONIQ KT-88
PRESS EDIT/SEQUENCES (PRESETS). PRESS AND HOLD T
HE UPPER 9 BUTTON AND THEN PRESS THE LOWER 9.
RELEASE BOTH AND PRESS YES AT THE PROMPT.

ENSONIQ MR-61/76
HOLD THE ERASE BUTTON (IN THE SONG EDITOR SECTIO
N) AND POWER ON.

ENSONIQ MR-RACK
HOLD SAVE AND PRESS ENTER, THEN PRESS ENTER AT T
HE PROMPT.

ENSONIQ SD-1
HOLD PRESET BUTTON AND PRESS SOFT #1 BUTTON (UPP
ER LEFT CORNER OF SCREEN). RELEASE BOTH, PRES
S YES AT THE PROMPT.

ENSONIQ SQ-1 (21 VOICE)
PRESS EDIT/SEQUENCES (PRESETS). PRESS AND HOLD B

RESETS.TXT

ANK 9 (SYSTEM) AND THEN PRESS SCREEN 9. RELEASE BOTH AND PRESS YES AT THE PROMPT.

ENSONIQ SQ-1/32
PRESS EDIT/SEQUENCES (PRESETS). PRESS AND HOLD BANK 9 (SYSTEM) AND THEN PRESS SCREEN 9. RELEASE BOTH AND PRESS YES AT THE PROMPT.

ENSONIQ SQ-2 (21 VOICE)
PRESS EDIT/SEQUENCES (PRESETS). PRESS AND HOLD BANK 9 (SYSTEM) AND THEN PRESS SCREEN 9. RELEASE BOTH AND PRESS YES AT THE PROMPT.

ENSONIQ SQ-2/32
PRESS EDIT/SEQUENCES (PRESETS). PRESS AND HOLD BANK 9 (SYSTEM) AND THEN PRESS SCREEN 9. RELEASE BOTH AND PRESS YES AT THE PROMPT.

ENSONIQ SQ-80
HOLD THE RECORD BUTTON AND PRESS THE #1 SOFT BUTTON (UPPER LEFT CORNER OF SCREEN). RELEASE BOTH BUTTONS, PRESS YES AT THE PROMPT.

ENSONIQ SQ-R
HOLD SYSTEM BUTTON. QUICKLY PRESS "NO" THEN RELEASE BOTH BUTTONS. PRESS YES AT PROMPT.

ENSONIQ TS-10
HOLD PRESETS BUTTON AND PRESS SOFT 1 BUTTON (UPPER LEFT CORNER OF DISPLAY). RELEASE BOTH BUTTONS. SELECT YES AT THE PROMPT.

ENSONIQ TS-12
HOLD PRESETS BUTTON AND PRESS SOFT 1 BUTTON (UPPER LEFT CORNER OF DISPLAY). RELEASE BOTH BUTTONS. SELECT YES AT THE PROMPT.

ENSONIQ VFX
HOLD PRESETS BUTTON, PRESS SOFT 1 BUTTON (UPPER LEFT CORNER OF SCREEN). SELECT YES AT PROMPT.

ENSONIQ VFX/SD
HOLD PRESET BUTTON AND PRESS SOFT #1 BUTTON (UPPER LEFT CORNER OF SCREEN). RELEASE BOTH, PRESS YES AT THE PROMPT.

ENSONIQ ZR-76
HOLD THE ERASE BUTTON (IN THE SONG EDITOR SECTION) AND POWER ON.

KORG 01W
HOLD RESET AND COMPARE THEN POWER ON.

KORG 01WFD
HOLD RESET AND COMPARE THEN POWER ON.

KORG A1
HOLD WRITE AND -1 THEN POWER ON.

KORG A2
HOLD DOWN ARROW AND UP ARROW, POWER ON, PRESS "E" (YES).

RESETS.TXT

KORG A3
HOLD DOWN ARROW AND UP ARROW, POWER ON, PRESS "E"
" (YES).

KORG A4
HOLD WRITE AND BYPASS, THEN POWER ON.

KORG AM8000-R
HOLD FX1 AND FX2 THEN POWER ON.

KORG C-505
MIDI/TRANSPOSE + SPLIT AND RESTART UNIT.

KORG DDD-1
HOLD YES AND NO, THEN POWER ON.

KORG DL8000-R
HOLD "MS/D" AND "HOLD", THEN POWER ON.

KORG DS-8/707
HOLD UP AND DOWN, THEN POWER ON.

KORG I 1
HOLD PROGRAM AND DISK, THEN POWER ON.

KORG I 2
HOLD ARR PLAY AND EDIT STYLE THEN POWER ON.

KORG I 3
HOLD ARR PLAY AND EDIT STYLE THEN POWER ON.

KORG I 30
HOLD ARRANGE PLAY AND GLOBAL, THEN POWER ON.

KORG I 4S
HOLD ARR. PLAY AND PROGRAM, THEN POWER ON.

KORG I 5M
HOLD ARR. PLAY AND GLOBAL, THEN POWER ON.

KORG I 5S
HOLD ARR. PLAY AND GLOBAL, THEN POWER ON.

KORG I H
HOLD DETUNE AND BASS, THEN POWER ON.

KORG I S40/50/I 40M
HOLD ARR. PLAY AND GLOBAL, THEN POWER ON.

KORG KARMA
HOLD ENTER AND O, THEN POWER ON.

KORG M1
HOLD INT, CARD, AND COMBI THEN POWER ON.

KORG M1R
HOLD INT, PROG, AND COMBI THEN POWER ON.

KORG M3R
PAGE 5D OF GLOBAL MODE.

KORG N264
HOLD ENTER AND 7, THEN POWER ON.

RESETS. TXT

KORG N364
HOLD ENTER AND 7, THEN POWER ON.

KORG 05RW
HOLD +1 AND -1 THEN POWER ON.

KORG SG-PROX
HOLD PROGRAM AND PIANO 1, THEN POWER ON.

KORG SG-RACK
HOLD EDIT AND A4, THEN POWER ON.

KORG T SERIES
HOLD LOWER KEYPAD 0 AND PROG A, POWER ON, AND THEN IMMEDIATELY TURN OFF.

KORG TR-RACK
HOLD EDIT AND A4, THEN POWER ON.

KORG TRITON
HOLD ENTER AND 0, THEN POWER ON.

KORG TRITON RACK
HOLD ENTER AND 0, THEN POWER ON.

KORG X3
HOLD ENTER AND CURSOR DOWN THEN POWER ON.

KORG X3R
HOLD ENTER AND CURSOR DOWN THEN POWER ON.

KORG X5
HOLD +1 AND -1, THEN POWER ON.

KORG X5D
HOLD +1 AND -1 THEN POWER ON.

KORG X5DR
HOLD +1 AND -1 THEN POWER ON.

KORG Z1
HOLD SW1 AND SW2, THEN POWER ON.

KORG Z1EX
HOLD SW1 AND SW2, THEN POWER ON.

OBERHEIM MATRIX-6
HOLD STORE WHILE POWERING ON.

PEAVEY ADDVERB
HOLD THE - AND 5 KEYS THEN POWER ON.

PEAVEY ADDVERB II
HOLD THE - AND 5 KEYS THEN POWER ON.

PEAVEY ADDVERB III
HOLD THE ADD/DEL AND GLOBAL BUTTONS, POWER ON.

PEAVEY AEQ 2800
HOLD THE MIDI AND ASSIGN KEYS THEN POWER ON.

PEAVEY AUTOGRAPH

RESETS.TXT

HOLD THE MIDI AND ASSIGN KEYS THEN POWER ON.

PEAVEY BASSFEX
HOLD THE PLAY AND GLOBAL BUTTONS THEN POWER ON.

PEAVEY CEQ 28
HOLD THE MIDI AND ASSIGN KEYS THEN POWER ON.

PEAVEY CEX 4
HOLD THE MASTER AND STORE/MEMORY BUTTONS THEN POWER ON.

PEAVEY CEX 4L
HOLD THE MASTER AND STORE/MEMORY BUTTONS THEN POWER ON.

PEAVEY CYBERBASS (MODULE)
HOLD THE PROGRAM AND RIGHT CURSOR BUTTONS THEN POWER ON.

PEAVEY DPM 2
HOLD 0 BUTTON, PRESS ENTER. RELEASE BOTH BUTTONS AND PRESS ENTER.

PEAVEY DPM 4
HOLD SAVE BUTTON, PRESS PAUSE. PRESS ENTER WHEN PROMPTED.

PEAVEY DPM C8
HOLD THE 0 AND ENTER BUTTONS, POWER ON, WAIT FOR THE "UNIT INITIALIZED" DISPLAY THEN RELEASE THE BUTTONS.

PEAVEY DPM C8P
HOLD THE 0 AND COPY BUTTONS, POWER ON, WAIT FOR THE "UNIT INITIALIZED" DISPLAY THEN RELEASE THE BUTTONS.

PEAVEY DSR 1000
HOLD THE - AND 5 KEYS THEN POWER ON.

PEAVEY LIBRARIAN
HOLD LOAD, SAVE, AND UTIL BUTTONS AND POWER ON.

PEAVEY MAP 8X4
HOLD BYPASS + POWER WHILE PLUGGING UNIT IN.

PEAVEY MFP 2128/MIDI MANA
HOLD + AND - KEYS THEN POWER ON.

PEAVEY MIDI MANAGER
HOLD + AND - KEYS THEN POWER ON.

PEAVEY MIDI MASTER
HOLD FUNCTION AND PROC A KEYS THEN POWER ON.

PEAVEY MIDI MASTER II
HOLD FUNCTION AND PROC A KEYS THEN POWER ON.

PEAVEY MIDI STREAMER
HOLD THE RECORD (SYSX, SAMP, + SEQ) KEYS AND POWER ON. AT PROMPT PRESS START TO RE-INIT.

RESETS. TXT

PEAVEY MULTIFEX
HOLD THE 2 KEYS NEXT TO DISPLAY AND POWER ON.

PEAVEY PC 1600
HOLD THE UTILITY + ENTER KEYS AND POWER ON.

PEAVEY PC4-X
HOLD THE MASTER + MIDI KEYS AND POWER ON.

PEAVEY PC4-XL
HOLD THE MASTER + MIDI KEYS AND POWER ON.

PEAVEY PGP 20
HOLD THE A/B + MUTE KEYS AND POWER ON.

PEAVEY PLM 8128
PRESS TWO RIGHT-MOST SOFT KEYS IN BOTTOM ROW AND
POWER ON. (VCA CAL UNAFFECTED)

PEAVEY PLM 8128E
HOLD THE SOLO AND MUTE KEYS, POWER ON. (VCA CAL
UNAFFECTED)

PEAVEY PROFEX
HOLD THE PLAY AND MIDI KEYS THEN POWER ON.

PEAVEY PROFEX II
HOLD THE PLAY AND GLOBAL BUTTONS, POWER ON.

PEAVEY PROGRAMAX
HOLD THE A/B AND MUTE KEYS THEN POWER ON.

PEAVEY PV LITE 3000
FACTORY PRESETS: HOLD CHASE + AUTO SOUND, POWER
ON. HARD RESET: HOLD DOWN + STORE, POWER ON.
IN BOTH CASES, HOLD UNTIL 00 APPEARS IN THE DISPLAY.

PEAVEY SDR 20/20
HOLD THE PLAY AND STORE KEYS THEN POWER ON.

PEAVEY SPECTRUM ANALOG FI
HOLD THE DEC AND EXEC BUTTONS, POWER ON. (TO IN
IT. FOR USE W/ CYBERBASS, HOLD DEC AND BYPASS
THEN POWER ON.

PEAVEY SPECTRUM BASS II
HOLD THE + AND - BUTTONS THEN POWER ON.

PEAVEY SPECTRUM ORGAN
HOLD THE + AND - BUTTONS THEN POWER ON.

PEAVEY SPECTRUM SYNTH
HOLD THE + AND - BUTTONS THEN POWER ON.

PEAVEY ULTRAVERB
HOLD THE - AND 5 KEYS THEN POWER ON.

PEAVEY ULTRAVERB II
HOLD THE + AND 9 BUTTONS THEN POWER ON.

ROLAND A-220
HOLD B AND MEMORY THEN POWER ON.

RESETS. TXT

ROLAND A-30
WRITE + POWER ON (15 SECONDS)

ROLAND A-33
WRITE + POWER ON (15 SECONDS)

ROLAND A-50
HOLD 1ST+3RD+4TH BUTTONS UNDER DISPLAY, PRESS CHANNEL, THEN PRESS ANY CURSOR KEY.

ROLAND A-80
HOLD 1ST+3RD+4TH BUTTONS UNDER DISPLAY, PRESS CHANNEL, THEN PRESS ANY CURSOR KEY.

ROLAND A-880
HOLD SIGNAL AND MEMORY THEN POWER ON.

ROLAND A-90
HOLD EDIT, POWER ON THEN PRESS ENTER. WITH VOICE EXPANDER BOARD: HOLD MANUAL, POWER ON, THEN PRESS ENTER.

ROLAND ADA-8024
no rom reset.

ROLAND ALPHA JUNO-1
no rom reset.

ROLAND ALPHA JUNO-2
no rom reset.

ROLAND AP-700
PWR ON, EXIT REPEATEDLY TO ANALYZER/FILTER SCREEN. CURSOR TO: MENU + ENTER, SYSTEM + ENTER, INIT + ENTER. USE VALUE SELECT ALL THEN EXEC + ENTER TWICE.

ROLAND AR SERIES
no rom reset.

ROLAND AT SERIES
ONE TOUCH PROGRAM + POWER ON.

ROLAND AX-1
WRITE + POWER ON (30 SECONDS).

ROLAND AXIS-1
HOLD FUNCTION; PRESS F#0, C#2, AND D#2 KEYS.

ROLAND CA-30
RESETS EVERY TIME TOGGLED OFF AND THEN ON.

ROLAND CR (ALL OTHER)
no rom reset.

ROLAND CR-80
DEL + REPEAT + POWER ON, THEN PRESS ENTER.

ROLAND CSQ SERIES
no rom reset. {*}

ROLAND D-10
no rom reset. {*}

RESETS.TXT

ROLAND D-110
no rom reset. {*}

ROLAND D-20
no rom reset. {*}

ROLAND D-5
no rom reset. {*}

ROLAND D-50
TUNE/FUNCTION AND MIDI DATA INIT: HOLD 0 AND DATA TRANSFER, POWER ON. PATCH + REVERB MUST BE LOADED FROM CARD OR SYSEX FILE.

ROLAND D-550
TUNE/FUNCTION AND MIDI DATA INIT: HOLD PATCH BANK 2, PATCH NUMBER6, AND ENTER, POWER ON. PATCH AND REVERB DATA MUST BE LOADED FROM CARD OR SYSEX FILE.

ROLAND D-70
no rom reset. {*}

ROLAND DDR-30
HOLD #1 BUTTON + POWER ON.

ROLAND DEP-3
MEMORY NO UP AND DOWN + POWER ON.

ROLAND DEP-5
MEMORY NO UP AND DOWN + POWER ON.

ROLAND DJ-70
no rom reset.

ROLAND DJ-70MKII
no rom reset.

ROLAND DM SERIES
no rom reset.

ROLAND DR-5
FRET LEFT + FRET RIGHT + POWER ON; 2 X ENTER.

ROLAND DR-550
HOLD -1 AND +1 AND POWER ON, THEN PRESS START.

ROLAND DR-550MKII
HOLD -1 AND +1 AND POWER ON, THEN PRESS START.

ROLAND DR-660
UTILITY THEN CURSOR TO SELECT (8) INIT; 2 X ENTER.

ROLAND DS-330
REVERB + SPLIT + PWR ON; PRESS YES.

ROLAND E-10
HOLD WRITE + POWER ON.

ROLAND E-12
no rom reset.

ROLAND E-14US

RESETS. TXT

no rom reset.

ROLAND E-14US
resets at power on.

ROLAND E-15
resets at power on.

ROLAND E-16
resets at power on.

ROLAND E-20
HOLD WRITE + POWER ON.

ROLAND E-28US
resets at power on.

ROLAND E-30
HOLD WRITE + POWER ON.

ROLAND E-35
HOLD REC/PUNCH IN + POWER ON.

ROLAND E-36
RECORDER + POWER ON.

ROLAND E-5
no rom reset.

ROLAND E-56
HOLD WRITE + POWER ON.

ROLAND E-66
RECORD (IN DISK RECORDER SECTION) + POWER ON.

ROLAND E-68US
HOLD WRITE + POWER ON.

ROLAND E-70
HOLD WRITE + POWER ON.

ROLAND E-86
HOLD WRITE + POWER ON.

ROLAND E-96
HOLD WRITE + POWER ON.

ROLAND EM-101
no rom reset.

ROLAND EM-303
resets at power on.

ROLAND EM-305
resets at power on.

ROLAND EP (ALL OTHER)
no rom reset.

ROLAND EP-3
resets at power on.

ROLAND EP-5

RESETS.TXT

HOLD REC + PLAY, PRESS STRINGS, POWER OFF / ON.

ROLAND EP-7
HOLD REC + PLAY, PRESS STRINGS, POWER OFF / ON.

ROLAND EP-707
resets at power on.

ROLAND EP-7MKI I
HOLD REC + PLAY, PRESS STRINGS, POWER OFF AND ON
.

ROLAND EP-9
HOLD REC + PLAY, PRESS CHOIR, POWER OFF AND ON.

ROLAND FC-100
no rom reset.

ROLAND FC-100MKI I
HOLD #1 + #2 + #8 AND POWER ON.

ROLAND FC-200
HOLD #10 AND POWER ON, THEN PRESS CTL PEDAL.

ROLAND FG-10
HOLD CLEAR AND EXIT THEN POWER ON.

ROLAND FG-1000
HOLD CLEAR AND EXIT THEN POWER ON.

ROLAND FP-1
resets at power on.

ROLAND FP-8
PRESS FUNC AND RELEASE HOLD PIANO PRESS FUNC AGAIN.

ROLAND G-800
HOLD WRITE, THEN POWER ON.

ROLAND GC-8
no rom reset.

ROLAND GI-10
HOLD PARAMETER + AND -, POWER ON THEN PRESS VALUE +.

ROLAND GM-70
POLY MODE: HOLD PLAY, GENERAL EDIT, + IND EDIT THEN POWER ON. MONO MODE: HOLD TUNE, CONTROL ASSIGN, AND DATA TRANSFER THEN POWER ON.

ROLAND GP-100
HOLD IN PARAMETER KNOB, POWER ON, PRESS WRITE.

ROLAND GP-16
HOLD #6, #7, #8, THEN POWER ON. USE FUNCTION LEFT AND RIGHT TO SELECT "2. ALL FACTORY PRESET" THEN PRESS WRITE 3 TIMES.

ROLAND GP-8
no rom reset.

RESETS. TXT

ROLAND GR (ALL OTHER)
no rom reset.

ROLAND GR-09
HOLD PEDAL #2 THEN POWER ON. PRESS VALUE+ THEN PRESS EDIT/PLAY.

ROLAND GR-1
HOLD WRITE/COPY THEN POWER ON THEN PRESS YES.

ROLAND GR-30
HOLD PEDAL #2, POWER ON. PRESS PATCH + TO SELECT INIT. PRESS EDIT/PLAY, THEN PATCH + AND - SIMULTANEOUSLY.

ROLAND GR-50
no rom reset. {*}

ROLAND GS-6
no rom reset.

ROLAND GT-5
HOLD MOD + FEED BACKER/SLOW GEAR, POWER ON. THEN PRESS WRITE.

ROLAND GX-700
PRESS TUNER/UTILITY. USE PARAMETER LEFT AND RIGHT TO SELECT FACT INIT. CURSOR TO LEFT, DIAL SYSTEM, THEN RIGHT AND DIAL P#100. PRESS WRITE THEN TUNER/UTILITY.

ROLAND HP (ALL OTHER)
resets at power on.

ROLAND HP-100
no rom reset.

ROLAND HP-300
no rom reset.

ROLAND HP-400
no rom reset.

ROLAND HS SERIES
no rom reset.

ROLAND JD-800
PRESS DATA TRANSFER. PAGE UP TO SELECT FACTORY PRESET, PRESS YES.

ROLAND JD-990
HOLD EXIT AND PRESS UTILITY. PRESS F6 THEN F5.

ROLAND JP-6
no rom reset.

ROLAND JP-8
no rom reset.

ROLAND JP-8000
HOLD SHIFT, PRESS INIT/BULK. PRESS BUTTON 7, USE UP/DOWN (SELECT FACTORY RESET), PRESS WRITE TO SELECT FACTORY PRESET.

RESETS. TXT

ROLAND JS-30
HOLD RECORD BUTTON (SEQUENCER SECTION), POWER ON

ROLAND JUNO-106
no rom reset.

ROLAND JUNO-60
no rom reset.

ROLAND JUNO-1
no rom reset.

ROLAND JUNO-2
no rom reset.

ROLAND JUNO-6
no rom reset.

ROLAND JUPI TER-6
no rom reset.

ROLAND JUPI TER-8
no rom reset.

ROLAND JV-1000
HOLD NUMBER 8, POWER ON. PRESS ENTER THEN WRITE.

ROLAND JV-1080
PRESS UTILITY. CURSOR DOWN ONCE THEN RIGHT 3 TIMES TO FACTORY PRESET. PRESS ENTER TWICE, THEN UTILITY.

ROLAND JV-2080
PRESS UTILITY. PRESS F6 TWICE TO MENU 3. PRESS F1 THEN F6. IF REQ'D USE VALUE DIAL TO TURN OFF MEM. PROT. AND PRESS F6 TWICE.

ROLAND JV-30
PRESS CHORUS + REVERB (ABOVE INIT) TOGETHER THEN PRESS VALUE UP.

ROLAND JV-35
PRESS CONTROL + MASTER TOGETHER. USE PARAMETER UP AND DOWN TO SELECT ALL. PRESS VALUE UP.

ROLAND JV-50
PRESS CONTROL + MASTER TOGETHER. USE PARAMETER UP AND DOWN TO SELECT ALL. PRESS VALUE UP.

ROLAND JV-80
HOLD NUMBER 8, POWER ON. PRESS ENTER THEN WRITE.

ROLAND JV-880
PRESS UTILITY, USE DATA DIAL TO SELECT FACTORY PRESET. PRESS ENTER TWICE.

ROLAND JV-90
HOLD NUMBER 8, POWER ON. PRESS ENTER THEN WRITE.

ROLAND JW-50
PRESS TUNE/FUNCTION. PRESS F5 THEN F4 THEN F3 THEN F4.

RESETS.TXT

ROLAND JX-1
HOLD WRITE AND FLUTE THEN POWER ON.

ROLAND JX-10
no rom reset.

ROLAND JX-3P
no rom reset.

ROLAND JX-8P
no rom reset.

ROLAND KR-100
resets at power on.

ROLAND KR-3000
HOLD FROM AND TO, THEN PRESS WRITE.

ROLAND KR-33
resets at power on.

ROLAND KR-350
HOLD LOAD AND SAVE, THEN PRESS WRITE.

ROLAND KR-3500
HOLD LOAD AND SAVE, THEN PRESS WRITE.

ROLAND KR-370
resets at power on.

ROLAND KR-4500
HOLD LOAD AND SAVE, THEN PRESS WRITE.

ROLAND KR-4700
HOLD LOAD AND EDIT, THEN PRESS SAVE.

ROLAND KR-500
HOLD FROM AND TO, THEN PRESS WRITE.

ROLAND KR-5000
HOLD LOAD AND EDIT, THEN PRESS SAVE.

ROLAND KR-55
HOLD MIDI FUNCTION AND PRESS CARDS (5 SECONDS).

ROLAND KR-5500
HOLD LOAD AND SAVE, THEN PRESS WRITE.

ROLAND KR-650
HOLD LOAD AND SAVE, THEN PRESS WRITE.

ROLAND LVC-1N
HOLD ENTER BUTTON THEN POWER ON.

ROLAND M-760
HOLD EDIT, PRESS WRITE. PARAMETER UP/DOWN TO SELECT ALL + PRESS WRITE. ON COMPLETION PRESS EDIT TO RETURN TO PLAY.

ROLAND M-DC1
HOLD F3 AND THEN POWER ON.

RESETS. TXT

ROLAND M-GS64
HOLD F3 AND THEN POWER ON.

ROLAND M-OC1
HOLD F3 AND THEN POWER ON.

ROLAND M-SE1
HOLD F3 AND THEN POWER ON.

ROLAND M-VS1
HOLD F3 AND THEN POWER ON.

ROLAND MBD1
HOLD F3 AND THEN POWER ON.

ROLAND MC SERIES; EXC 303
no rom reset.

ROLAND MC-303
HOLD SHIFT AND THEN POWER ON, THEN PRESS ENTER.

ROLAND ME-10
HOLD BANK DOWN PEDAL, THEN PRESS WRITE.

ROLAND ME-5
HOLD PEDALS 1 AND 2, POWER ON; PRESS WRITE IMMEDIATELY.

ROLAND ME-6
HOLD LEFT + DOWN AND POWER ON; THEN PRESS WRITE.

ROLAND ME-6B
HOLD LEFT + DOWN AND POWER ON; THEN PRESS WRITE.

ROLAND ME-8
HOLD LEFT + DOWN AND POWER ON; PRESS WRITE/COPY.

ROLAND ME-8B
HOLD PARAMETER LEFT + DOWN BUTTONS, THEN PRESS WRITE/COPY.

ROLAND ME-X
HOLD PARAMETER LEFT + DOWN AND POWER ON, THEN PRESS WRITE.

ROLAND MK-80
HOLD WRITE, PRESS EDIT. HOLD LEFT AND RIGHT CURSOR BUTTONS AND PRESS UP.

ROLAND MKB SERIES
no rom reset.

ROLAND MKS-50
POLY MODE: HOLD 4 AND 8 AND POWER ON. MONO MODE:
HOLD 3 AND 7 THEN POWER ON.

ROLAND MP SERIES
no rom reset.

ROLAND MS-1
no rom reset.

ROLAND MSQ-100

RESETS. TXT

no rom reset.

ROLAND MSQ-700
no rom reset.

ROLAND MT-100
HOLD STOP, PRESS DELETE. AFTER THE DISPLAY FLASHES "ALL CLEAR" PRESS EXECUTE.

ROLAND MT-120
HOLD REPEAT, SONG (BLUE), AND PLAY, POWER ON. PRESS FWD REPEATEDLY UNTIL READS T13. PRESS PLAY THEN RECORD, THEN POWER OFF/ON.

ROLAND MT-120S
HOLD REPEAT, SONG (BLUE), AND PLAY, POWER ON. PRESS FWD REPEATEDLY UNTIL READS T13. PRESS PLAY THEN RECORD, THEN POWER OFF/ON.

ROLAND MT-200
HOLD REPEAT, SONG (BLUE), AND PLAY, POWER ON. USE DIAL TO SELECT T-15 ON DISPLAY. PRESS PLAY THEN RECORD, THEN POWER OFF/ON.

ROLAND MT-32
HOLD MASTER VOLUME, PRESS RHYTHM PART, PRESS PART 1.

ROLAND MT-80
resets at power on.

ROLAND MV-30
no rom reset.

ROLAND OCTAPAD
HOLD MIDI CH AND NOTE NUMBER, POWER ON. POWER OFF, THEN POWER ON AGAIN.

ROLAND OCTAPAD II
HOLD BOTH VALUE BUTTONS, POWER ON.

ROLAND P-330
no rom reset.

ROLAND P-55
HOLD BOTH INSTRUMENT BUTTONS, POWER ON, THEN PRESS PARAM 1.

ROLAND PAD-8
HOLD MIDI CH AND NOTE NUMBER, POWER ON. POWER OFF, THEN POWER ON.

ROLAND PAD-80
HOLD BOTH VALUE BUTTONS, POWER ON.

ROLAND PC-150
HOLD COMMAND (LEFT), POWER ON.

ROLAND PC-200
HOLD THE 2 BUTTONS UNDER "STANDARD", POWER ON.

ROLAND PIANO PLUS (ALL)
no rom reset.

RESETS. TXT

ROLAND PLANET-P
no rom reset.

ROLAND PLANET-S
no rom reset.

ROLAND PMA-5
HOLD VALUE, POWER ON. TOUCH 2 CAL. POINTS TOP RIGHT + BOTTOM LEFT OF DISPLAY W/ TOUCH PEN. DISPLAYS COMPLETED THEN INITIALIZE, TOUCH EXEC.

ROLAND PRO-E
HOLD WRITE, POWER ON.

ROLAND R-5
HOLD PAGE + SELECT AND POWER ON. PRESS ENTER TWICE AT PROMPTS.

ROLAND R-70
HOLD MIDI + ASSIGN AND POWER ON. PRESS YES TWICE AT PROMPTS.

ROLAND R-8M
HOLD CURSOR RIGHT AND ENTER, POWER ON. PRESS ENTER TWICE AT PROMPTS.

ROLAND RA-50
HOLD WRITE THEN POWER ON.

ROLAND RA-90
HOLD WRITE THEN POWER ON.

ROLAND RA-95
HOLD REC, POWER ON.

ROLAND RSP-550
POWER ON WHILE HOLDING PROG PAGE UP AND DOWN, THEN PRESS WRITE.

ROLAND SB-55
POWER ON WHILE CLEAR.

ROLAND SC-33
HOLD SPLIT AND REVERB WHILE POWERING ON, THEN PRESS YES.

ROLAND SC-50
HOLD BOTH INSTRUMENT BUTTONS AND POWER ON. THEN PRESS ALL.

ROLAND SC-55
HOLD BOTH INSTRUMENT BUTTONS AND POWER ON. THEN PRESS ALL.

ROLAND SC-55MKI I
HOLD BOTH INSTRUMENT BUTTONS AND POWER ON. THEN PRESS ALL.

ROLAND TD-8 V CUSTOM
PRESS SETUP THEN [F3 (MENU)]. PRESS INC/+, ROTATE THE VALUE DIAL, OR PRESS CURSOR TO MOVE THE CURSOR TO "RESET".

RESETS.TXT

ROLAND TR-505
HOLD PATTERN GROUP A AND MODE AND POWER ON.

ROLAND TR-626
HOLD TRACK #1 AND MODE AND POWER ON.

ROLAND TR-707
HOLD TRACK WRITE AND PATTERN 1 AND POWER ON.

ROLAND TR-727
HOLD TRACK WRITE AND PATTERN 1 AND POWER ON.

ROLAND TR-909
HOLD TRACK #1 AND PATTERN #1 AND POWER ON.

ROLAND U-110
HOLD THE EDIT AND PART BUTTONS AND POWER ON.

ROLAND VP-70
HOLD MIDI, PLAY, AND VOICE EXP AND POWER ON.

YAMAHA O2R
HOLD "CURSOR LEFT" AND POWER ON.

YAMAHA CLP-100
HOLD KEY "FO" AND POWER ON.

YAMAHA CLP-121
HOLD KEY "FO" AND POWER ON.

YAMAHA CLP-121S
HOLD KEY "FO" AND POWER ON.

YAMAHA CLP-122
HOLD KEY "FO" OR KEY "B1" AND POWER ON.

YAMAHA CLP-122S
HOLD KEY "FO" OR KEY "B1" AND POWER ON.

YAMAHA CLP-123
HOLD KEY "FO" OR KEY "B1" AND POWER ON.

YAMAHA CLP-124
HOLD KEY "FO" OR KEY "B1" AND POWER ON.

YAMAHA CLP-133
HOLD KEY "FO" OR KEY "B1" AND POWER ON.

YAMAHA CLP-134
HOLD KEY "FO" OR KEY "B1" AND POWER ON.

YAMAHA CLP-152
HOLD KEY "FO" AND POWER ON.

YAMAHA CLP-152S
HOLD KEY "FO" AND POWER ON.

YAMAHA CLP-153
HOLD KEY "FO" OR KEY "B1" AND POWER ON.

YAMAHA CLP-153S
HOLD KEY "FO" OR KEY "B1" AND POWER ON.

RESETS.TXT

YAMAHA CLP-153SG
HOLD KEY "F0" OR KEY "B1" AND POWER ON.

YAMAHA CLP-154
HOLD KEY "F0" OR KEY "B1" AND POWER ON.

YAMAHA CLP-154F
HOLD KEY "F0" OR KEY "B1" AND POWER ON.

YAMAHA CLP-154S
HOLD KEY "F0" OR KEY "B1" AND POWER ON.

YAMAHA CLP-155
HOLD KEY "F0" OR KEY "B1" AND POWER ON.

YAMAHA CLP-156
HOLD KEY "F0" OR KEY "B1" AND POWER ON.

YAMAHA CLP-157
HOLD KEY "F0" OR KEY "B1" AND POWER ON.

YAMAHA CLP-158
HOLD KEY "F0" OR KEY "B1" AND POWER ON.

YAMAHA CLP-20
HOLD KEY "F0" AND POWER ON.

YAMAHA CLP-250
HOLD KEY "F0" AND POWER ON.

YAMAHA CLP-260
HOLD KEY "F0" AND POWER ON.

YAMAHA CLP-30
HOLD KEY "B1" AND POWER ON.

YAMAHA CLP-311
HOLD KEY "B1" AND POWER ON.

YAMAHA CLP-350
HOLD KEY "B1" AND POWER ON.

YAMAHA CLP-360
HOLD KEY "F0" AND POWER ON.

YAMAHA CLP-411
HOLD KEY "B1" AND POWER ON.

YAMAHA CLP-500
HOLD KEY "B1" AND POWER ON.

YAMAHA CLP-511
HOLD KEY "B1" AND POWER ON.

YAMAHA CLP-550
HOLD KEY "B1" AND POWER ON.

YAMAHA CLP-555
HOLD KEY "B1" AND POWER ON.

YAMAHA CLP-560
HOLD KEY "B1" AND POWER ON.

RESETS.TXT

YAMAHA CLP-570
HOLD KEY "B1" AND POWER ON.

YAMAHA CLP-611
HOLD KEY "B1" AND POWER ON.

YAMAHA CLP-705
HOLD KEY "B1" AND POWER ON.

YAMAHA CLP-711
HOLD KEY "B1" AND POWER ON.

YAMAHA CLP-760
HOLD KEY "B1" AND POWER ON.

YAMAHA CLP-811
HOLD KEY "B1" AND POWER ON.

YAMAHA CLP-911
HOLD KEY "B1" AND POWER ON.

YAMAHA CLW-12
HOLD KEY "B1" AND POWER ON.

YAMAHA CLW-14
HOLD KEY "B1" AND POWER ON.

YAMAHA CS1X
HOLD BUTTONS 7, 8, AND 9, AND POWER ON.

YAMAHA CS2X
HOLD BUTTONS 7, 8, AND 9, AND POWER ON.

YAMAHA CVP-35
HOLD KEY "B1" AND POWER ON.

YAMAHA CVP-45
HOLD KEY "B1" AND POWER ON.

YAMAHA CVP-49
HOLD KEY "F0" AND POWER ON.

YAMAHA CVP-50
HOLD KEY "B1" AND POWER ON.

YAMAHA CVP-55
HOLD KEY "B1" AND POWER ON.

YAMAHA CVP-59
HOLD KEY "B1" AND POWER ON.

YAMAHA CVP-65
HOLD KEY "B1" AND POWER ON.

YAMAHA CVP-69
HOLD KEY "B1" AND POWER ON.

YAMAHA CVP-69A
HOLD KEY "B1" AND POWER ON.

YAMAHA CVP-70
HOLD KEY "B1" AND POWER ON.

RESETS. TXT

YAMAHA CVP-75
HOLD KEY "B1" AND POWER ON.

YAMAHA CVP-79
HOLD KEY "B1" AND POWER ON.

YAMAHA CVP-79A
HOLD KEY "B1" AND POWER ON.

YAMAHA CVP-83
HOLD KEY "B1" AND POWER ON.

YAMAHA CVP-83S
HOLD KEY "B1" AND POWER ON.

YAMAHA CVP-85
HOLD KEY "B1" AND POWER ON.

YAMAHA CVP-85A
HOLD KEY "B1" AND POWER ON.

YAMAHA CVP-87
HOLD KEY "B1" AND POWER ON.

YAMAHA CVP-87A
HOLD KEY "B1" AND POWER ON.

YAMAHA CVP-89
HOLD KEY "B1" AND POWER ON.

YAMAHA CVP-89WH
HOLD KEY "B1" AND POWER ON.

YAMAHA D5000
PRESS STORE AND POWER THEN PRESS RECALL.

YAMAHA DEQ7
HOLD DELAY/LEVEL AND PROTECT ON/OFF, POWER ON.

YAMAHA DMP-11
PRESS FADER FLIP, PARAMETER LEFT, POWER ON.

YAMAHA DMP-7
PRESS FADER FLIP, PARAMETER LEFT, POWER ON.

YAMAHA DMP9-16/8
PRESS MEMORY [RECALL], RETURN [SEL], [UTILITY],
THEN POWER ON.

YAMAHA FX-500
HOLD COMP AND MOD WHILE POWERING ON.

YAMAHA FX-770
HOLD COMP AND PLAY WHILE POWERING ON.

YAMAHA GW-10
HOLD CHO WHILE POWERING ON.

YAMAHA GW-33
HOLD DOWN/NO AND UP/YES WHILE POWERING ON.

YAMAHA MDP-2

RESETS. TXT

HOLD SHIFT AND POWER ON.

YAMAHA MFC-10
HOLD MEMORY, EDIT, AND FC EDIT AND POWER ON.

YAMAHA MLP-11
HOLD KEY "B1" AND POWER ON.

YAMAHA MLP51
HOLD KEY "FO" AND POWER ON.

YAMAHA MU-90
HOLD ENTER AND UTIL, THEN POWER ON.

YAMAHA P-100
HOLD KEY "B1" AND POWER ON.

YAMAHA P-150
HOLD KEY "B1" AND POWER ON.

YAMAHA P-300
HOLD KEY "B1" AND POWER ON.

YAMAHA P-500
HOLD KEY "B1" AND POWER ON.

YAMAHA PDP-300
HOLD KEY "FO" AND POWER ON.

YAMAHA PDP-400
HOLD KEY "B1" AND POWER ON.

YAMAHA PDP-500
HOLD KEY "B1" AND POWER ON.

YAMAHA PSR-410
HOLD [+] AND [-] AND POWER ON.

YAMAHA PSR-420
HOLD [+ / YES] AND [- / NO] AND POWER ON.

YAMAHA PSR-510
HOLD [+] AND [-] AND POWER ON.

YAMAHA PSR-520
HOLD [+ / YES] AND [- / NO] AND POWER ON.

YAMAHA PSR-6000
UTILITY MODE, RECALL PRESET DATA, SELECT ALL DATA.

YAMAHA PSR-620
HOLD [+ / YES] AND [- / NO] AND POWER ON.

YAMAHA PSR-6300
HOLD KEY "C6" AND POWER ON.

YAMAHA PSR-70
HOLD KEY "C5" AND POWER ON.

YAMAHA PSR-9000
HOLD DEMO AND POWER ON.

RESETS. TXT

YAMAHA PSR-A3
HOLD [+ / YES] AND [- / NO] AND POWER ON.

YAMAHA RX-8
HOLD STOP / CONTINUE, +1 / YES, AND -1 / NO AND POWER ON.

YAMAHA SPX-90
HOLD BALANCE, FOOT TRIGGER AND POWER ON.

YAMAHA SPX-90 I
HOLD BALANCE, FOOT TRIGGER AND POWER ON.

YAMAHA TMX
HOLD UTILITY AND STORE THEN POWER ON.

YAMAHA YDP-200
HOLD KEY "F0" OR KEY "B1", THEN POWER ON.

YAMAHA YDP-300
HOLD KEY "F0" OR KEY "B1", THEN POWER ON.

YAMAHA YDP-301
HOLD KEY "B1", THEN POWER ON.

YAMAHA YDP-88
HOLD KEY "B1", THEN POWER ON.

YAMAHA YDP-88 I
HOLD KEY "B1", THEN POWER ON.

Backups should be performed BEFORE executing factory resets or restoring factory presets data.

This information is provided as a courtesy. NO claims are made as to the accuracy of this data.