



V4B unused

(X-V) DENOTES CHANNEL SELECTED. CH-2 VOLUME, IN TO SELECT CH-1, OUT TO SELECT CH-2. (WITH FOOTSWITCH NOT CONNECTED.)

⚠ USE 9N 014700 ONLY FOR REPLACEMENT EXCEPT THOSE VERSIONS WHICH USE 9N 018764 .01/125 V.A.C. (NO SUBSTITUTION).

Ⓜ DENOTES DC VOLTAGES, WITH NO OUTPUT, WITH 20,000 OHMS PER VOLT MULTIMETER.

2 ALL CAPACITORS 600 V. MIN.

1 ALL RESISTORS 1/2 WATT ±10%.

(M.V) DENOTES TYPICAL 1KH₂ SIGNAL REQUIRED FOR 10 WATT R.M.S. OUTPUT WITH ALL CONTROLS MAX., AND BOOST OFF.

LDRs: VACTROL VTL5C1

CAUTION: 500 VOLTS AVAILABLE-DISCONNECT POWER SUPPLY AND ALLOW AT LEAST 50 SEC. FOR VOLTAGES TO BLEED OFF BEFORE SERVICING AMPLIFIER.

100V, 50/60 H₂ MODELS USE SAME HOOKUP EXCEPT TRANSFORMER IS 018542 & FUSE IS 3A/125 V. MIN.

100 TO 260 VOLTS EXPORT VERSIONS ONLY 50/60 H₂ GROUND SWITCH 047 125 V.A.C. & A.C. RECEPTACLE DELETED FOR EXPORT.

Fender / ROGERS / Rhodes

CBS MUSICAL INSTRUMENTS & DIVISION OF CBS INC. FOLEYTON, CALIFORNIA 92632

PART NAME

SCHEMATIC - CONCERT

DOMESTIC, EXPORT, JAPAN & CSA

RELEASE	SIZE	PART NO	REV
	D	019926	B
SCALE	MODEL NO	CONCERT	

Footswitch for Fender '83 Concert, Twin Reverb II

Red Jack

Tip: -6.2Vdc
Ring: Hi Gain
Shield: Gnd

Plain Jack

Tip: Clean
Ring: Reverb
Shield: Gnd

