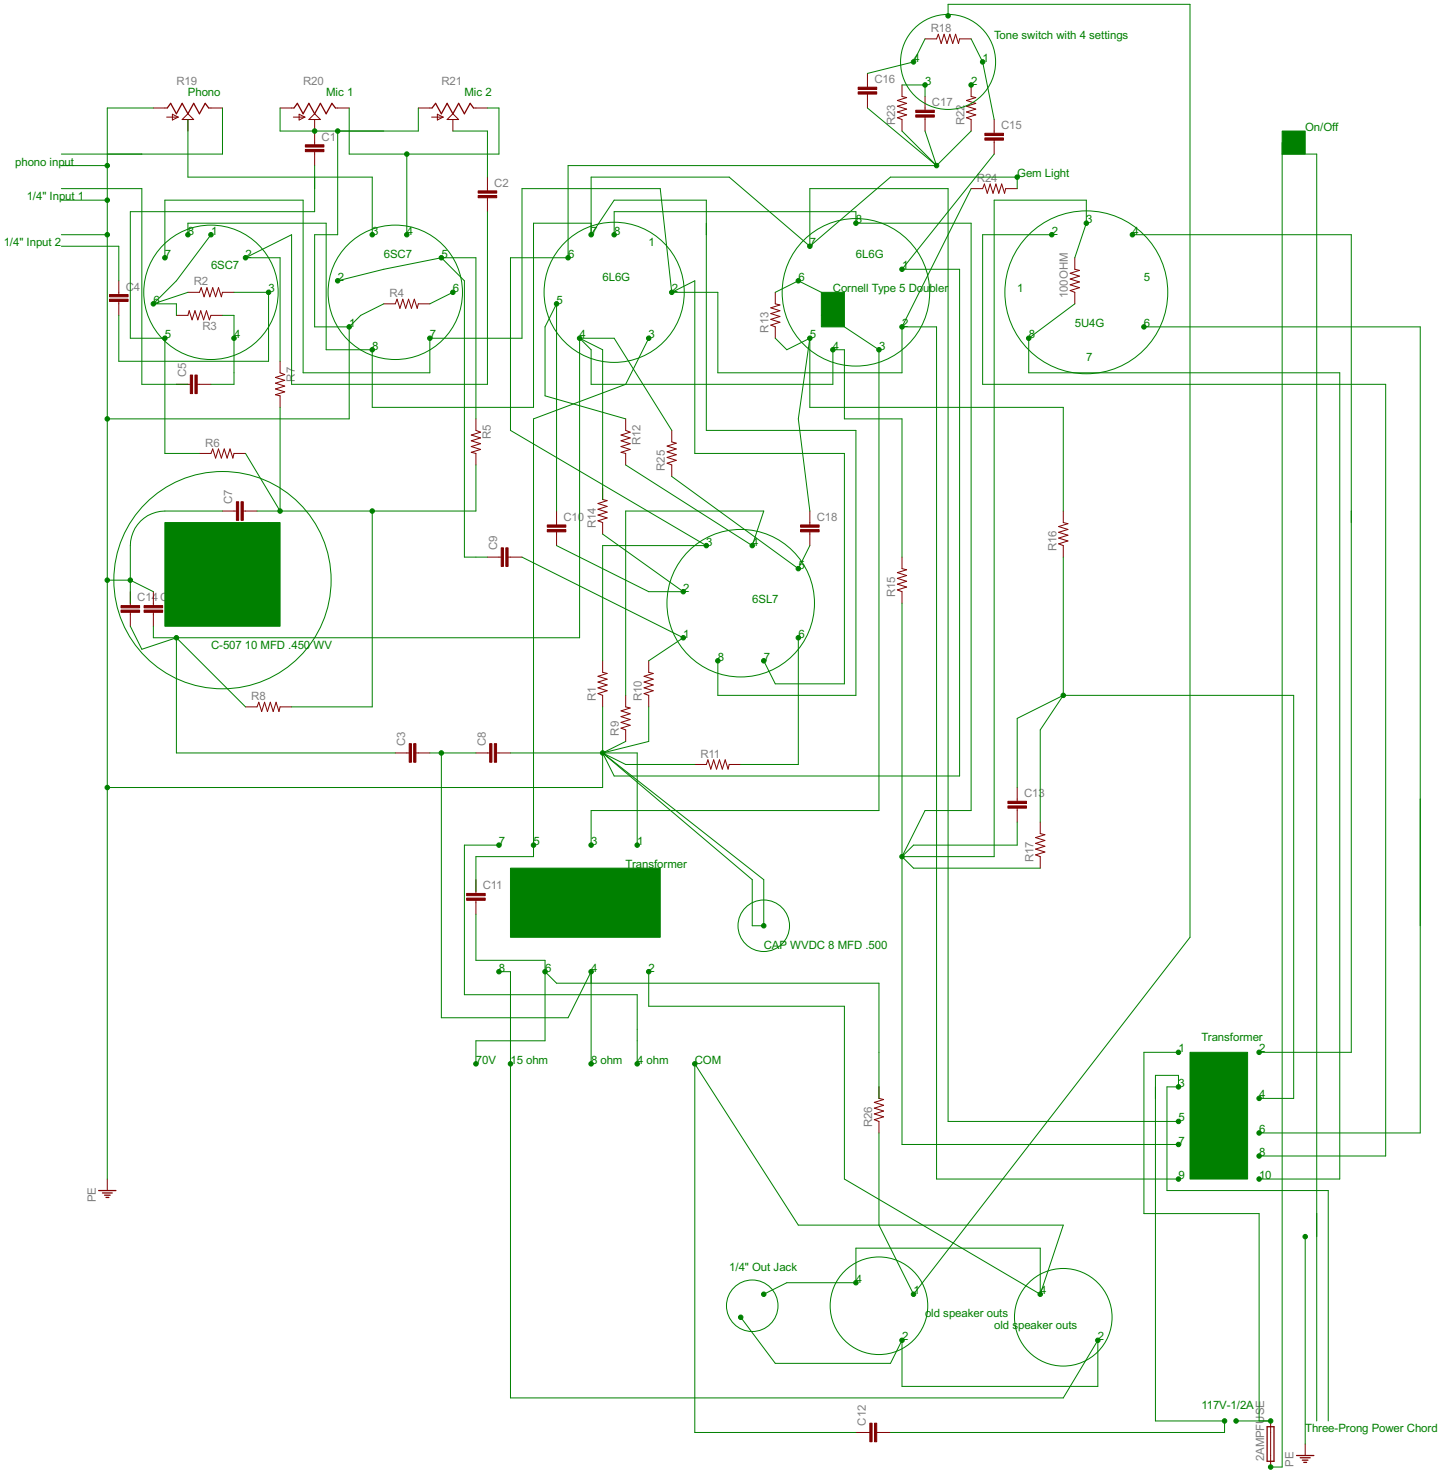
R19
Phono
R20
Mic 1
R21
Mic 2
C1
C2
phono input
1/4" Input 1
1/4" Input 2
6SC7
R2
R3
C4
C5
R7
6SC7
R4
R5
R6
C7
C-507 10 MFD .450 WV
C14
R8
6L6G
R12
R25
C10
R14
C9
6SL7
R1
R10
R9
C3
C8
R11
R18
Tone switch with 4 settings
C16
R23
C17
R22
C15
R24
Gem Light
6L6G
Cornell Type 5 Doubler
R13
C18
R15
R16
C13
R17
5U4G
100OHM
On/Off
Transformer
C11
CAP WVDC 8 MFD .500
70V
15 ohm
8 ohm
4 ohm
COM
R26
Transformer
1/4" Out Jack
old speaker outs
old speaker outs
C12
117V-1/2A
2AMPF HE
Three-Prong Power Chord
PE
PE