


EU PT

240	Gray
220	Blue
120	Brown
0	Black

- Alternate Bias Circuit
1. Remove 6V6 cathode resistor and capacitor.
 2. Ground cathodes of 6V6 tubes.
 3. Disconnect ground of junction of 220K resistors going to grids of 6V6 tubes
 4. Connect circuitry as described below

(Parts are not provided for this mod)

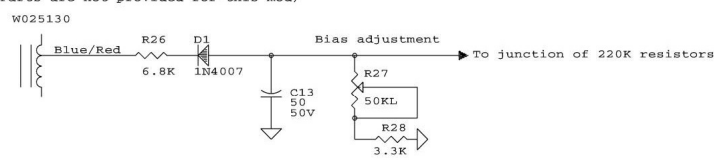

Weber Kits		
Title	SE3 (Weber Version)	
Size	Document Number	REV
B		
Date:	January 16, 2007	Sheet 1 of 1