
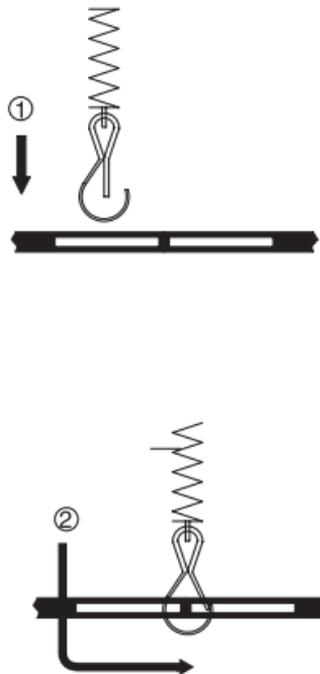


# TUBE RETAINER-2

S-H145

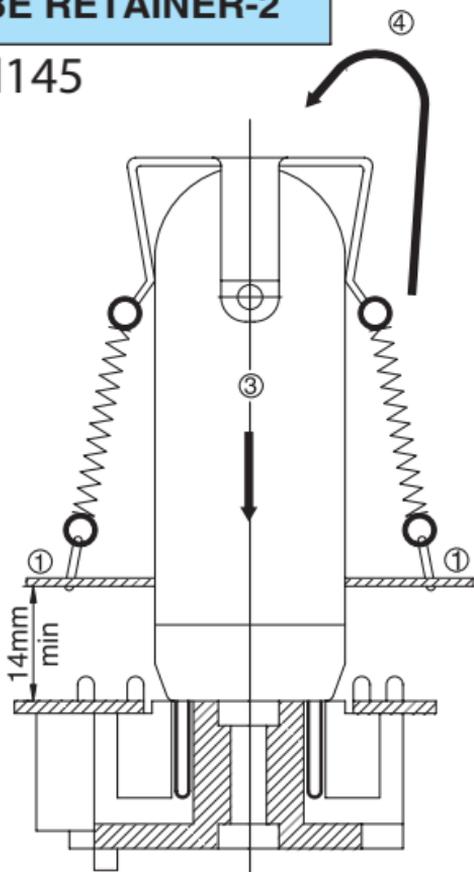

## Progress order

1. Insert hook to the chassis hole
2. Push and hook up the hooks to the chassis
3. Insert the vacuum tube into the socket
4. Pull up tube retainer-2 and cap it on the top of tube