



# Footswitch Wiring Guide

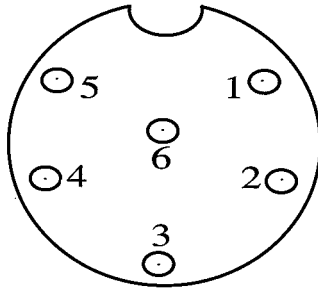

326 Hwy 11/80 East Meridian, MS 39301


# CENTURION MK-3

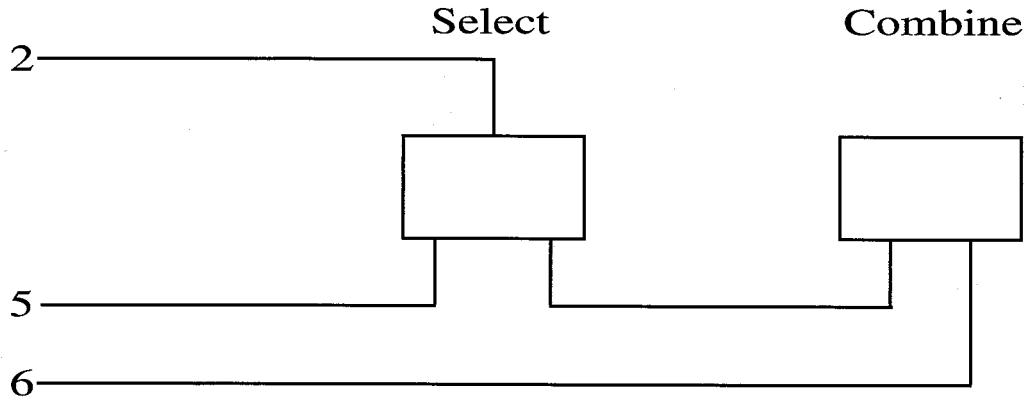



← solder side of 6 pin DIN

---

# 5150 FTSW


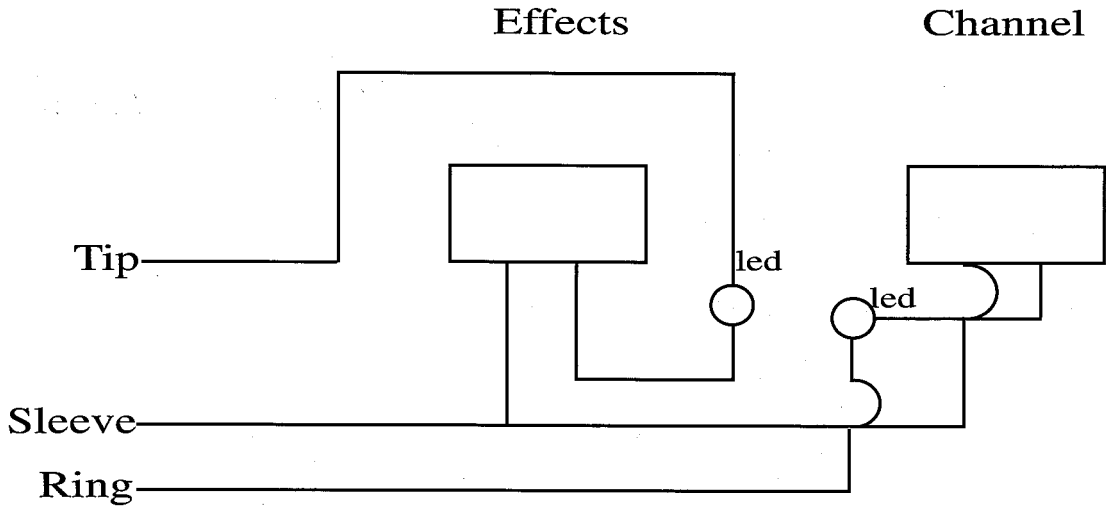


# RENOWN-112/212 #57022

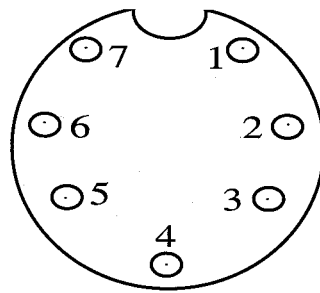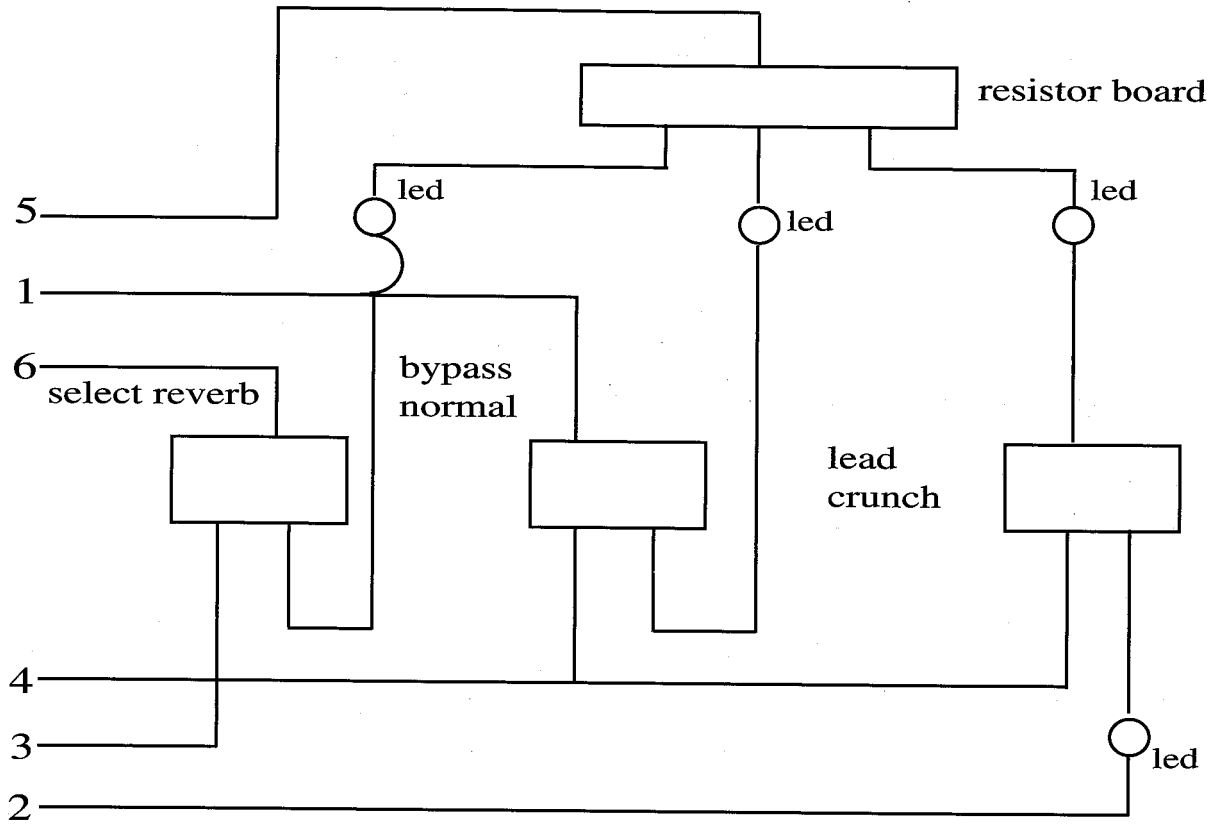



← solder side of 7 pin DIN

# TRIUMPH PAG-60/120

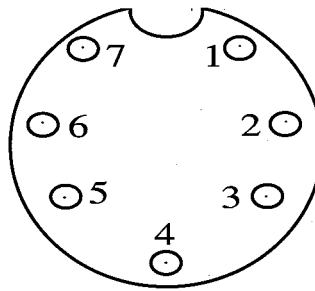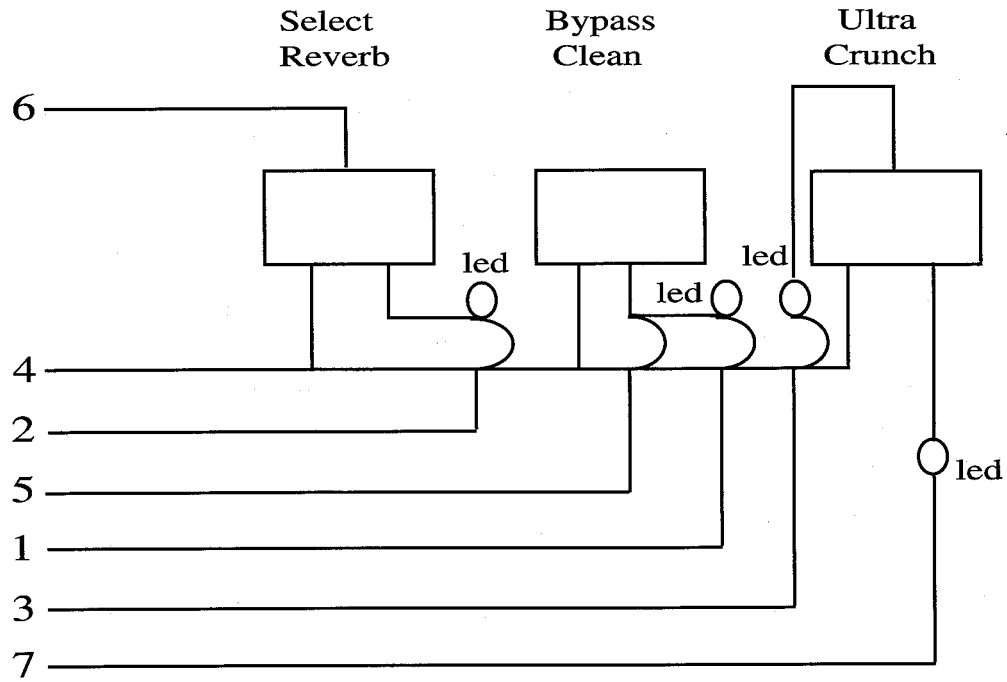



← solder side of 7 pin DIN

# Stereo Chorus 400

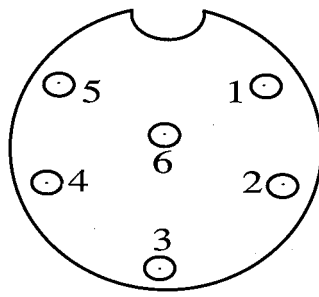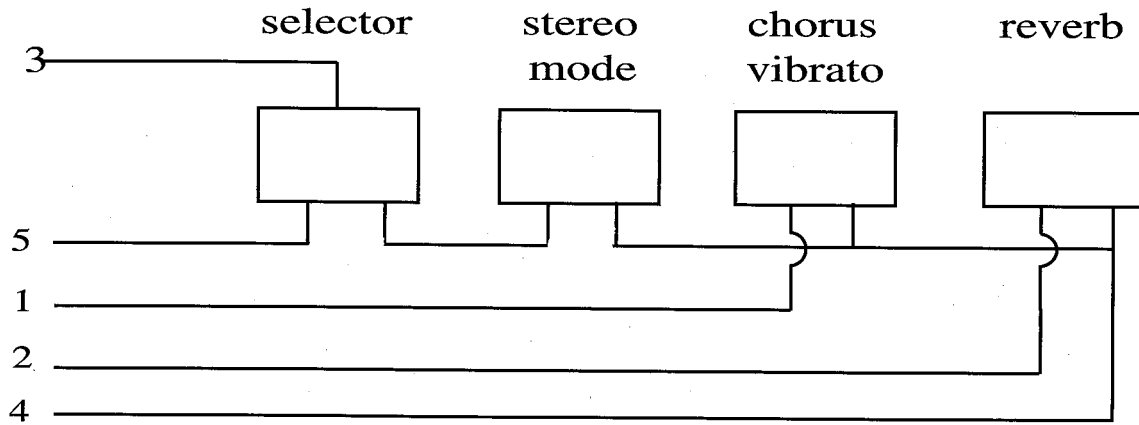



---

# CLASSIC VTX Footswitch

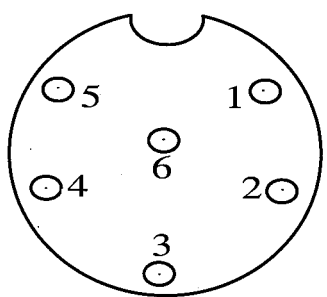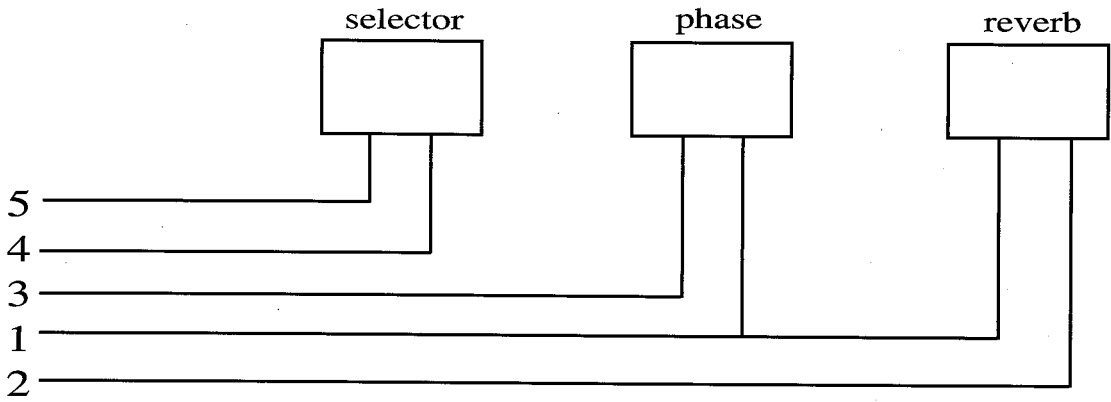



← solder side of 6 pin DIN

# Classic Chorus 212, Studio Chorus 210, Backstage 208

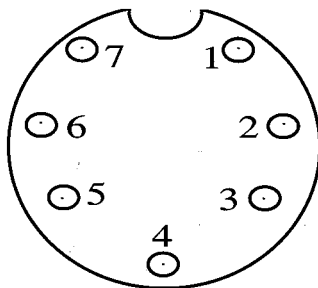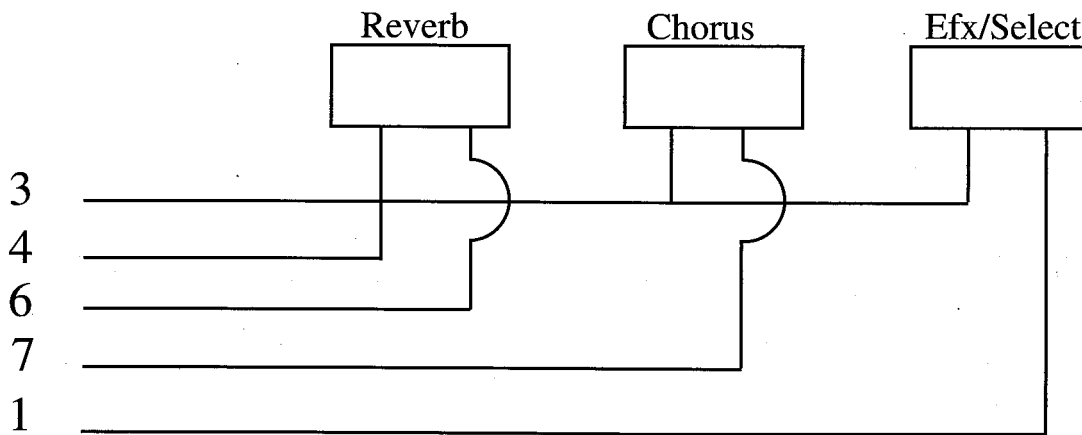



← solder side of 7 pin DIM

## Stereo Chorus 212

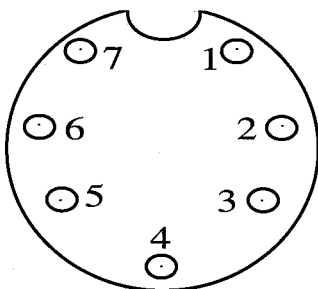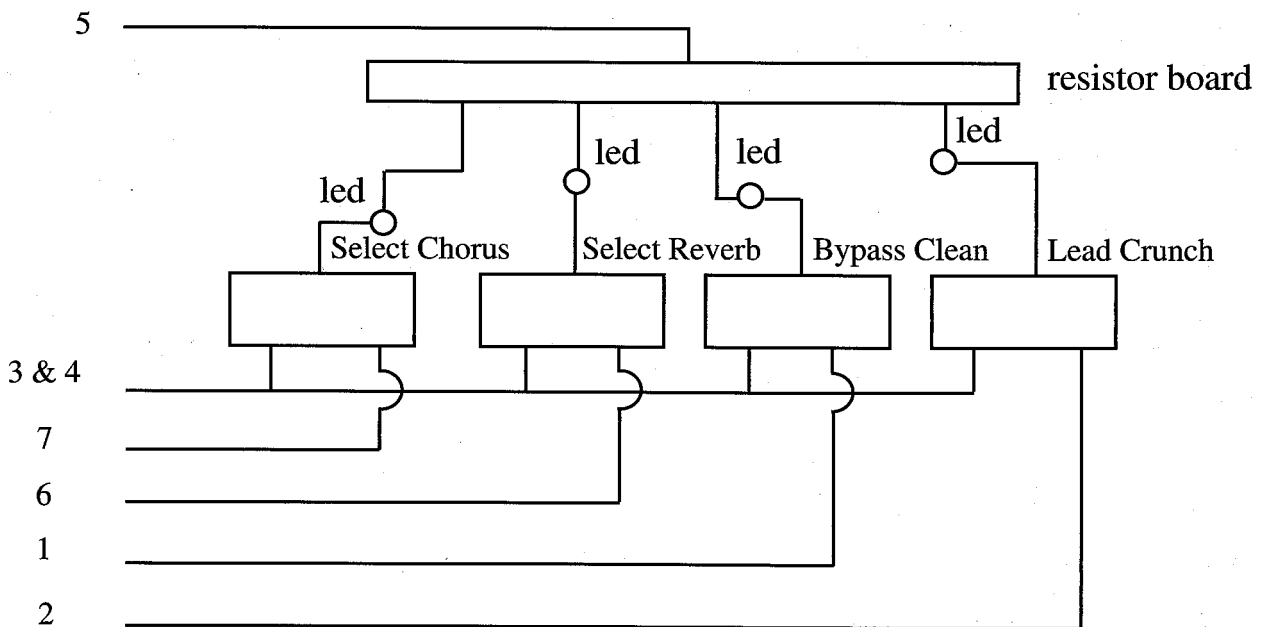



← solder side of 7 pin DIM

# HERITAGE Footswitch

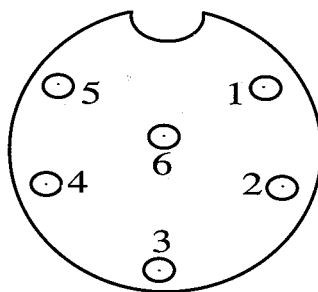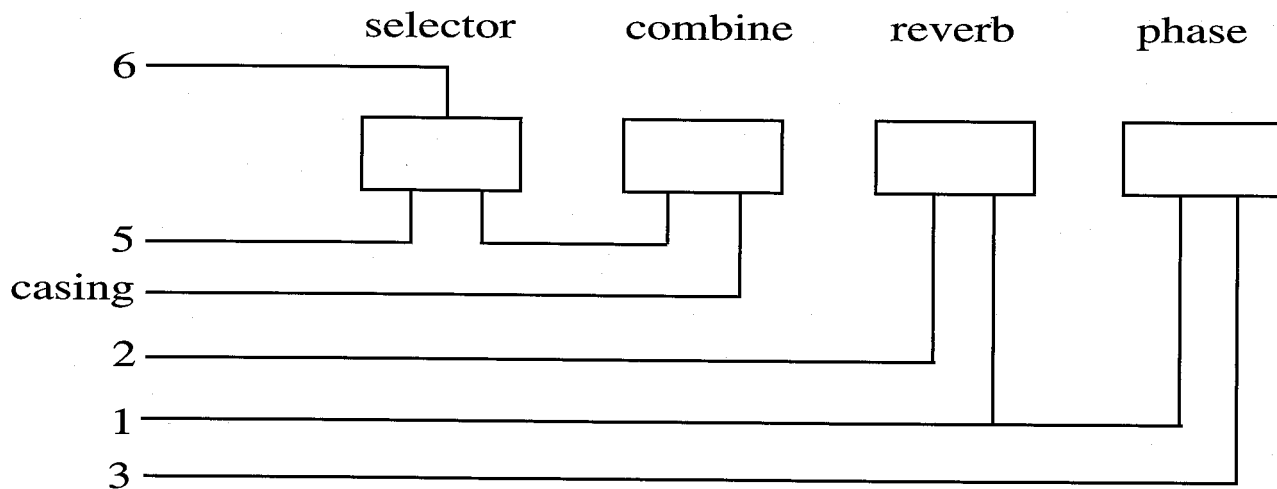



← solder side of 6 pin DIN

# Automix Footswitch (Mace 1975, Deuce "B", Deuce VT, Musician MK-3, Classic "B", Classic VT, Standard B, Roadmaster "A")

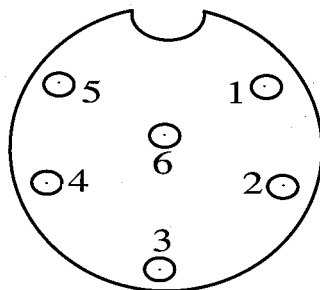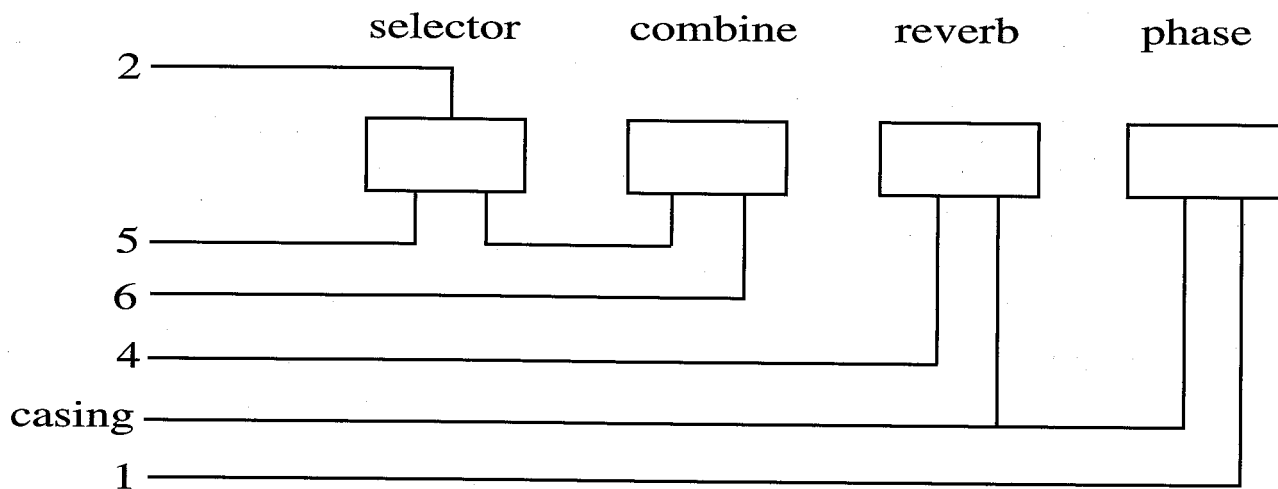



← solder side of 6 pin DIN

# Studio Chorus 70/Classic Chorus 130 Footswitch

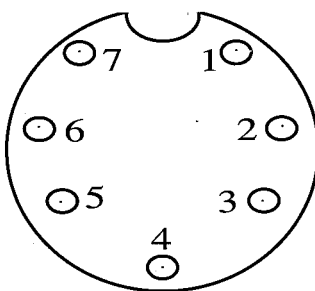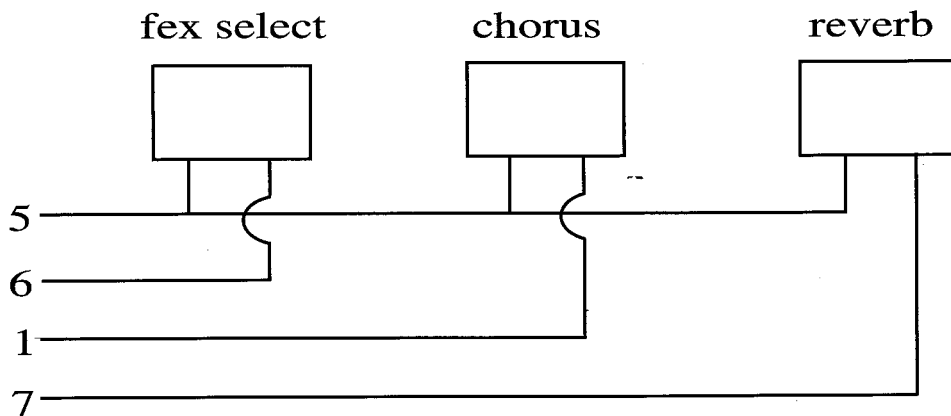

← solder side of 6 pin DIN



# RENOWN/RENOWN-400 Footswitch

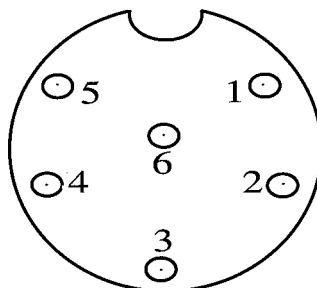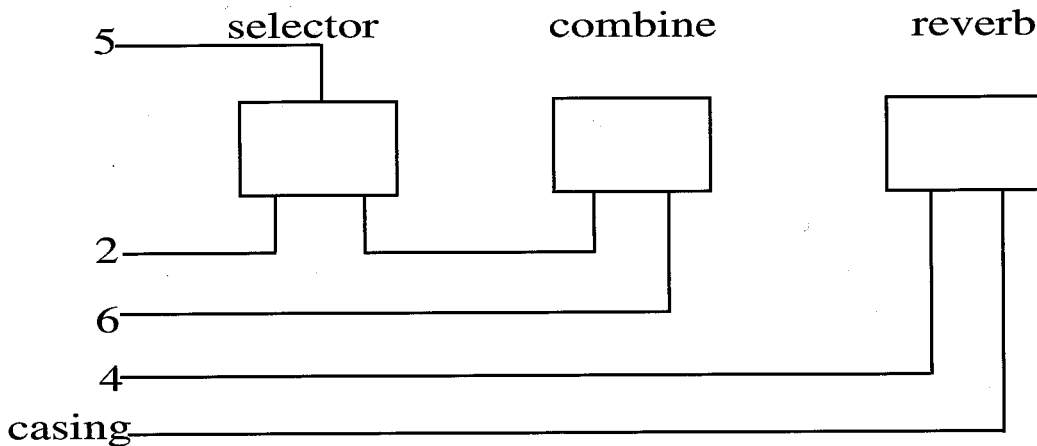

← solder side of 6 pin DIN





# ARTIST, CITATION, STANDARD MK-3

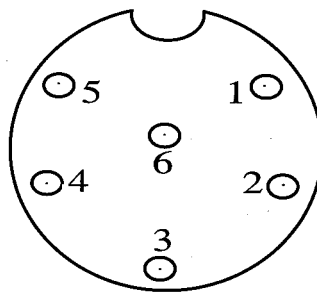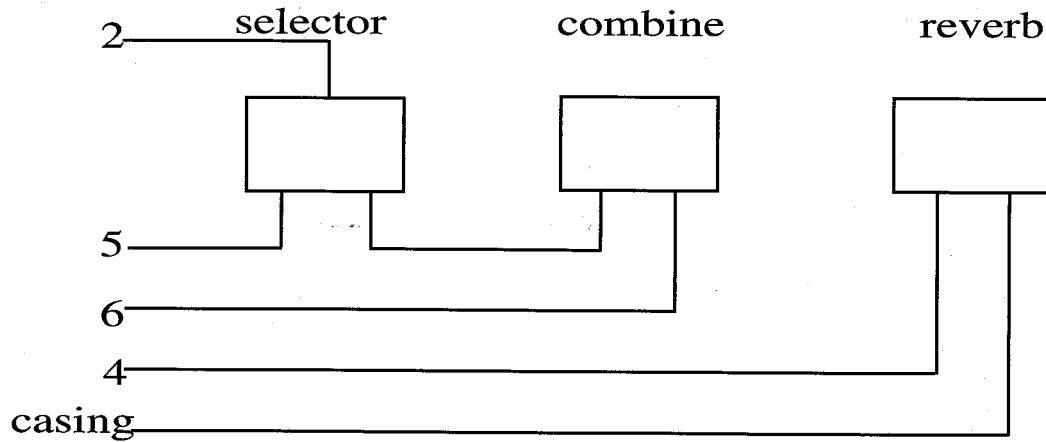

← solder side of 6 pin DIN



---

## MS VTX Footswitch

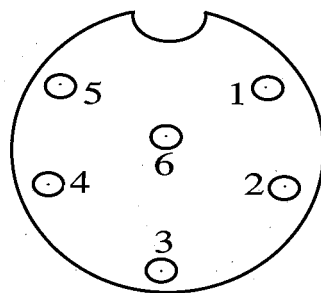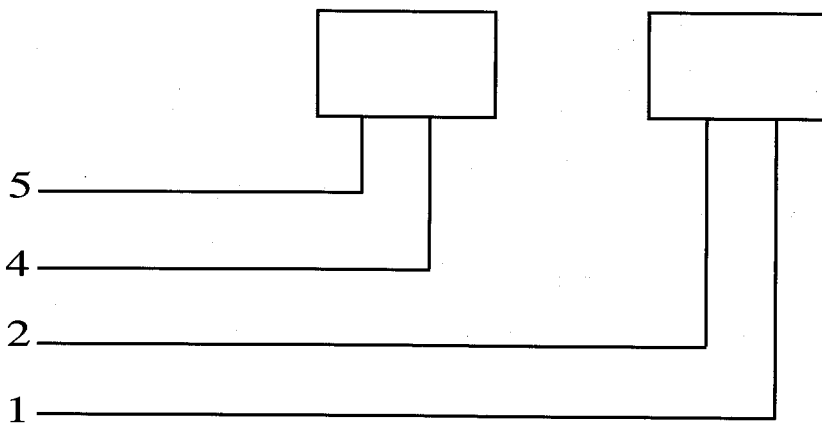

← solder side of 6 pin DIN



# Austin 400

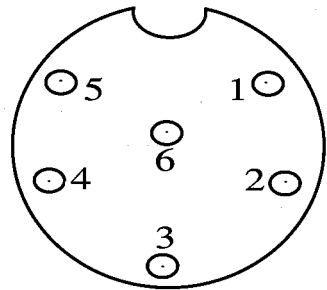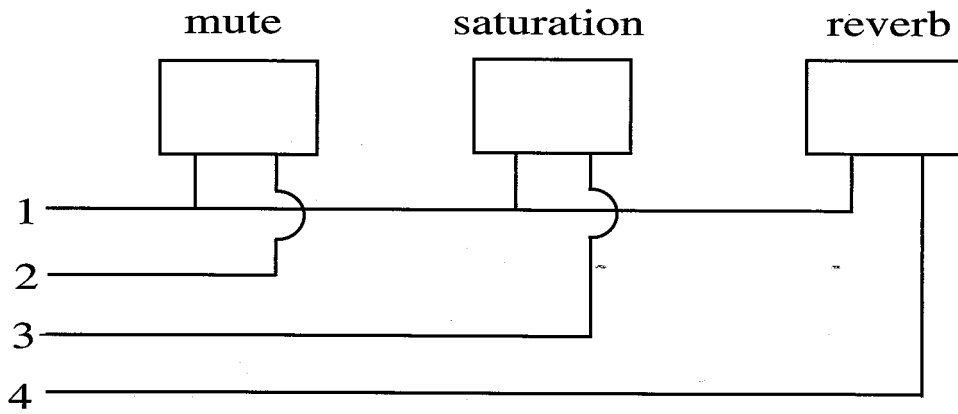

← solder side of 6 pin DIN



---

# Session 500

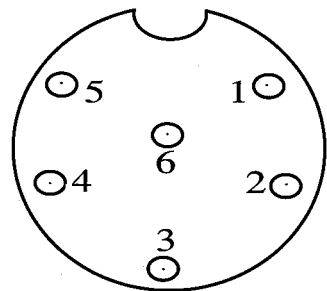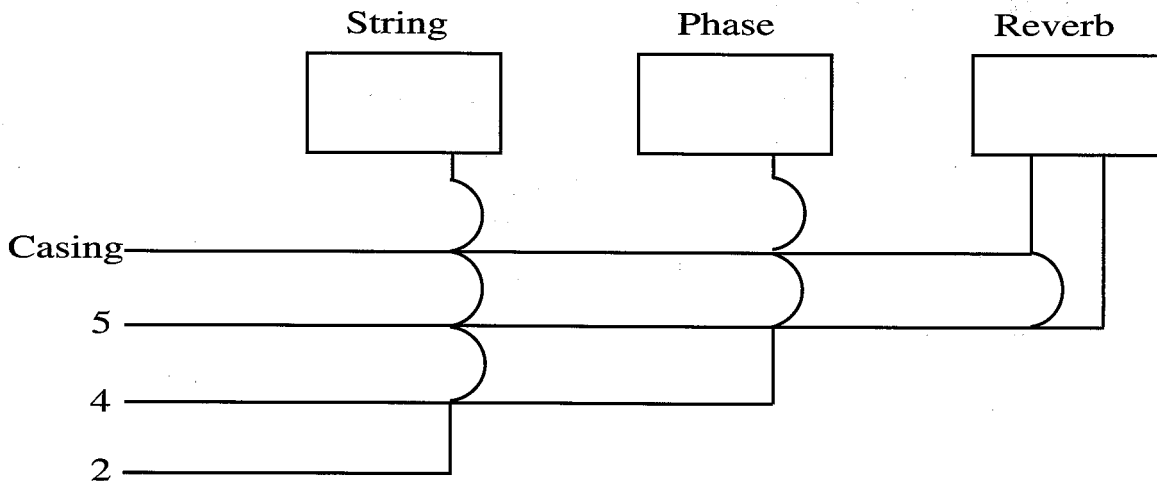



← solder side of 6 pin DIN

# MUSICIAN-B 5 BUTTON FTSW

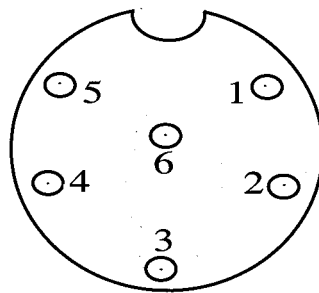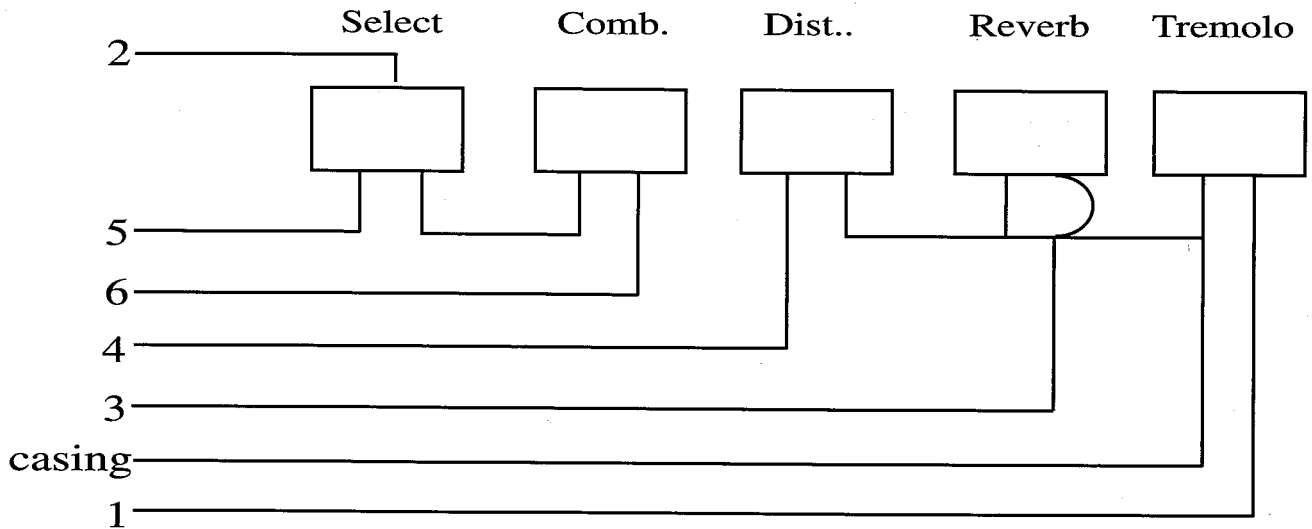



← solder side of 6 pin DIN

# SESSION-400 LTD FTSW

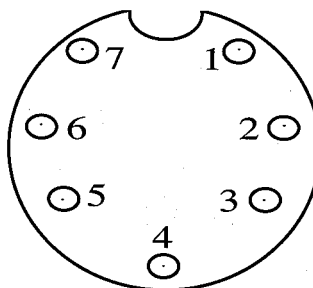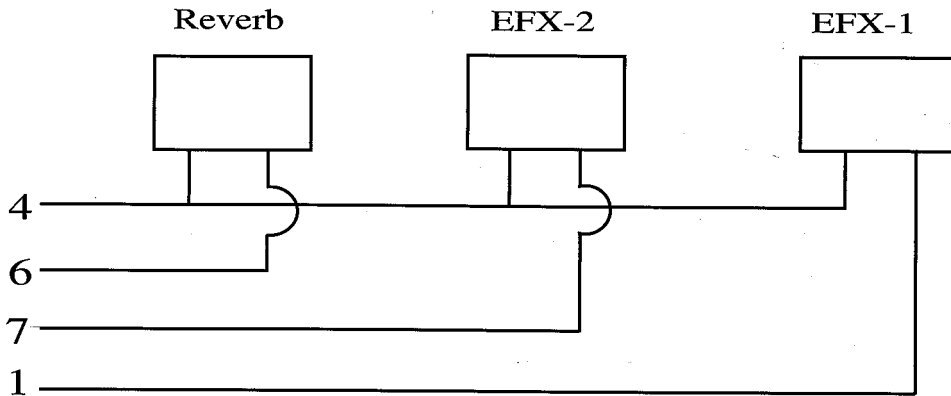

← solder side of 7 pin DIN

# TRIUMPH PAG-60/120

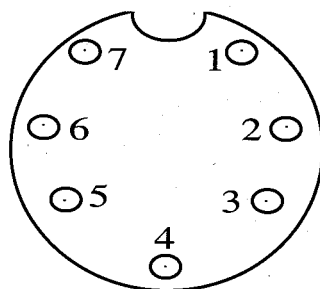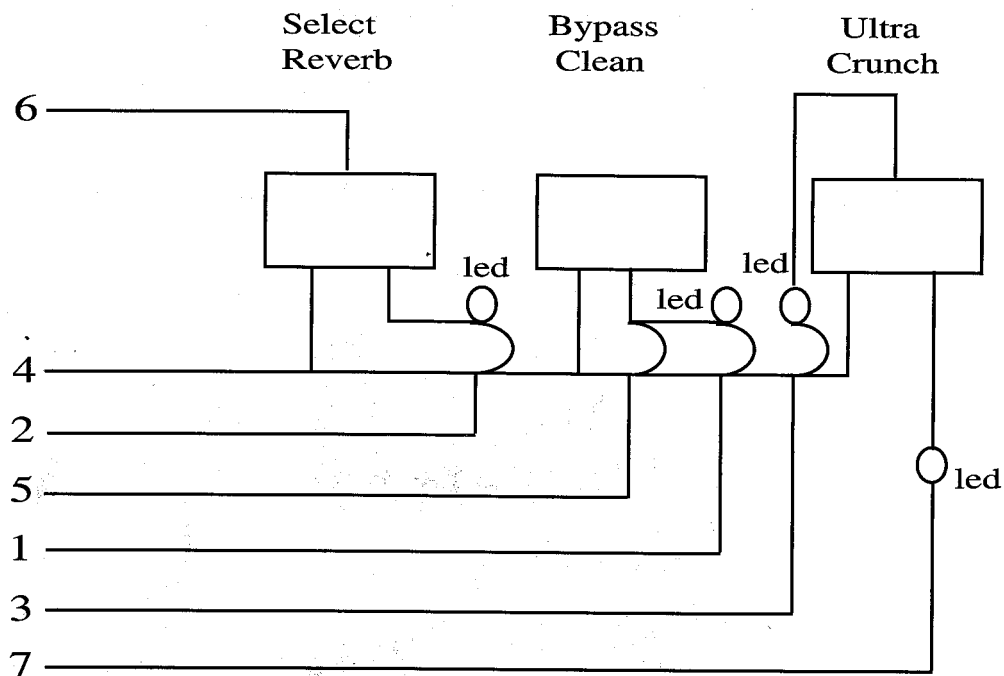

← solder side of 7 pin DIN



PEAVEY ELECTRONICS CORPORATION  
711 "A" STREET MERIDIAN, MS 39301  
(601) 483-5365 FAX (601) 486-1278