



Footswitch Wiring Guide

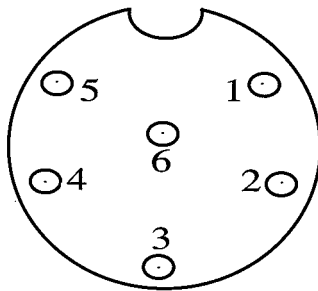


326 Hwy 11/80 East Meridian, MS 39301

CENTURION MK-3


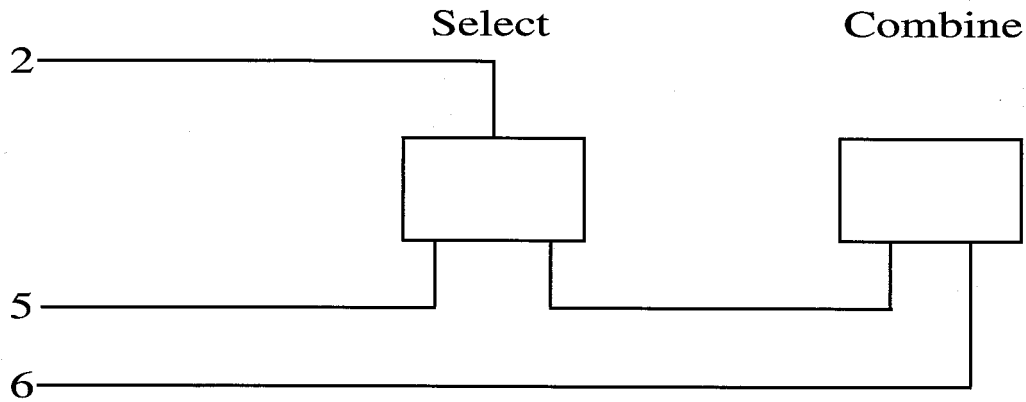


← solder side of 6 pin DIN

5150 FTSW


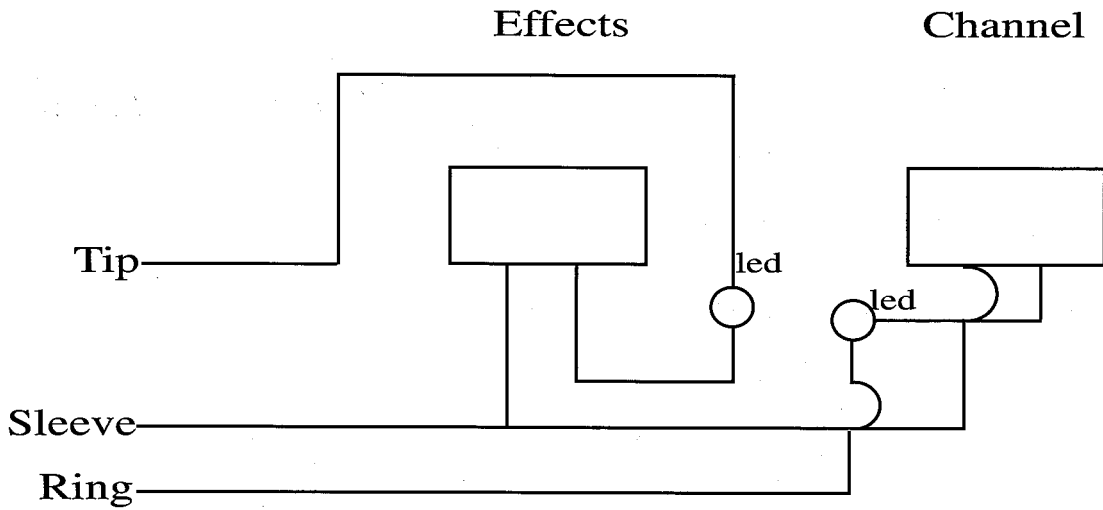


RENOWN-112/212 #57022

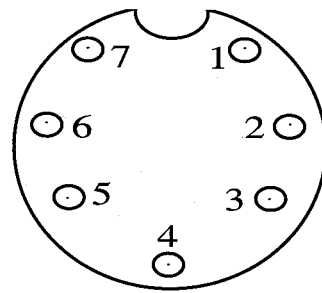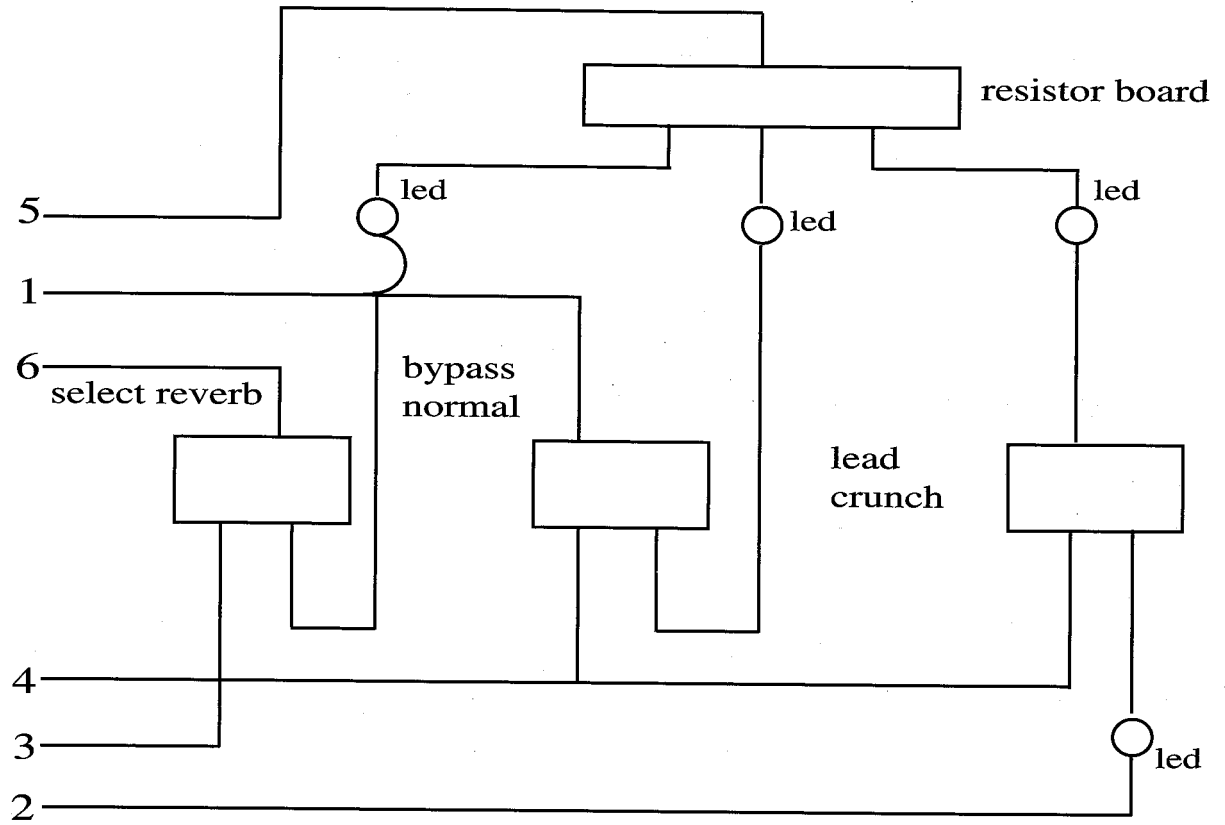



← solder side of 7 pin DIN

TRIUMPH PAG-60/120

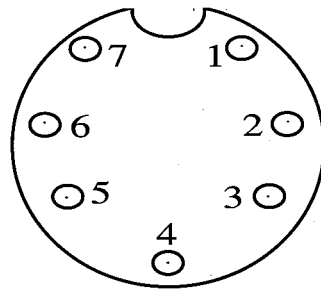
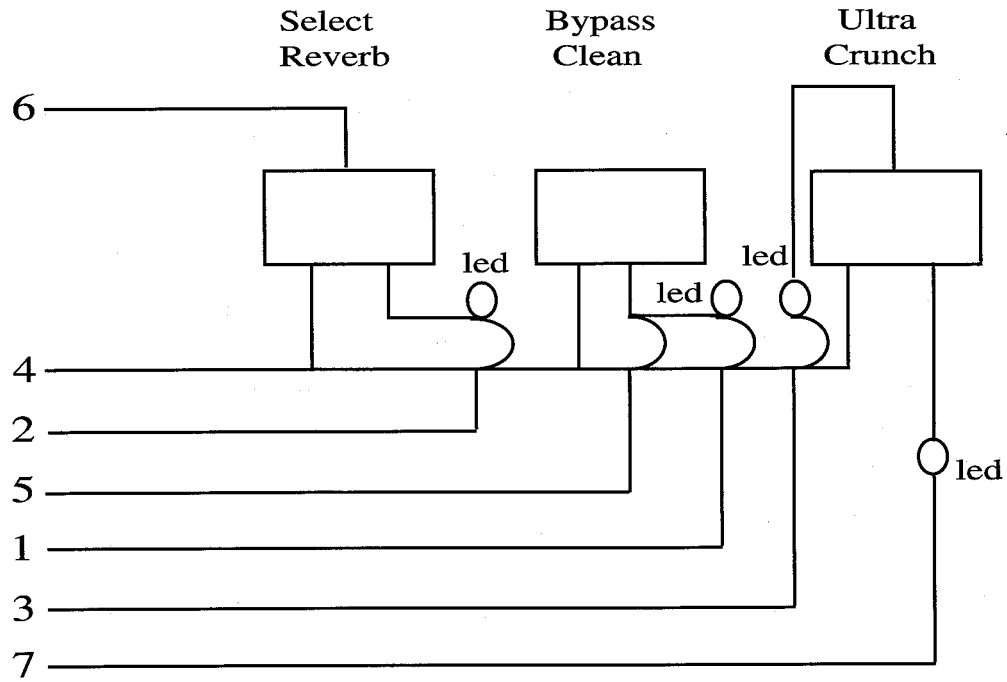


← solder side of 7 pin DIN

Stereo Chorus 400

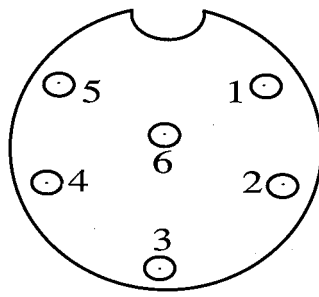
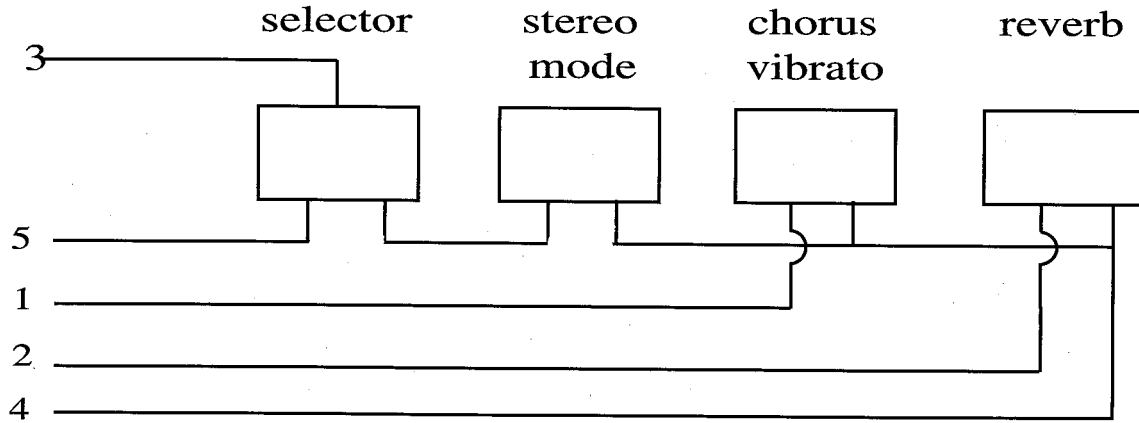


CLASSIC VTX Footswitch

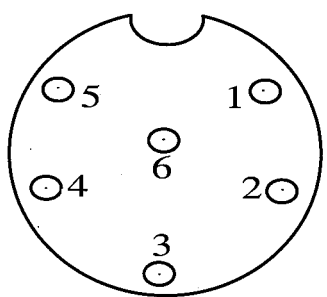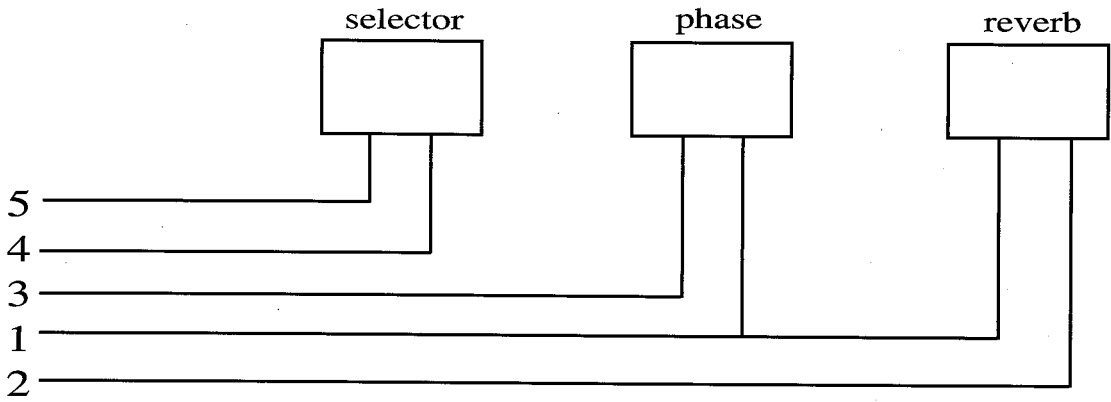



← solder side of 6 pin DIN

Classic Chorus 212, Studio Chorus 210, Backstage 208

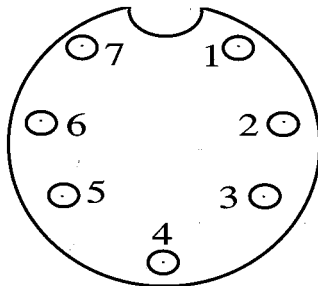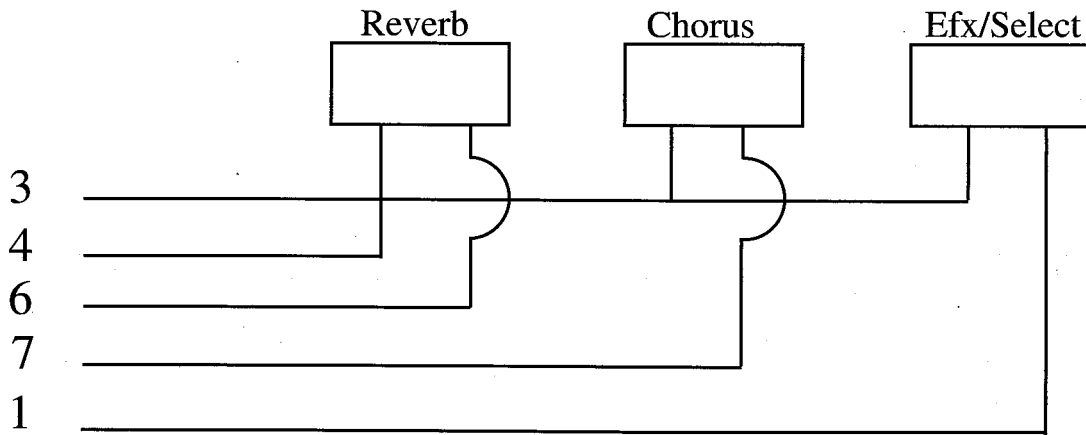



← solder side of 7 pin DIM

Stereo Chorus 212

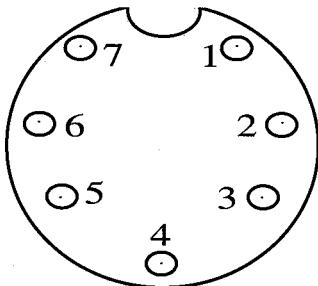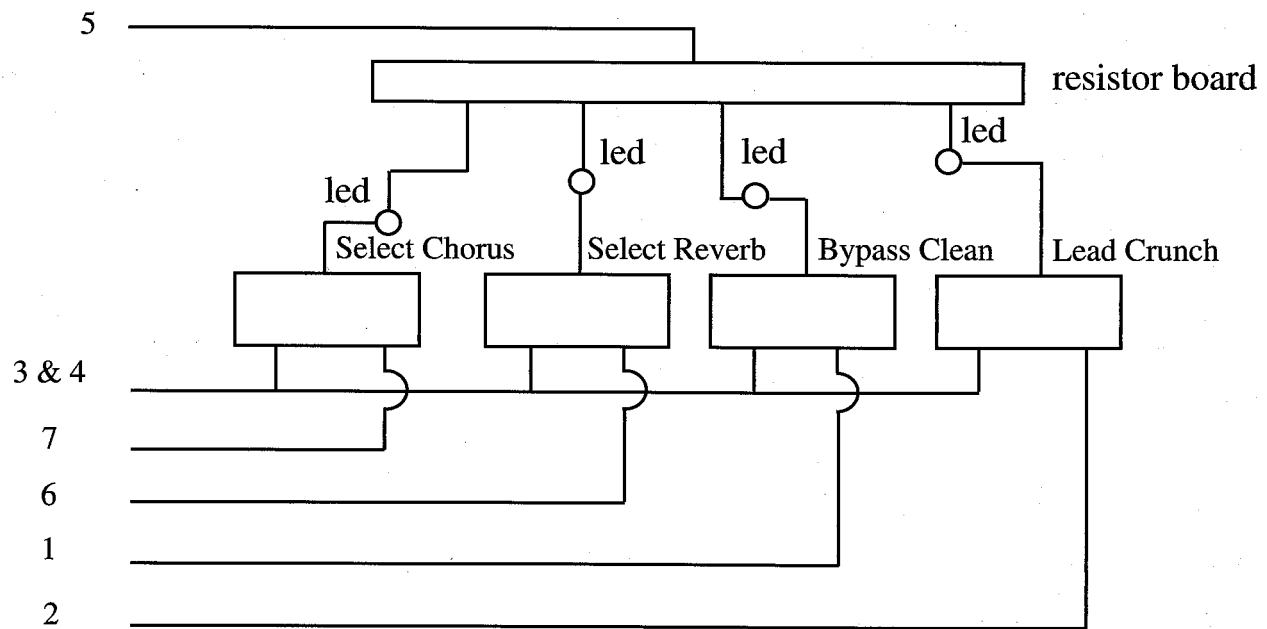



← solder side of 7 pin DIM

HERITAGE Footswitch

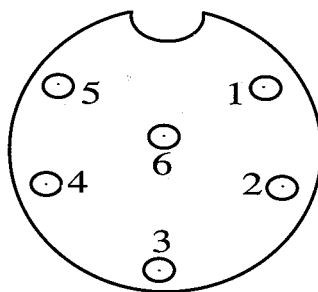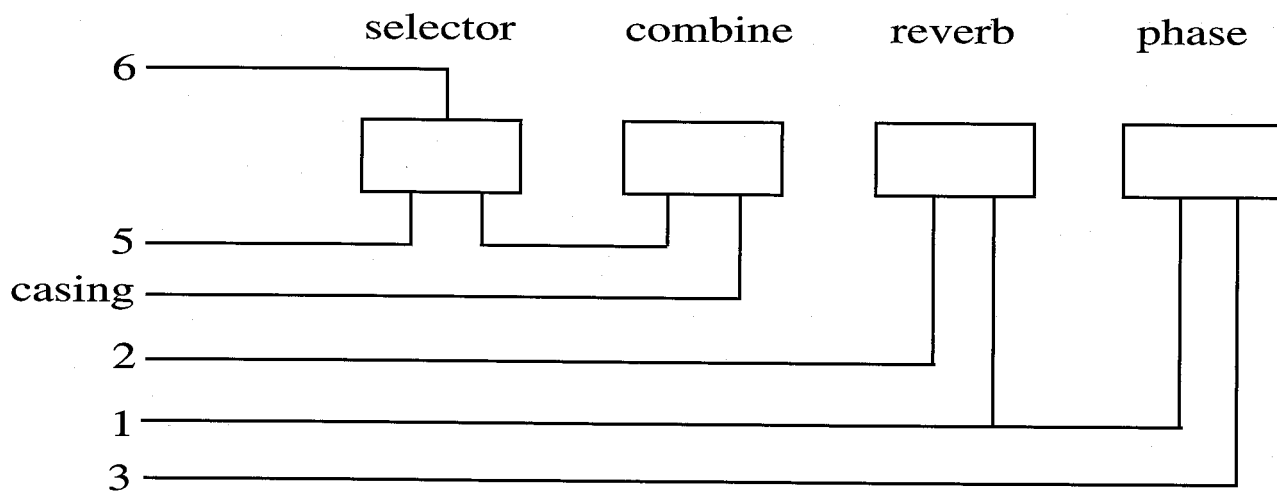



← solder side of 6 pin DIN

Automix Footswitch (Mace 1975, Deuce "B", Deuce VT, Musician MK-3, Classic "B", Classic VT, Standard B, Roadmaster "A")

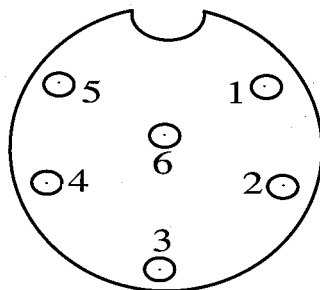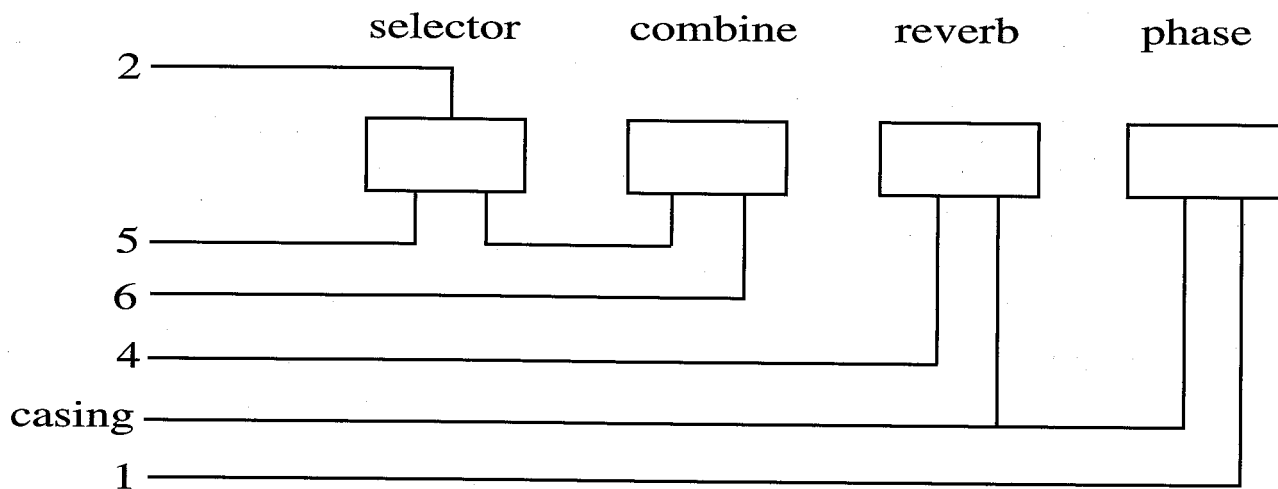



← solder side of 6 pin DIN

Studio Chorus 70/Classic Chorus 130 Footswitch

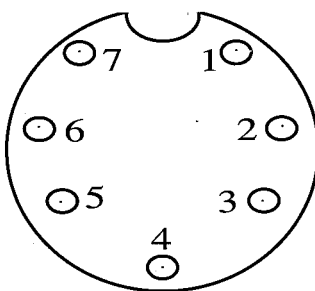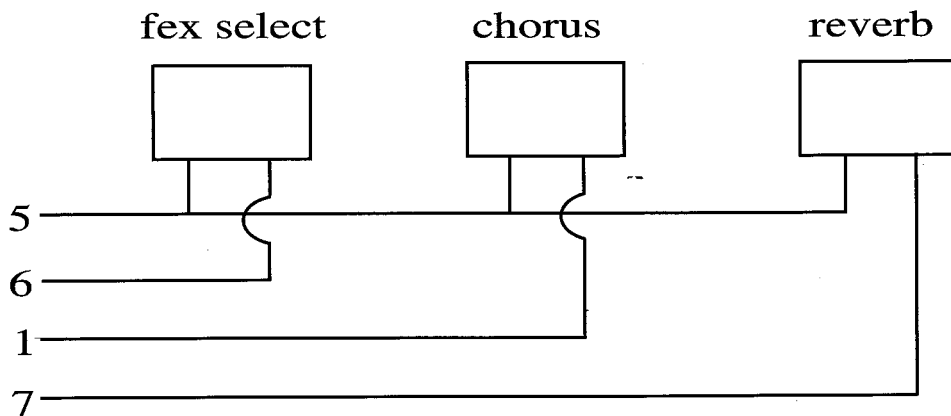



← solder side of 6 pin DIN

RENOWN/RENOWN-400 Footswitch

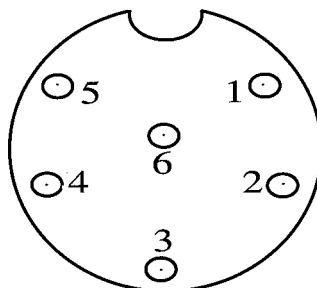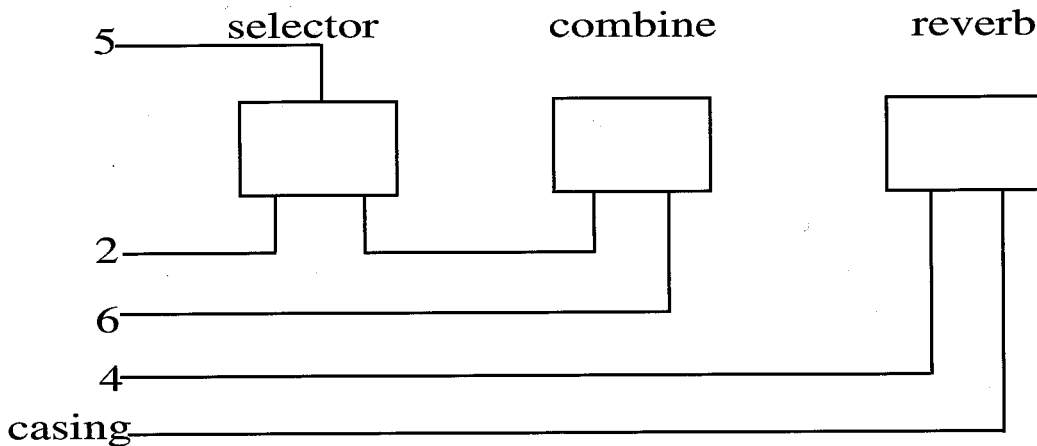



← solder side of 6 pin DIN

ARTIST, CITATION, STANDARD MK-3

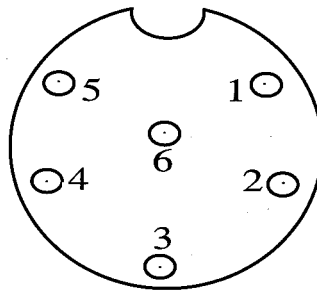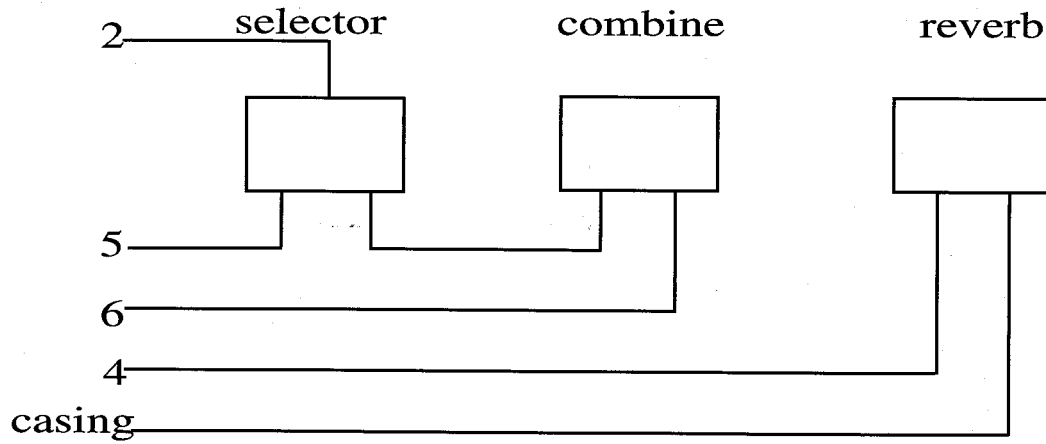



← solder side of 6 pin DIN

MS VTX Footswitch

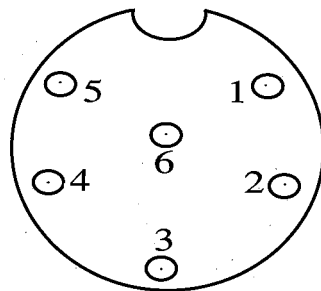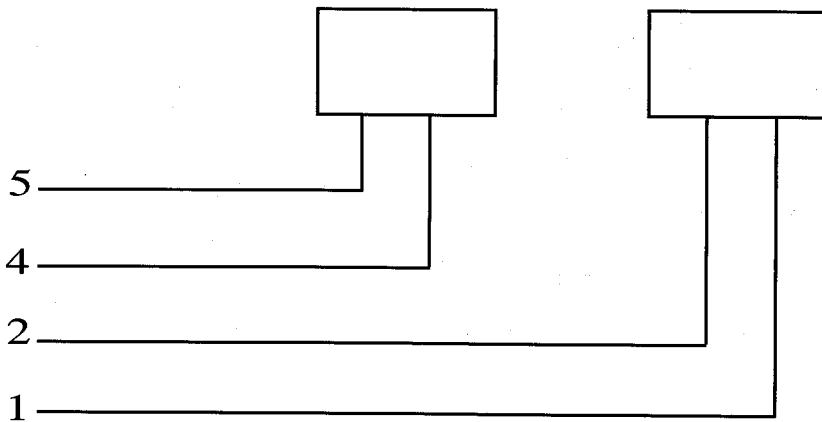



← solder side of 6 pin DIN

Austin 400

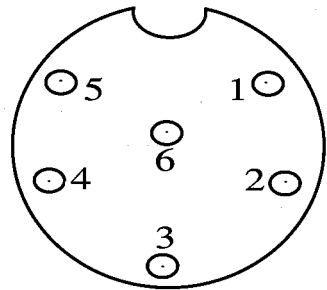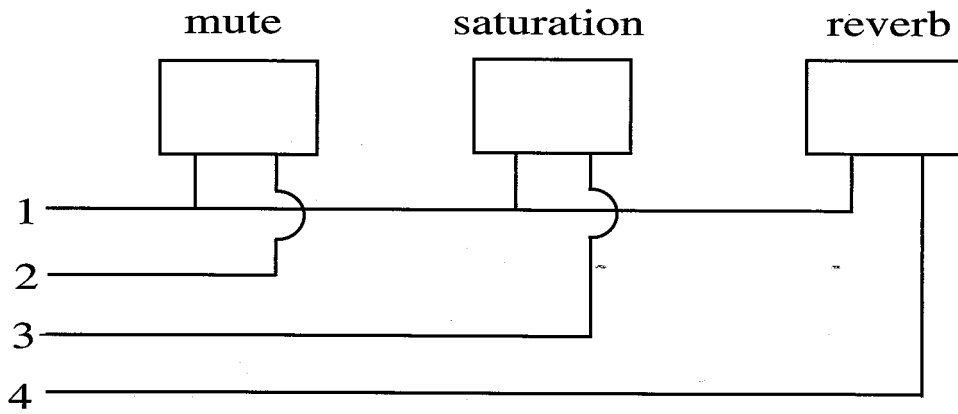



← solder side of 6 pin DIN

Session 500

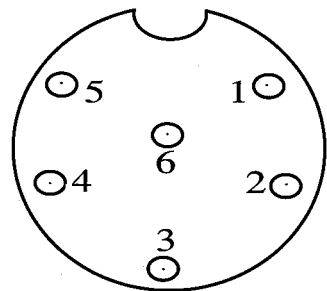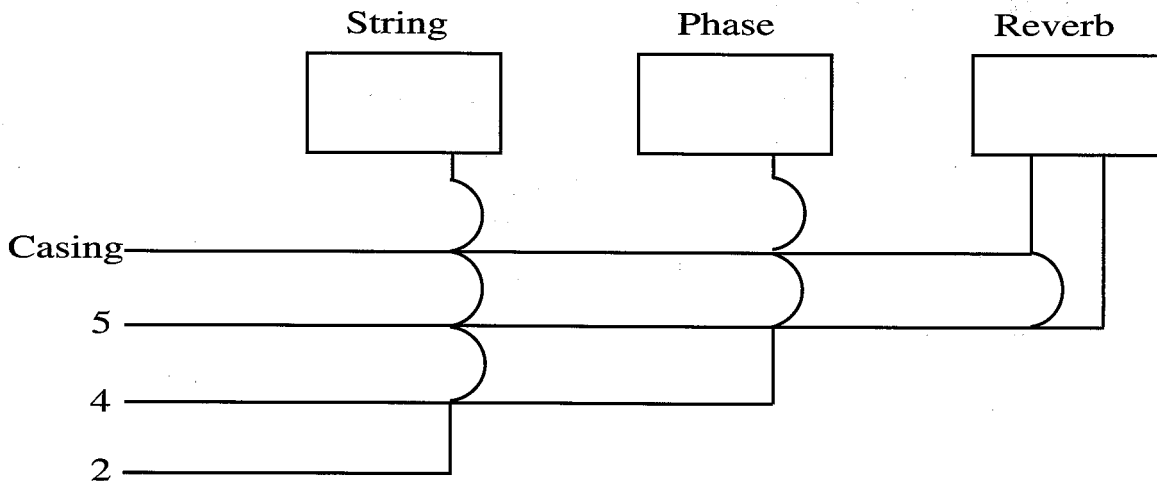



← solder side of 6 pin DIN

MUSICIAN-B 5 BUTTON FTSW

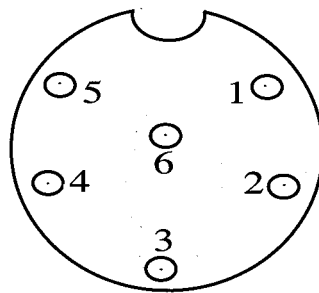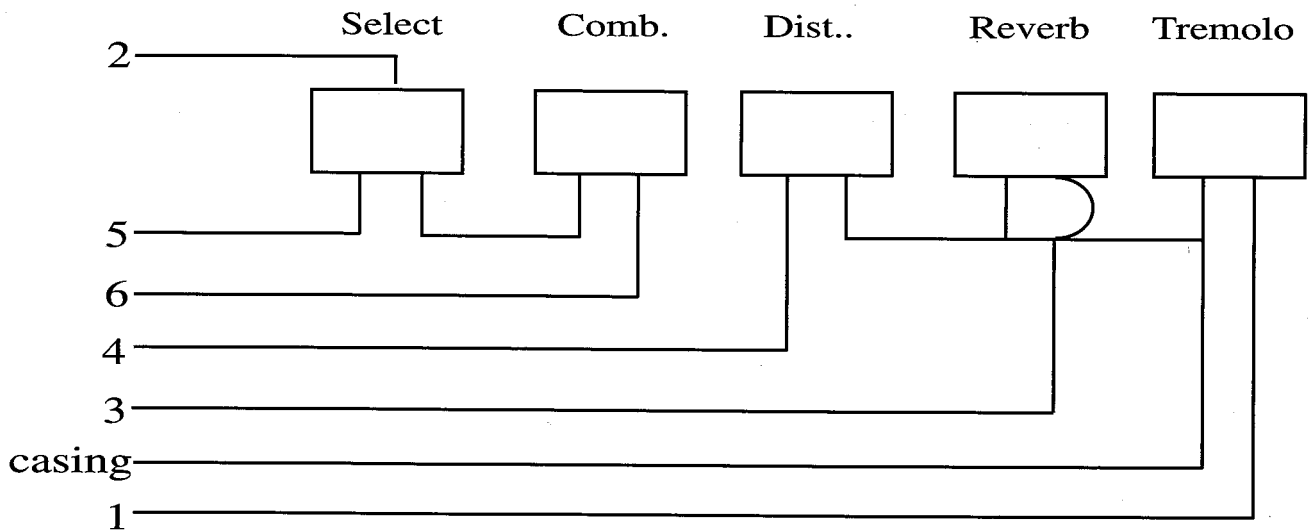



← solder side of 6 pin DIN

SESSION-400 LTD FTSW

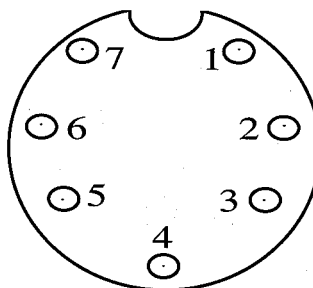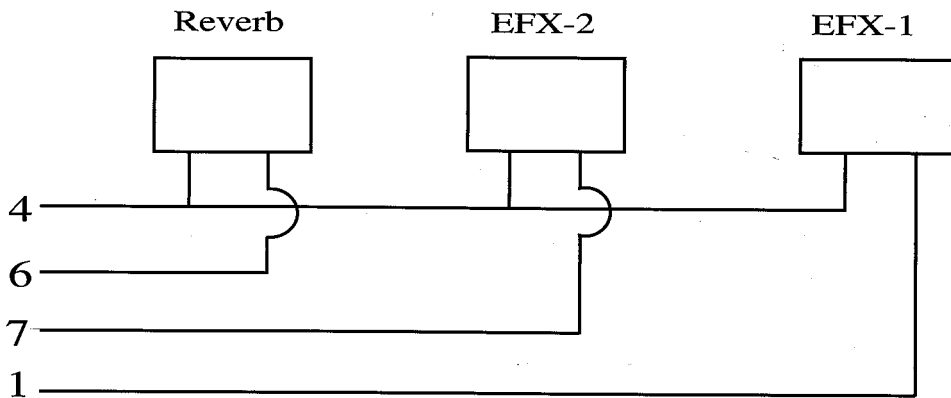

← solder side of 7 pin DIN

TRIUMPH PAG-60/120

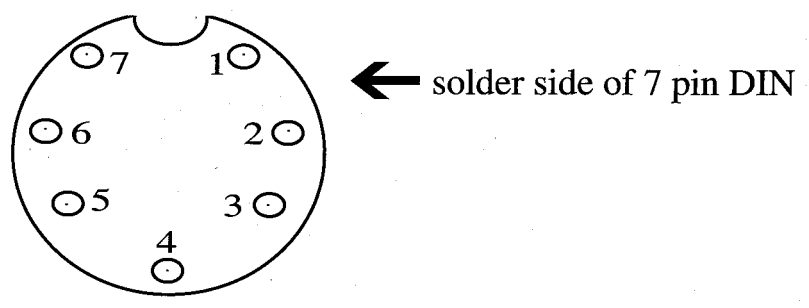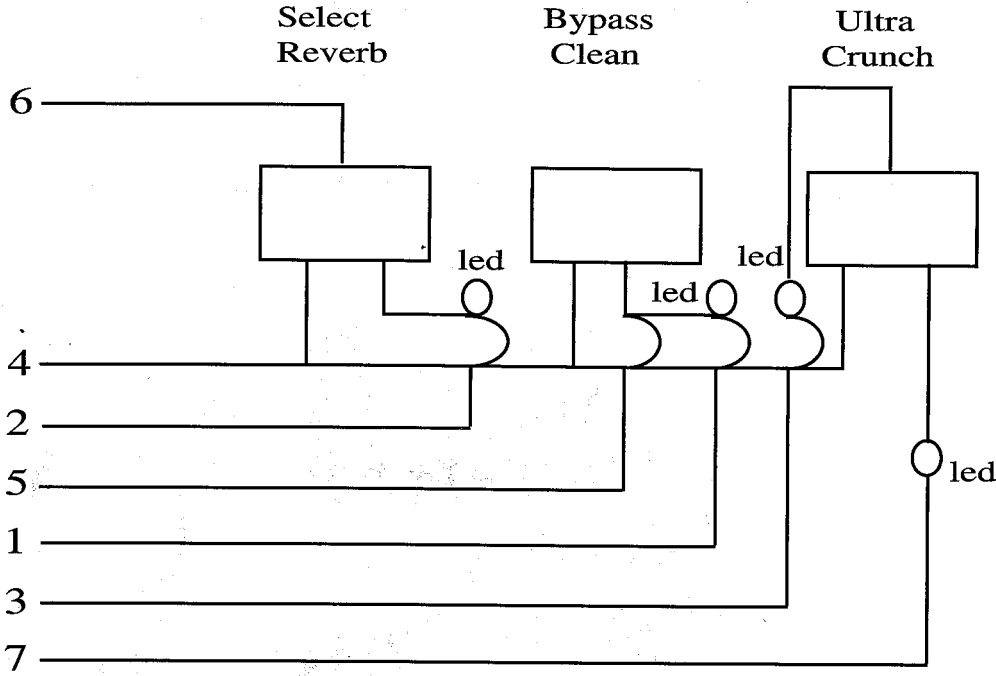

PEAVEY ELECTRONICS CORPORATION
711 "A" STREET MERIDIAN, MS 39301
(601) 483-5365 FAX (601) 486-1278