


Ingnor VCV40 - Presence pot  
to Master Volume mod WITH  
Reverb working correctly.

Can also use Potentiometer  
C52 to R49 }  
Add resistor = 10kΩ to retain Presence control

Cut trace lines  
on circuit board  
Add .2uf 63v cap where Red lines w/  
circles are. (5)

1@0.000Y2@6.400

BlankSize: 18600x12

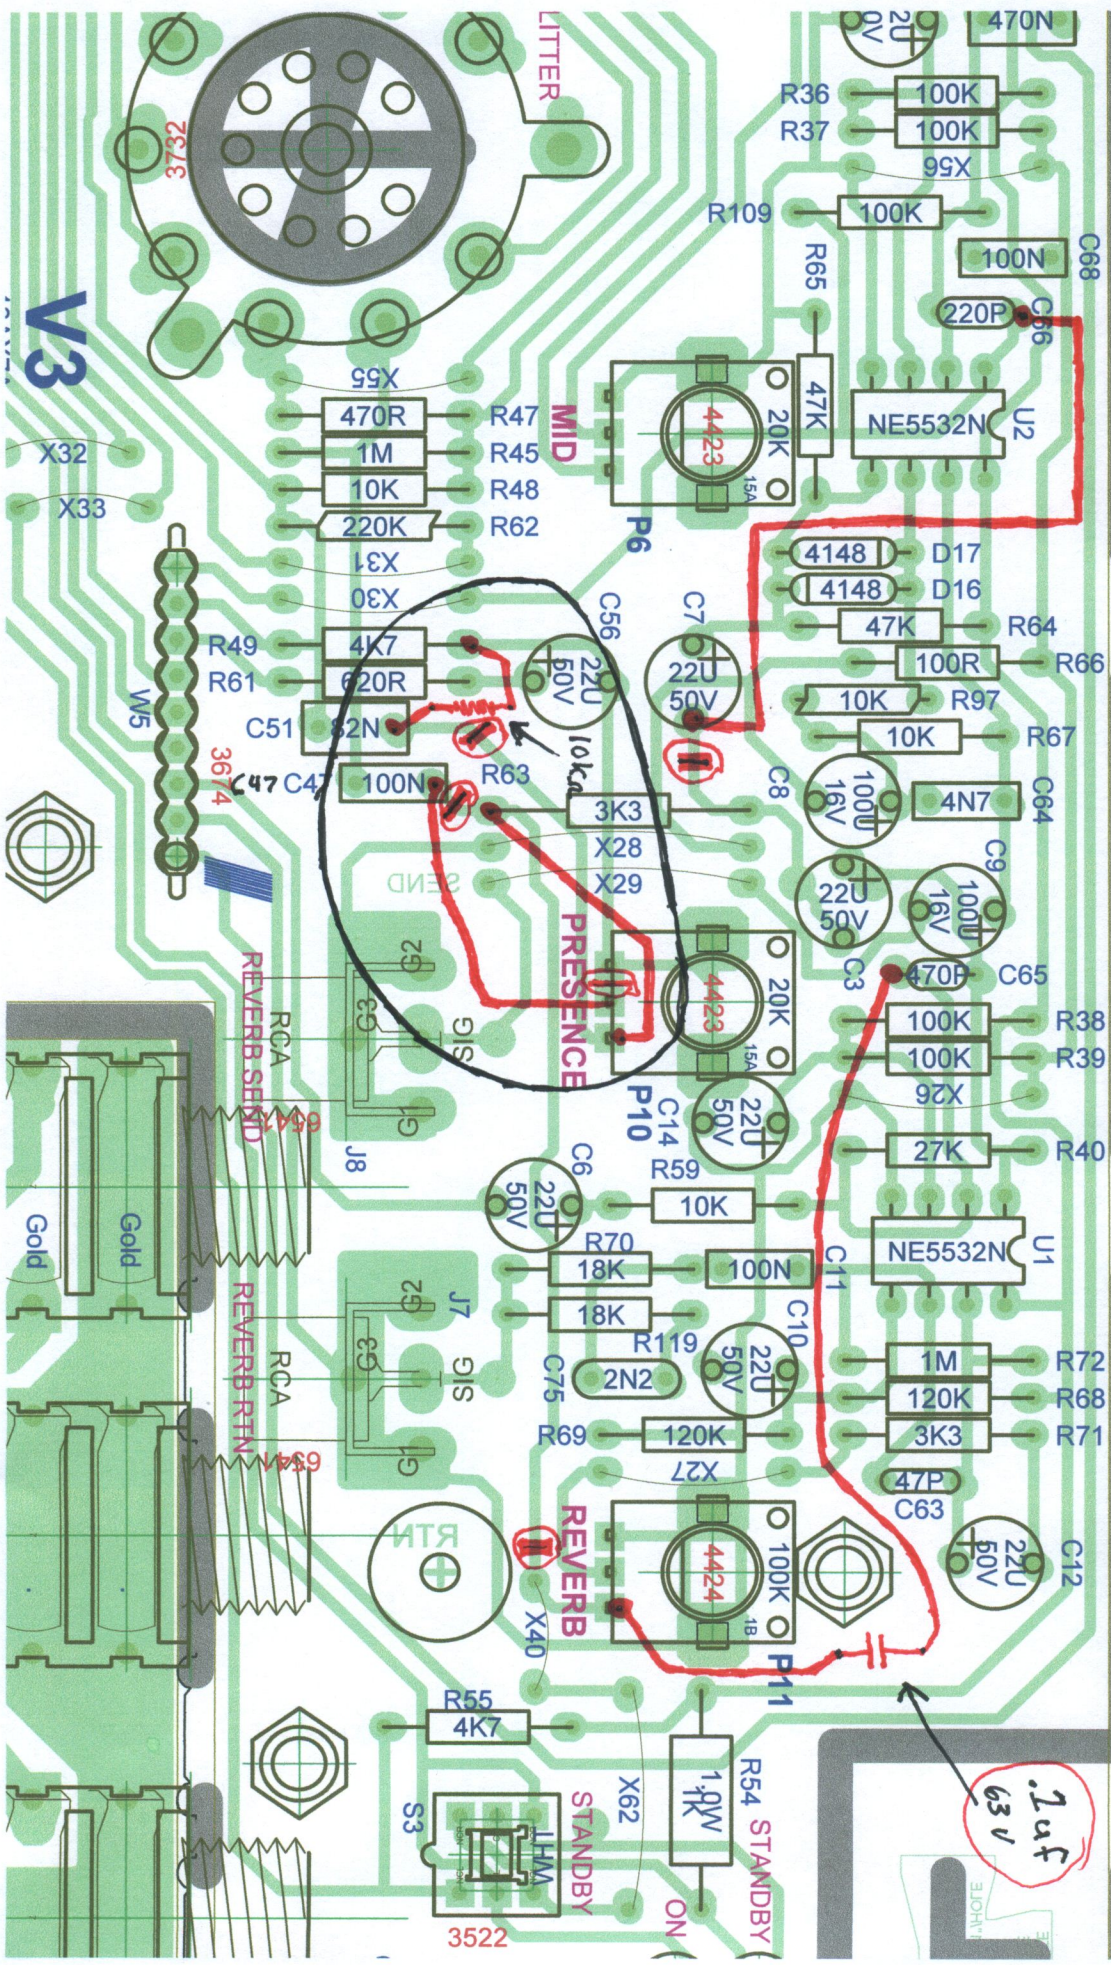

For early 2000's models