

**HOW TO ORDER PARTS**

**WHERE TO PLACE ORDER:**

Replacement parts may be ordered through any Sears Roebuck and Co. U.S.A., or Mail Order Store. Prices available upon application.

**LOCATION OF CHASSIS AND MODEL NUMBERS:**



The chassis number and model number will be found inside the cabinet.

**ORDER MUST STATE:**

1. The Part Number
2. The Part Description
3. The Chassis Number
4. The Model Number

**NOTES:**

1. VALUES OF CAPACITORS IN MFD. UNLESS OTHERWISE NOTED.
2. ALL RESISTORS ARE 1/2 WATT UNLESS OTHERWISE NOTED.

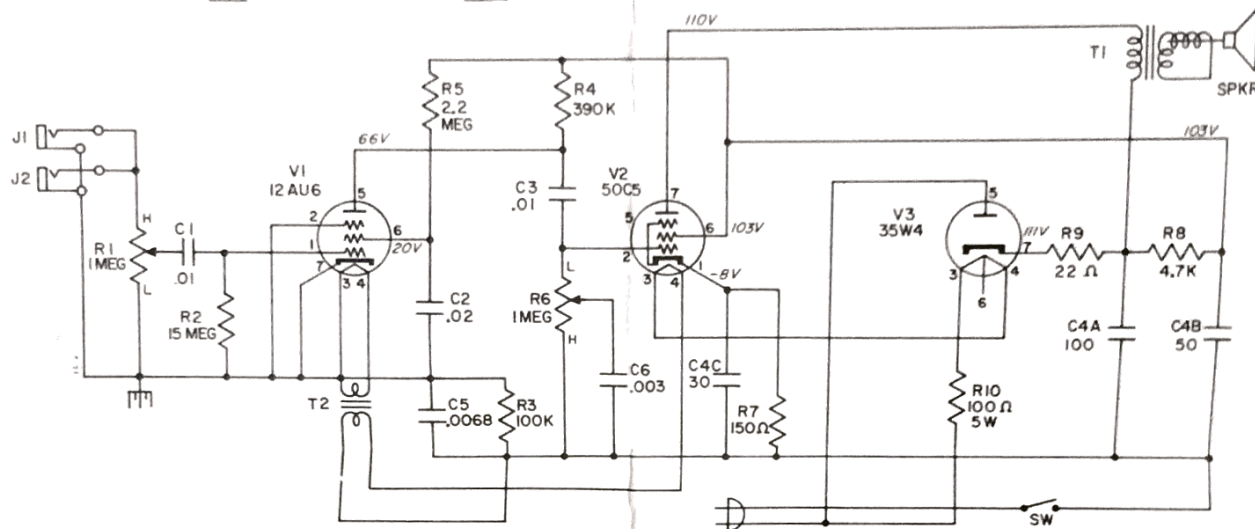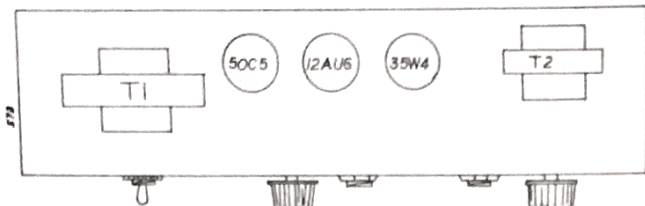

VOLTAGES MEASURED TO CHASSIS GROUND WITH V.T.V.M.

**SCHEMATIC DIAGRAM OF SILVERTONE CHASSIS 257.14203200**

**PARTS LIST**

Sch. Loc.	Part No.	Description
<b>RESISTORS</b>		
R1	122-13-1053	1 Meg Lin. Volume Control
R2	120-156222	15 Meg 1/2W 10%
R3	120-104222	100K 1/2W 10%
R4	120-394222	390K 1/2W 10%
R5	120-225222	2.2 Meg 1/2W 10%
R6	122-13-1053	1 Meg Tone Control Lin.
R7	120-151222	150 OHM 1/2W 10%
R8	120-472222	4.7K 1/2W 10%
R9	120-220322	22 OHM 1/2W 20%
R10	123-1-101	100 OHM 5W 10%
<b>CAPACITORS</b>		
C1,C3	112-1030232	.01 MFD 200V 20% Disc.
C2	112-2030232	.02 MFD 200V 20% Disc.
C5	115-6820632	.0068 MFD 600V 20% Paper Mylar - UL
C6	112-3020232	.003 MFD 200V 20% Disc.
<b>ELECTROLYTICS</b>		
C4A,B,C	119-1	100-50 MFD/150V., 30 MFD/25V

Sch. Loc.	Part No.	Description
<b>MISCELLANEOUS</b>		
T1	135-1-1	Transformer, Output
T2	135-2-2	Transformer, Isolation (Power)
	139-1	AC Line Cord
	143-1	Bushing, AC Cord Strain Relief
	142-8	Knobs
	138-1	Speaker - 8" 3.2 OHM
SW	125-1	Switch, SPST-Toggle
<b>CABINET PARTS</b>		
	152-1	Cabinet
	151-1	Back
	148-6	Baffle W/Grille Cloth
	144-1	Handle W/Hardware
	190-8	Carton W/Packing
	180-15	Owner Technical Manual
J1,J2	108-1	Jack, Input Single Circuit
V1		Tube, Voltage AMP .12 AUG
V2		Tube, Power Output 50C5
V3		Tube, Rectifier 35W4

**FILING INSTRUCTIONS**

REFER TO THE DIV. 57 AUTHORIZED PRICE LIST 257.00 FOR CURRENT SELLING PRICE, AVAILABILITY AND ORDERING INFORMATION.  
FILE THIS PAGE IN NUMERICAL ORDER BY MODEL NUMBER IN THE DIV. 57 RADIO TECHNICAL MANUAL.