



Ampeg

Chassis Assy. Drawing showing the transformer connections to the AC terminal PCB

See Table for silk screen "J" # identifiers for tab terminal connections

Note:

Table Column -0X denotes 120V 60Hz connections

Table Column -2X denotes 100V 50/60Hz connections

Table Column -3X denotes 230V 50Hz connections



Table Column -4X denotes 240V 50Hz connections

WIRE TIE LOCATIONS

F) TIE PRIMARY WIRES AS SHOWN

G) TIE ALL WIRES THAT ROUTE THRU THIS AREA

H) TIE ALL WIRES THAT ROUTE THRU THIS AREA
EXCEPT FAN WIRES

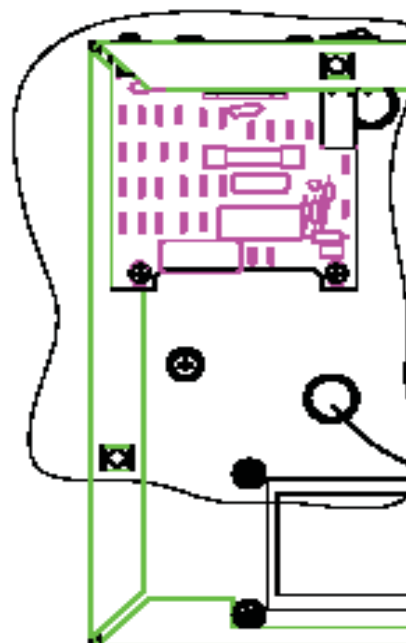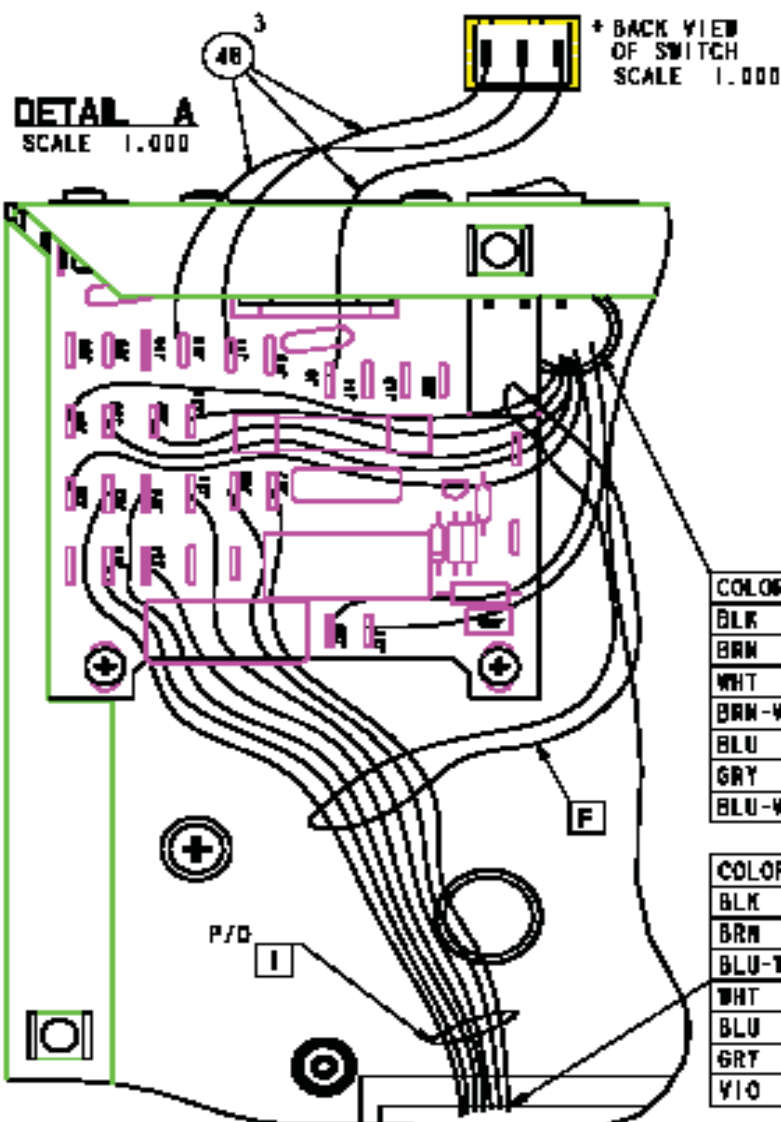

COLOR	-0X	-2X	-3X	-4X
BLK	J27	J33	J38	J27
BRN	J28	J34	J30	J30
WHT	J31	J31	J29	J29
BRN-WHT	J32	J32	J32	J32
BLU	J33	J27	J33	J33
GRY	J34	J28	J34	J34
BLU-WHT	J38	J38	J27	J38

COLOR	-0X	-2X	-3X	-4X
BLK	J17	J23	J37	J17
BRN	J18	J24	J20	J20
BLU-WHT	J37	J37	J17	J37
WHT	J21	J21	J19	J19
BLU	J23	J17	J23	J23
GRY	J24	J18	J24	J24
VIO	J22	J22	J22	J22