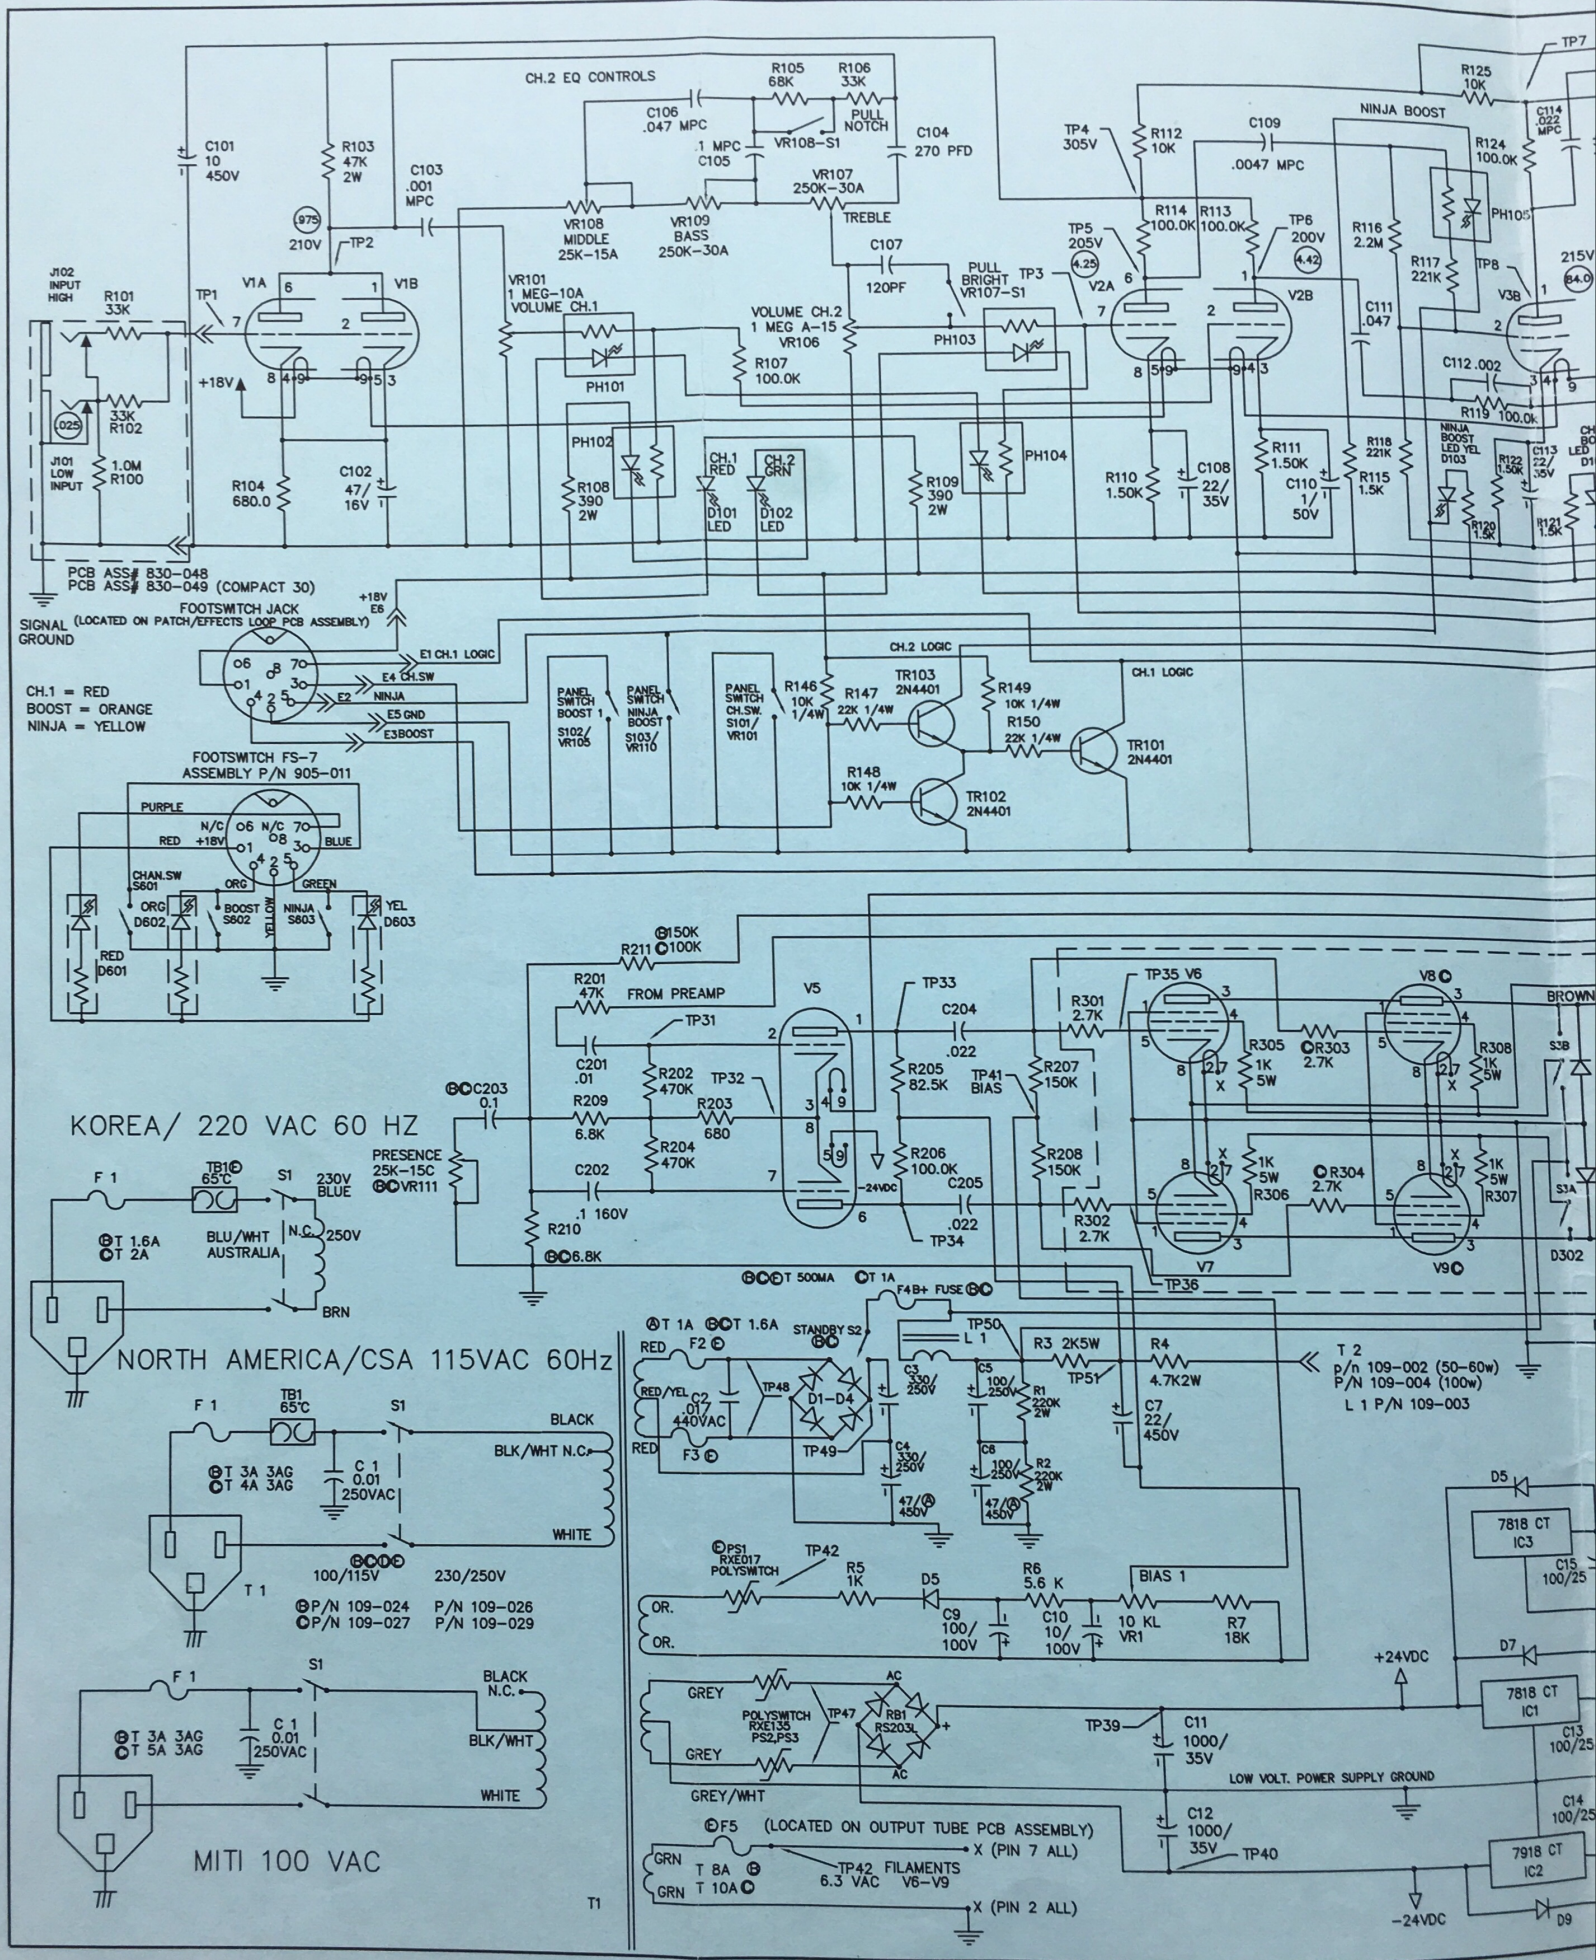
CH.2 EQ CONTROLS
NINJA BOOST
J102 INPUT HIGH
J101 LOW INPUT
PCB ASS# 830-048
PCB ASS# 830-049 (COMPACT 30)
SIGNAL GROUND (LOCATED ON PATCH/EFFECTS LOOP PCB ASSEMBLY)
FOOTSWITCH JACK
FOOTSWITCH FS-7 ASSEMBLY P/N 905-011
CH.1 = RED
BOOST = ORANGE
NINJA = YELLOW
CH.1 LOGIC
CH.2 LOGIC
VOLUME CH.1 1 MEG-10A VOLUME_CH.1
VOLUME CH.2 1 MEG A-15 VR106
PULL BRIGHT VR107-S1
PULL NOTCH VR108-S1
TREBLE
MIDDLE 25K-15A
BASS 250K-30A
PH101
PH102
PH103
PH104
D101 LED
D102 LED
NINJA BOOST LED YEL D103
FROM PREAMP
PRESENCE 25K-15C VR111
KOREA/ 220 VAC 60 HZ
NORTH AMERICA/CSA 115VAC 60Hz
MITI 100 VAC
100/115V
230/250V
P/N 109-024
P/N 109-026
P/N 109-027
P/N 109-029
T 2
p/n 109-002 (50-60w)
P/N 109-004 (100w)
L 1 P/N 109-003
F4B+ FUSE
STANDBY S2
POLYSWITCH RXE135 PS2,PS3
RXE017 POLYSWITCH
+24VDC
-24VDC
LOW VOLT. POWER SUPPLY GROUND
BIAS 1
F5 (LOCATED ON OUTPUT TUBE PCB ASSEMBLY)
TP42 FILAMENTS 6.3 VAC V6-V9
X (PIN 7 ALL)
X (PIN 2 ALL)
7818 CT IC3
7818 CT IC1
7918 CT IC2