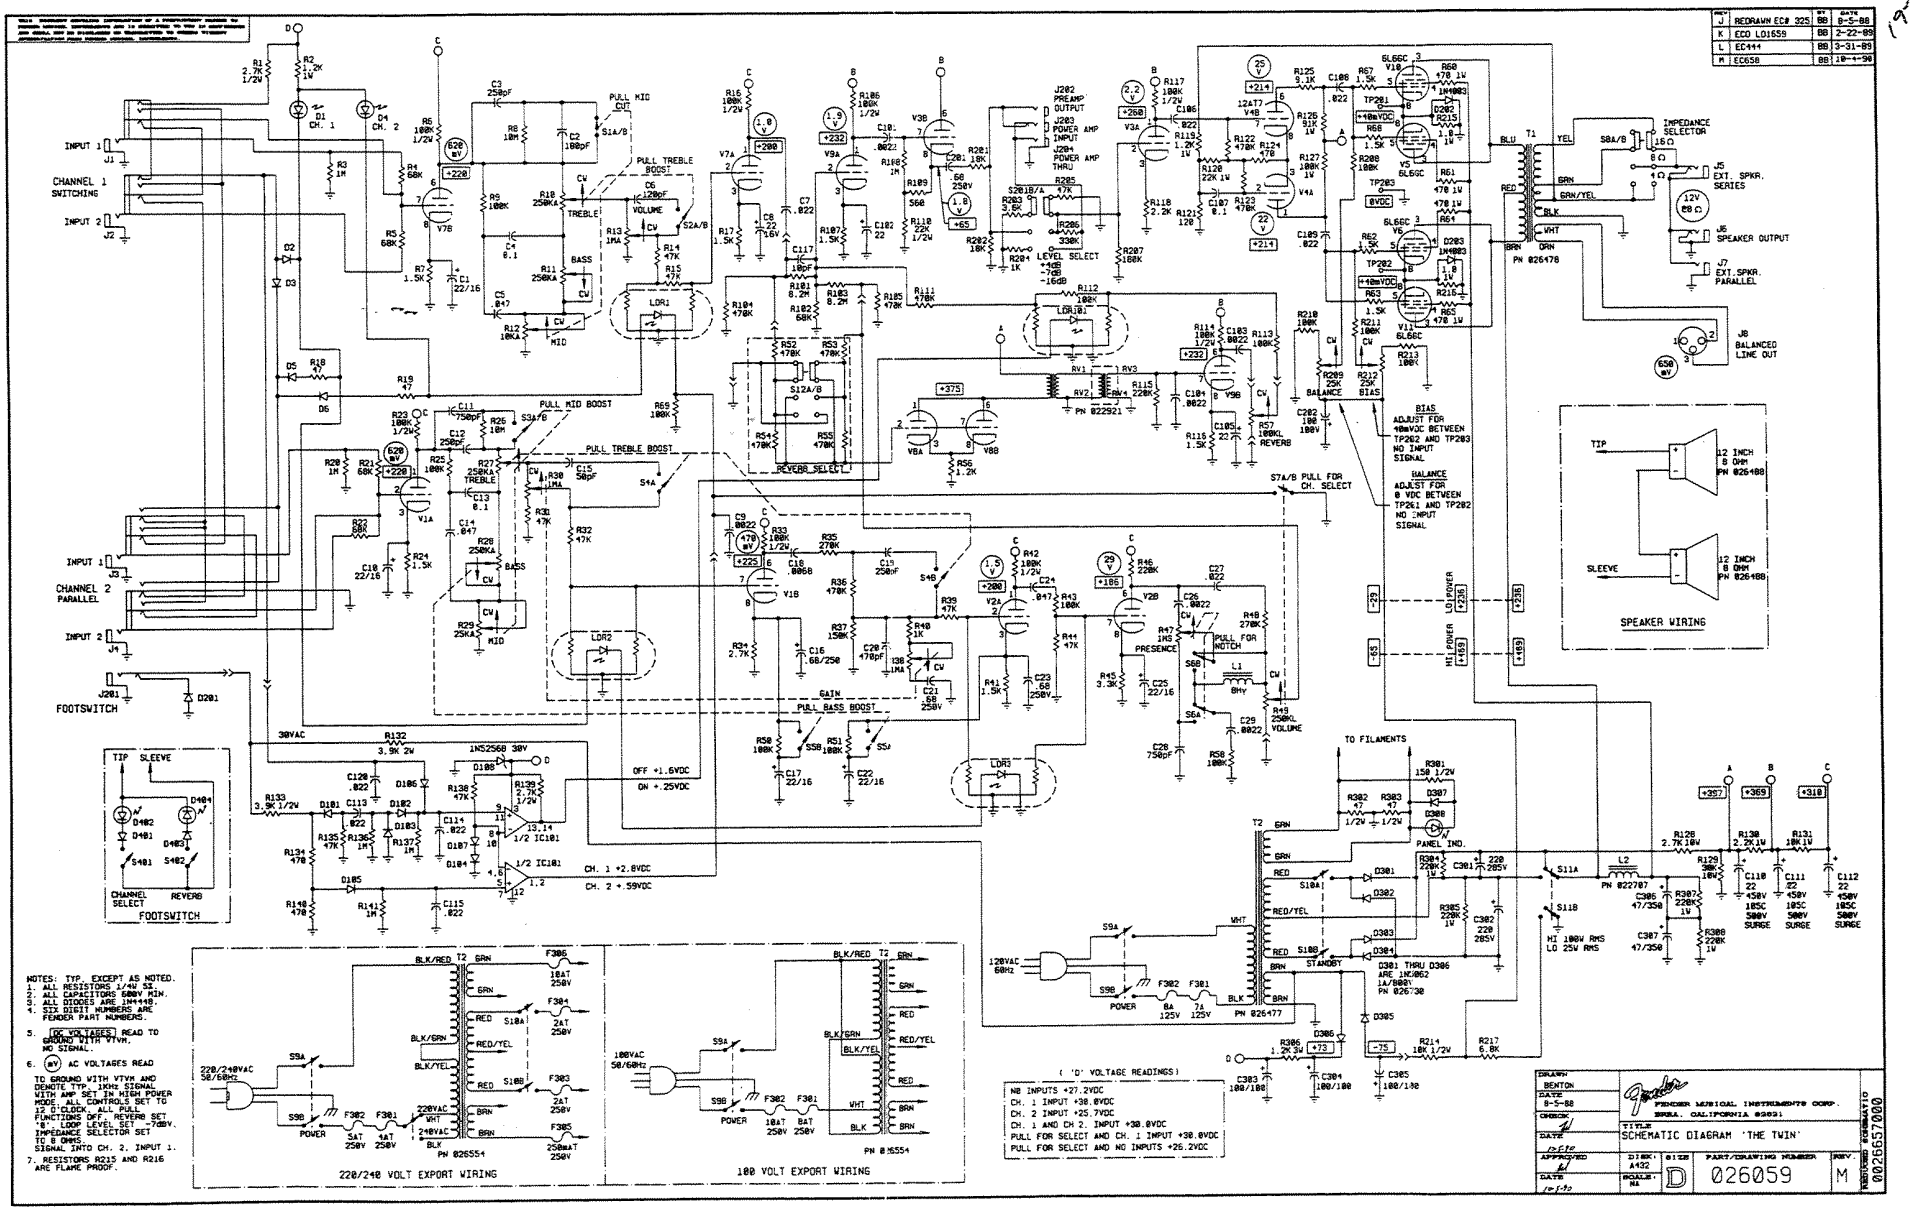
INPUT 1
CHANNEL 1 SWITCHING
INPUT 2
INPUT 1
CHANNEL 2 PARALLEL
INPUT 2
FOOTSWITCH
PULL MID CUT
PULL TREBLE BOOST
PULL MID BOOST
PULL TREBLE BOOST
PULL BASS BOOST
GAIN
PULL FOR NOTCH
PRESENCE
VOLUME
LEVEL SELECT
REVERB SELECT
S7A/B PULL FOR CH. SELECT
BIAS
ADJUST FOR 40mVDC BETWEEN TP262 AND TP203 NO INPUT SIGNAL
BALANCE
ADJUST FOR 0 VDC BETWEEN TP261 AND TP202 NO INPUT SIGNAL
J202 PREAMP OUTPUT
J203 POWER AMP INPUT
J204 POWER AMP THRU
IMPEDANCE SELECTOR
EXT. SPKR. SERIES
SPEAKER OUTPUT
EXT. SPKR. PARALLEL
BALANCED LINE OUT
12 INCH 8 OHM PN 026488
SPEAKER WIRING
TO FILAMENTS
PANEL IND.
STANDBY
POWER
HI 100W RMS LO 25W RMS
220/240 VOLT EXPORT WIRING
100 VOLT EXPORT WIRING
('D' VOLTAGE READINGS)
NB INPUTS +27.2VDC
CH. 1 INPUT +38.8VDC
CH. 2 INPUT +25.7VDC
CH. 1 AND CH 2. INPUT +38.8VDC
PULL FOR SELECT AND CH. 1 INPUT +38.8VDC
PULL FOR SELECT AND NO INPUTS +26.2VDC
FENDER MUSICAL INSTRUMENTS CORP.
BREA, CALIFORNIA 92621
SCHEMATIC DIAGRAM 'THE TWIN'
026059
M